




# HygroMATIK®

member of CAREL group

CAREL

## StandardLine

Electrode Steam Humidifier

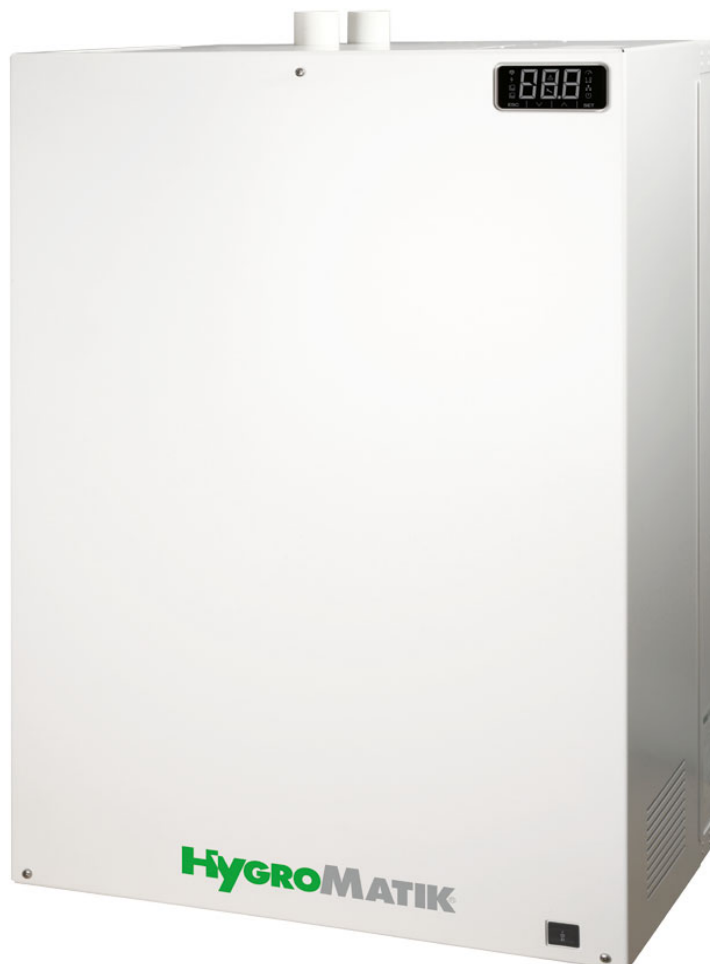

# Manual



SLE.EN  
E-8881152

---

Certain computer programs contained in this product [or device] were developed by HygroMatik GmbH ("the Work(s)").

Copyright © HygroMatik GmbH [21.08.2024]

SLE 02/05/10/15/20/30/45/65

All Rights reserved.

Current version of this manual to be found on: [www.hygromatik.com](http://www.hygromatik.com)

HygroMatik GmbH grants the legal user of this product [or device] the right to use the Work(s) solely within the scope of the legitimate operation of the product [or device]. No other right is granted under this licence. In particular and without prejudice to the generality of the foregoing, the Work(s) may not be used, sold, licensed, transferred, copied or reproduced in whole or in part or in any manner or form other than as expressly granted here without the prior written consent of HygroMatik GmbH.

Information in this manual is subject to change or alteration without prior notice.

## **⚠ WARNING**

### **Risk of electrical shock!**

Hazardous electrical voltage!

All electrical work to be performed by certified expert staff (electricians or expert personnel with equivalent training) only.

---

|   |           |
|---|-----------|
| <b>1. Introduction</b>  | <b>6</b>  |
| 1.1 Typographic Distinctions                                      | 6         |
| 1.2 Documentation   | 6         |
| 1.3 Symbols in Use  | 6         |
| 1.3.1 Specific Symbols related to Safety Instructions             | 6         |
| 1.3.2 General Symbols   | 6         |
| 1.4 Intended Use  | 7         |
| <b>2. Safety Instructions</b>                                     | <b>8</b>  |
| 2.1 Guidelines for Safe Operation                                 | 8         |
| 2.1.1 Scope   | 8         |
| 2.1.2 Unit control  | 8         |
| 2.1.3 Unit Operation  | 8         |
| 2.1.4 Mounting, dismantling, maintenance and repair of the unit   | 9         |
| 2.1.5 Electrical  | 9         |
| <b>3. Transport</b>   | <b>10</b> |
| 3.1 Overview  | 10        |
| 3.2 Packing   | 10        |
| 3.3 Interim Storage   | 10        |
| 3.4 Check for Complete and Correct Delivery of Goods              | 10        |
| <b>4. Functional Description and Device Composition</b>           | <b>11</b> |
| 4.1 Mode of Action  | 11        |
| 4.2 Mechanical Construction                                       | 11        |
| 4.3 Operating sequence  | 12        |
| <b>5. Mechanical installation</b>                                 | <b>13</b> |
| 5.1 Environment Parameters to be met and Mounting Recommendations | 13        |
| 5.1.1 Dimensions and Mounting Directions                          | 14        |
| 5.2 Unit Installation Check                                       | 16        |
| 5.3 Steam line and condensate hose layout                         | 17        |
| 5.3.1 Guide lines for steam line design                           | 17        |
| 5.3.2 Condensate recirculation                                    | 18        |
| 5.4 Steam Manifold  | 19        |
| 5.4.1 General installation guidelines                             | 19        |
| 5.4.2 Recommendations for dimensioning                            | 20        |
| 5.5 Absorption Distance BN  | 22        |
| 5.5.1 Determining the Absorption Distance                         | 22        |
| 5.5.2 Absorption Distance Nomogram                                | 23        |
| <b>6. Water connection</b>  | <b>24</b> |
| 6.1 Feed water quality  | 24        |
| 6.2 Water supply  | 25        |
| 6.3 Water discharge   | 26        |
| 6.4 Water connections final check                                 | 27        |
| <b>7. Electrical connection</b>                                   | <b>28</b> |
| 7.1 Electrical installation approach                              | 28        |

---

|   |           |
|---|-----------|
| 7.2 Cable connections .....   | 29        |
| 7.3 Safety interlock .....  | 29        |
| 7.4 Control signal .....  | 30        |
| 7.4.1 1-step operation .....  | 30        |
| 7.4.2 Operation with an active humidity sensor or external controller .....             | 30        |
| 7.4.3 Wiring for control signal and safety (interlock) system for multiple units .....  | 30        |
| 7.5 Wiring diagram .....  | 31        |
| 7.6 Electrical installation check list .....  | 31        |
| <b>8. Commissioning .....</b>   | <b>32</b> |
| <b>9. Maintenance .....</b>   | <b>33</b> |
| 9.1 General .....   | 33        |
| 9.1.1 Safety instructions for maintenance .....   | 33        |
| 9.2 Maintenance frame work .....  | 34        |
| 9.3 Maintenance steps .....   | 35        |
| 9.3.1 Removal of the steam cylinder .....   | 35        |
| 9.3.2 Cylinder cleaning / O-ring replacement .....                                      | 36        |
| 9.3.3 Cleaning the connecting hoses, base connections, fine filter and drain pump ..... | 38        |
| 9.3.4 Cleaning the vent hole on the pipe elbow .....                                    | 38        |
| 9.3.5 Reinstallation of the steam cylinder .....  | 39        |
| 9.4 Removal and installation of unit components .....                                   | 40        |
| 9.4.1 Blow-down pump (removal, cleaning, reinstallation) .....                          | 40        |
| 9.4.2 Solenoid valve (removal, reinstallation) .....                                    | 41        |
| 9.4.3 Electrode replacement .....   | 41        |
| 9.5 Leak test .....   | 43        |
| 9.6 Functional check .....  | 43        |
| 9.7 Finishing maintenance .....   | 43        |
| <b>10. Dismantling .....</b>  | <b>44</b> |
| <b>11. Unit Control .....</b>   | <b>45</b> |
| 11.1 General description .....  | 45        |
| 11.2 Safety interlock .....   | 46        |
| 11.3 Control signal .....   | 46        |
| 11.3.1 1-step operation .....   | 46        |
| 11.3.2 Operation with an active humidity sensor or external controller .....            | 47        |
| 11.3.3 Wiring for control signal and safety (interlock) system for multiple units ..... | 47        |
| 11.4 Wiring Diagrams SLE .....  | 48        |
| 11.4.1 Mainboard inputs and outputs .....   | 52        |
| 11.5 Control operation .....  | 53        |
| 11.5.1 Principal user guidance .....  | 53        |
| 11.5.2 Menu structure .....   | 53        |
| 11.5.3 Menu tree .....  | 54        |
| 11.6 The control panel .....  | 55        |
| 11.7 Navigation within a menu .....   | 56        |
| 11.8 Tabular representation of reading value list and provider level submenus .....     | 57        |
| 11.8.1 The reading value list .....   | 57        |

---

---

|  |           |
|--|-----------|
| 11.8.2 Provider level submenus and relating parameters .....                   | 58        |
| 11.9 Exemplary variation of a parameter setting .....                          | 61        |
| 11.10 Detailed description of the user level reading values and settings ..... | 62        |
| 11.11 Detailed parameter descriptions .....                                    | 66        |
| <b>12. Trouble shooting .....</b>  | <b>71</b> |
| 12.1 Error handling .....  | 71        |
| 12.1.1 Table of possible faults and related error codes .....                  | 71        |
| 12.2 Table of functional disruptions .....                                     | 77        |
| <b>13. Declaration of Conformity .....</b>                                     | <b>80</b> |
| <b>14. Spare Parts .....</b>   | <b>81</b> |
| <b>15. Technical specifications .....</b>                                      | <b>84</b> |
| <b>16. Exploded view .....</b>   | <b>85</b> |
| <b>17. View of housing .....</b>   | <b>86</b> |

---

# 1. Introduction

## Dear Customer,

Thank you for choosing a HygroMatik steam humidifier.

HygroMatik steam humidifiers represent the latest in humidification technology.

In order to operate your HygroMatik steam humidifier safely, properly and efficiently, please read these operating instructions.

Employ your steam humidifier only in sound condition and as directed. Consider potential hazards and safety issues and follow all the recommendations in these instructions.

If you have additional questions, please contact your expert dealer.

For all technical questions or spare parts orders, please be prepared to provide unit type and serial number (see name plate on the unit).

## 1.1 Typographic Distinctions

- preceded by a bullet: general specifications
- » preceded by an arrow: Procedures for servicing or maintenance which should or must be performed in the indicated order
- ☑ Installation step which must be checked off.
- italics* Terms used with graphics or drawings

## 1.2 Documentation

### **Please note**

In addition to this manual, the appropriate FlexLine Control documentation is mandatory for the operation of the unit. This is not applicable to StandardLine devices, here the documentation of the controller is included in the operation manual.

## Retention

Please retain these operating instructions in a secure, always accessible location. If the product is resold, turn the documentation over to the new operator. If the documentation is lost, please contact HygroMatik.

## Versions in Other Languages

These operating instructions are available in several languages. If interested, please contact HygroMatik or your HygroMatik dealer.

## 1.3 Symbols in Use

### 1.3.1 Specific Symbols related to Safety Instructions

According to ANSI Z535.6 the following signal words are used within this document:

#### **⚠ DANGER**

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

#### **⚠ WARNING**

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

#### **⚠ CAUTION**

CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

#### **NOTICE**

NOTICE is used to address practices not related to physical injury.

### 1.3.2 General Symbols


#### **Please note**

This symbol is used whenever a situation requires special attention beyond the scope of safety instructions.

## 1.4 Intended Use

HygroMatik electrode steam humidifiers serve for steam production based on tap water or partially softened water.

**Only use supply water featuring a conductivity of 125 to 1250  $\mu\text{S}/\text{cm}$ .**

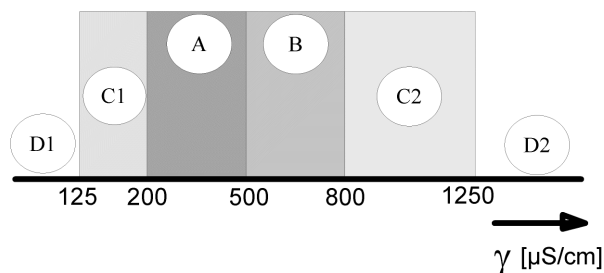

D1: Lower threshold

C1: Range of reduced conductivity  
(adjustment required)

A: Normal Tap water

B: Range of increased conductivity

C2: Range of high conductivity  
(adjustment required)

D2: Upper threshold

In the C1 and C2 ranges, adaptation of the periodic blow-down frequency may be required. Pls. refer to parameter „2-1“ and „2-2“ explanations given in the „Detailed parameter descriptions“ section.

The following applies to the **StandardLine** device series: Please read the explanations of parameters "2-1" and "2-2" in the section "Detailed parameter descriptions" in this manual.

Proper usage also comprises the adherence to the conditions specified by HygroMatik for:

- installation
- dismantling
- reassembly
- commissioning
- operation
- maintenance
- disposal.

Only qualified and authorised personnel may operate the unit. Persons transporting or working on the unit must have read and understood the corresponding parts of the Operation and Maintenance Instructions and especially the chapter 2. „Safety Notes“. Additionally, operating personnel must be informed of any possible dangers. You should place a copy of the Operation and Maintenance Instructions at the unit's operational location (or near the unit).

**By construction, HygroMatik steam humidifiers are not qualified for exterior application.**

### **⚠ WARNING**

#### **Risk of scalding!**

Steam with a temperature of up to 100 °C (212° F) is produced.

Do not inhale steam directly!

### **NOTICE**

When using feed water with a chloride content above 30mg/l, we recommend the use of galvanised electrodes to prevent the electrodes from burning out too quickly.

---

## 2. Safety Instructions

These safety instructions are required by law. They promote workplace safety and accident prevention.

### 2.1 Guidelines for Safe Operation

#### 2.1.1 Scope

Comply with the accident prevention regulation „DGUV Regulation 3“ to prevent injury to yourself and others. Beyond that, national regulations apply without restrictions. This way you can protect yourself and others from harm.

#### 2.1.2 Unit control

Do not perform any work which compromises the safety of the unit. Obey all safety instructions and warnings present on the unit.

In case of a malfunction or electrical power disruption, switch off the unit immediately and prevent a restart. Repair malfunctions promptly.

#### **⚠ WARNING**

##### **Restricted use.**

IEC 60335-1 stipulates as follows:

This device may be used by children of eight years of age and above as well as by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge so long as they are supervised or have been instructed regarding the safe use of the device and understand the hazards that may result from it. Cleaning and user maintenance of the unit must not be undertaken by children without supervision.

**The following applies to the HygroMatik installation kits:**

#### **Please note**

Ensure that the system/machine in which the HygroMatik installation kit will be installed fully complies with the provisions of the directives (2006/42/EC) and the EMC directive 2014/30/EU and that all safety-relevant functions have been implemented in the control system.

#### 2.1.3 Unit Operation

#### **⚠ WARNING**

##### **Risk of scalding!**

Uncontrolled hot steam escape in case of leaking or defective components possible.

Switch off unit immediately.

#### **⚠ WARNING**

##### **For Ministeam devices applies:**

##### **Risk of scalding!**

No persons may be under the cloud of steam blowing out (at a distance of approx. 1 m/40 inch in the direction of blowing out and 0.5 m/20 inch on both sides of the device).

#### **NOTICE**

##### **Risk of material damage!**

- The unit may be damaged if switched on repeatedly following a malfunction without prior repair. Rectify defects immediately!
- The unit must not be operated on a DC power supply.
- The unit may only be used connected to a steam pipe that safely transports the steam (not valid for MiniSteam units).
- Regularly check that all safety and monitoring devices are functioning normally. Do not remove or disable safety devices.
- Steam operation is only allowed when the unit cover is closed.

#### **NOTICE**

##### **Water leaks caused by defective connections or malfunctions are possible.**

Water is constantly and automatically filled and drained in the humidifier. Connections and water-carrying components must be checked regularly for correct operation.



---

### 2.1.4 Mounting, dismantling, maintenance and repair of the unit

#### **NOTICE**

The HygroMatik steam humidifier is IP20 protected. Make sure that the unit is not object to dripping water in the mounting location.

Installing a humidifier in a room without water discharge requires safety devices to protect against water leakages.

- 
- Use genuine spare parts only
  - After any repair work, have qualified personnel check the safe operation of the unit
  - Attaching or installing of **additional components** is permitted only with the **written consent** of the manufacturer

#### **NOTICE**

Do not install HygroMatik steam generators above electrical equipment such as fuse boxes, electrical appliances, etc. In the case of a leakage, leaking water can damage the underlying electrical equipment

### 2.1.5 Electrical

#### **⚠ WARNING**

##### **Risk of electrical shock!**

Hazardous electrical voltage!

Any work on the electrical system to be performed by certified expert staff (electricians or expert personnel with comparable training) only.

Steam operation may only be started when the unit cover is closed.

During maintenance or installation work, the device must be disconnected from the power supply and secured against being switched on again. The absence of voltage must be ensured by a measurement.

Leaks can cause leakage currents. Observe safety regulations on working with voltage parts (applies to electrode steam humidifiers).

After electrical installation or repair work, test all safety mechanisms (such as grounding resistance).

#### **NOTICE**

Use only original fuses with the appropriate amperage rating.

Regularly check the unit's electrical equipment. Promptly repair any damage such as loose connections or burned wiring.

Responsibility for intrinsically safe installation of the HygroMatik steam humidifiers is incumbent on the installing specialist company.

---

---

## 3. Transport

### 3.1 Overview

#### **Please note**

Proceed carefully when transporting the steam humidifier in order to prevent damage due to stress or careless loading and unloading.

---

### 3.2 Packing

#### **Please note**

Pay attention to the icons affixed to the packing box.

---

### 3.3 Interim Storage

Store the unit in a dry place and protect from frost and strong sunlight.

### 3.4 Check for Complete and Correct Delivery of Goods

Upon receipt of the unit, confirm that:

- model and serial number on the name plate match those specified in the order and delivery documents
- the equipment is complete and all parts are in perfect condition

#### **Please note**

In case of damage from shipment and/or missing parts, immediately notify the carrier or supplier in writing. Time limits for filing

---

freight claims with shipping companies are\*:

| Shipping company | After receipt of goods |
|------------------|------------------------|
| Carriers         | no later than 4 days   |
| Parcel service   | immediately            |

\* Time limits for some services subject to change.

## 4. Functional Description and Device Composition

### 4.1 Mode of Action

#### Making use of the frictional heat caused by current flow in a water tank

The HygroMatik humidifier utilizes the conductivity normally present in tap water for steam production. Electrodes inside an enclosed steam cylinder are immersed directly into the tap water. They are connected to the alternating current.

The conductivity of the water generates an electric current between the electrodes. In this way, the electric power supplied is converted directly into heat without energy loss. The steam produced has a temperature of about 100°C (212°F) with minimal excess pressure ("pressureless steam"). It is largely free of minerals and germ-free. Mineral deposits typically remain behind in the cylinder.


### 4.2 Mechanical Construction

The StandardLine humidifiers are designed for wall mounting. For maintenance purposes, the steam cylinders are separable in the middle.

#### Please note

Starting with the manufacturing date of 11/2018, the steam humidifiers SLE45 and SLE65 make use of a modified steam cylinder that are separable in the upper part of the wall. When replacing the steam cylinder, the new cylinders with the designation „CY45/2“ may be incorporated in the older units as well. With the steam cylinder modification also the electrodes have changed. The new electrodes only fit in the new steam cylinders.

The cylinders CY45/2 allow for unit operation without a cylinder star even in case of high conductivity of the cylinder water.

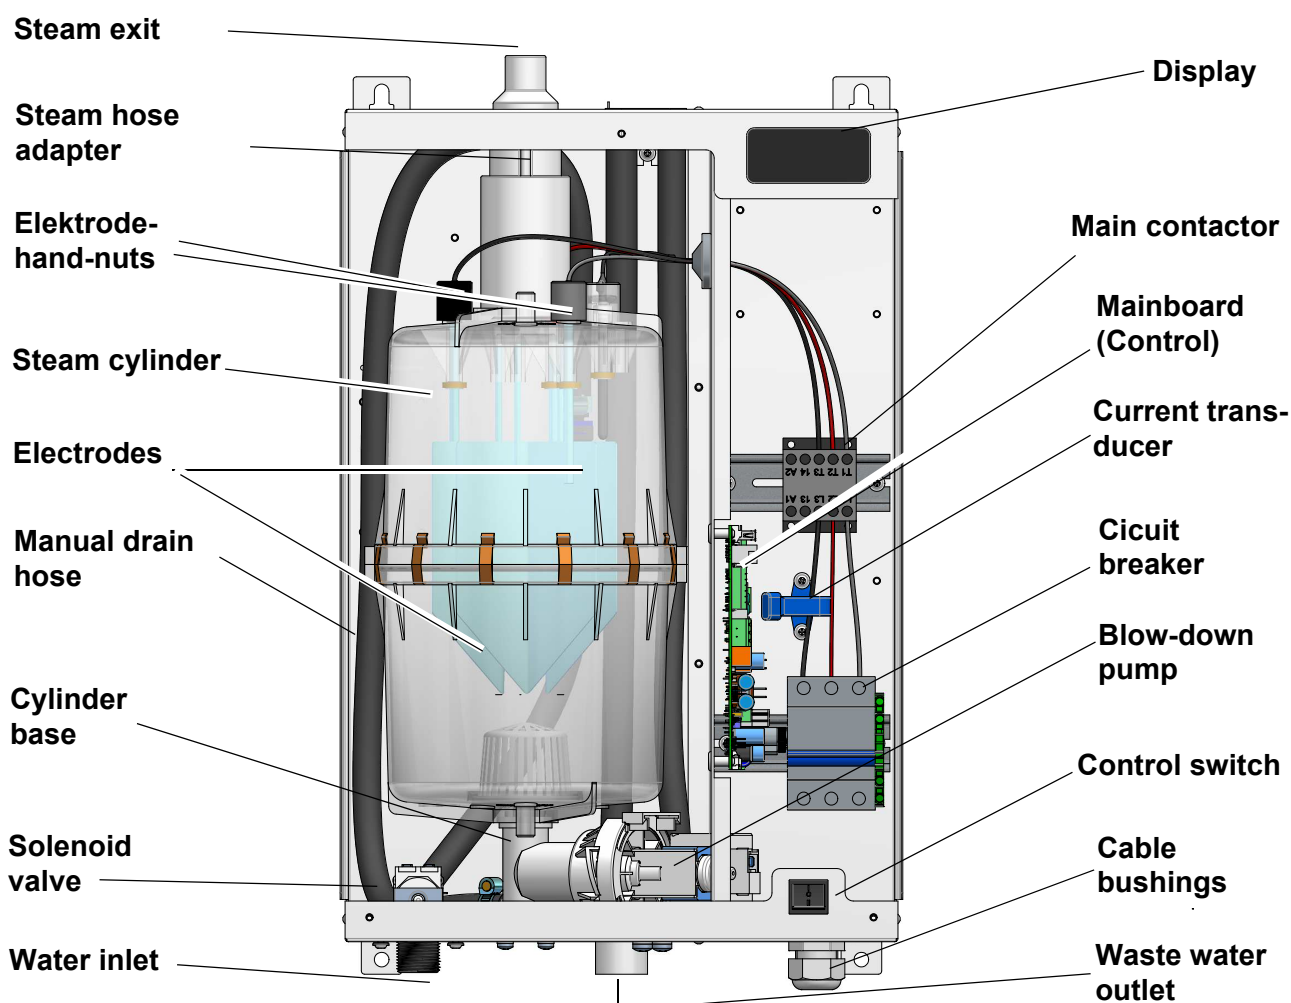

---

### 4.3 Operating sequence

By pressing the control switch („Pos. I“) the humidifier is turned on. When the controller specifies an increase in humidity, the main contactor is switched on and the electrodes (48\*) are supplied with power. The water inlet solenoid valve (25\*) feeds water into the steam cylinder (16\*).

As soon as the electrodes are immersed, the current begins to flow. The water is now heated. When the pre-selected output is reached, the control turns off the solenoid valve and interrupts the water supply.

After a short period of heating up, the water between the electrodes starts boiling and then vaporizes. The vaporization lowers the water level in the steam cylinder, reducing the output provided. To compensate for that, fresh water is fed into the steam cylinder every now and then by opening the intake solenoid valve.

Humidifier power usage is continuously monitored. With a cold start-up, the nominal current increases to 113 % in order to achieve quick-start output parameters. This activates the electronic overflow limiter which causes a partial draining of the cylinder. This reduces the immersed surface area of the electrodes, lowering power usage.

The concentration of dissolved salts increases over time, which can lead to a rise in the conductivity of the water. If this continues, conductivity may increase until a short circuit occurs. This could damage the unit, but in any case would significantly reduce the life span of the electrodes.

For this reason, regular, periodic blow-downs of some of the concentrated water are very important. Following this procedure as recommended provides stable cylinder water conductivity as well as minimal water loss for the expected service life of the cylinder.

Water blow-down is performed by a blow-down pump (32\*). The functioning of the blow-down pump is continuously monitored during operation. If the pump is damaged, the steam humidifier shuts down.

With normal water quality the blow-down loss rate lies between 7 and 15 % of the amount of steam produced. Depending on water quality, a full steam cylinder blow-down is run every 3 to 8 days.

Mineral deposits settle in the open area below the electrodes and are removed through periodic maintenance. The blow-down pump itself has wide openings and can flush out smaller pieces of mineral deposit. This extends the service life of the unit and reduces the required maintenance interval.

On blow-down, water flows from the pump into the drainage system.

For maintenance purposes, the cylinder water may be pumped out by pressing and holding the control switch in the „II“ position.

#### Monitoring max. level

A sensor electrode (10\*) monitors the maximum water capacity of the cylinder. When the water level reaches the sensor electrode, the water supply is interrupted. This can occur when the water has low conductivity or when the electrodes are worn out. In the case of low water conductivity, however, this state usually lasts only a short time. Used electrodes must be replaced so that the nominal power is reached again. The built-in control and the large area electrodes combine to produce a rapid rise in conductivity by increasing the concentration of the water.

\*) numbers indicated correspond with those in the exploded view in the „Exploded view“ chapter.

---

## 5. Mechanical installation

### **⚠ WARNING**

#### **Risk of foot injuries!**

Prevent unit from dropping during installation!  
Helping hand of a second person is advisable.

---

### **⚠ WARNING**

#### **Risk of electrical shock!**

Hazardous electrical voltage.  
During installation, the unit must be disconnected from power supply and secured against being switched on again. The absence of voltage must be ensured by a measurement.

---

### 5.1 Environment Parameters to be met and Mounting Recommendations


When selecting the installation site for the steam humidifier, take the following into account:

- The minimum clearances indicated in the fitting measures section must be observed in order to ensure adequate unit ventilation and allow for unobstructed access in case of maintenance
- Protection class IP20
- By design, HygroMatic steam humidifiers are not qualified for outdoor installation (electronical components and water-bearing parts may be damaged)
- Ambient temperature must lie between +5 and +40 °C (+41 and +104 °F) in order to protect the unit electronics against damage; frost may damage the steam cylinder and the solenoid valve, as well as make hoses burst.
- Relative humidity must not exceed 80 % r.h., since values beyond may lead to electronic malfunction or damage
- Installation in a closed room requires aeration and, eventually, temperature conditioning in order to meet the a.m. environmental conditions
- The steam humidifier should be installed as close as possible to the steam manifold. Optimum performance is only guaranteed when steam and condensate hoses are kept short
- Make use of existing water connections for supply and draining
- Hoses must be laid at a consistent 5 to 10 % incline/decline; sagging and kinking prevention is a must
- Mount the unit on a stable, preferably solid wall offering the bearing capacity required (s. unit technical specifications). If such a wall is not at hand, the unit may be attached to a stand bracket firmly bolted to the floor
- For proper functioning of the level control, plumb and level installation of the unit is required
- The steam humidifier rear panel heats up during operation to a maximum of 70 °C (158 °F). Take care that the construction on which the unit is to be mounted is not made of temperature-sensitive material

## 5.1.1 Dimensions and Mounting Directions

Table of dimensions


| Model       | X [mm/inch] | Y [mm/inch] | Z [mm/inch] | A [mm/inch] | B[mm/inch] |
|-------------|-------------|-------------|-------------|-------------|------------|
| SLE 02      | 350/~13.8   | 375/~14.8   | 245/~9.6    | 295/~11.6   | 372/~14.7  |
| SLE05-SLE10 | 350/~13.8   | 535/~21     | 245/~9.6    | 295/~11.6   | 535/~21    |
| SLE15-SLE30 | 425/~16.7   | 695/~27.4   | 320/~12.6   | 370/~14.6   | 695/~27.4  |
| SLE45-SLE65 | 590/~23.2   | 790/~31.1   | 415/~16.3   | 535/~21     | 787/~31    |

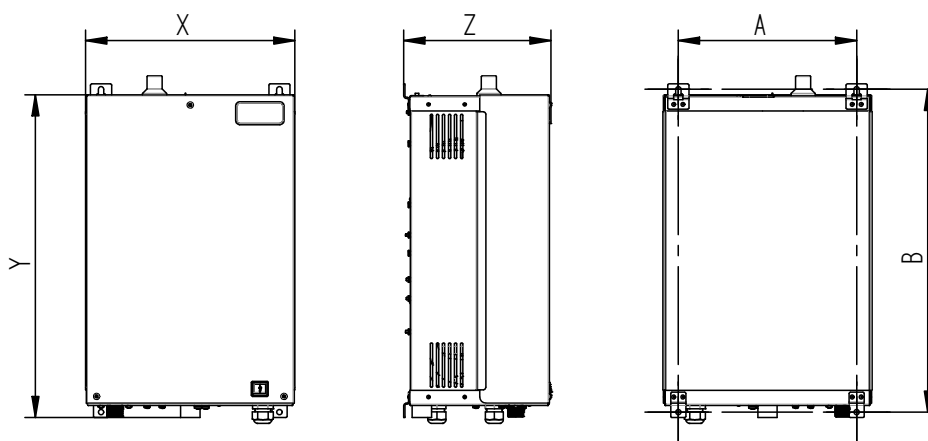

Detailed measurements under

<https://www.hygromatik.com/files/pdf/hygromatik-standardline-dimensionsv11.pdf>

3D models under <https://www.hygromatik.com/en/downloads>

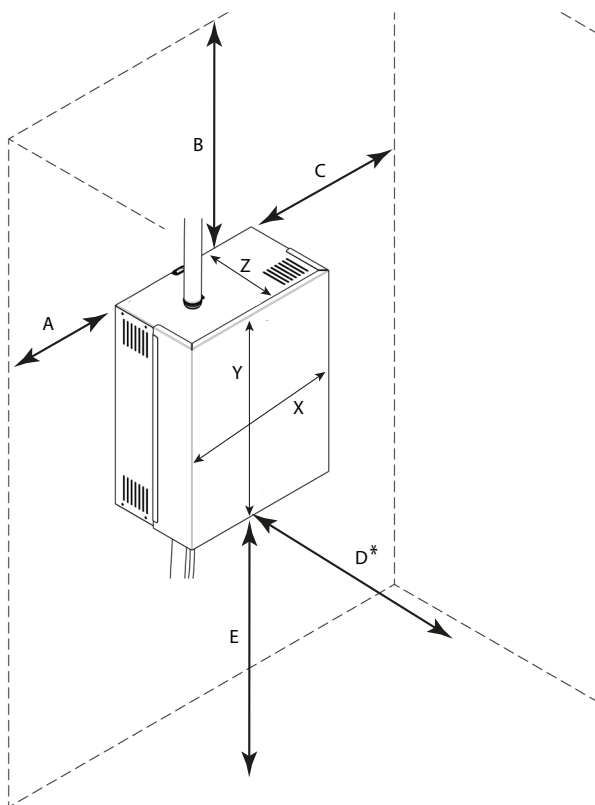


### Wall clearances

When mounting the steam humidifier, the wall clearances shown in the fig. below must be obeyed::

|   |                   |
|---|-------------------|
| A | 5 cm / 2,0 inch   |
| B | 50 cm / 19,7 inch |
| C | 20 cm / 7,8 inch  |
| D | 60 cm / 23,6 inch |
| E | 30 cm / 11,8 inch |

\* distance to designated paths

## Mounting principle

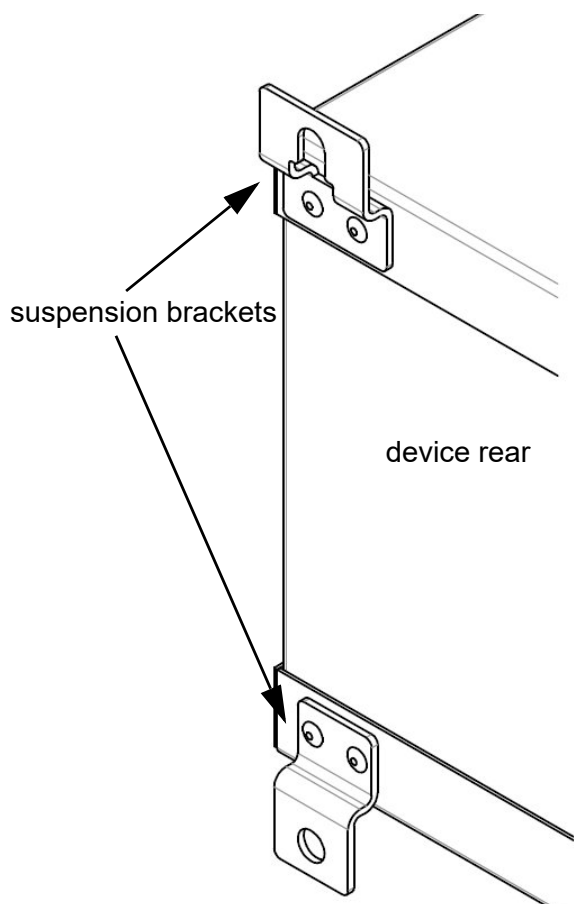


For wall mounting drill measures, please consult the table above (measure A). In case of no suitable wall available for mounting the unit, it is recommended that installation is made on brackets firmly anchored in the floor.

- » mark the holes for the upper suspension brackets screws.
- » drill holes and dowel.
- » screw in the supplied mounting screws; let the screws protrude approx. 12 mm/.5 inch from wall.
- » ensure firm fixation and load-carrying capacity of the mounted screws! hook in the unit and ensure safe suspension.
- » mark the holes for the lower suspension brackets screws.
- » remove the unit.
- » drill holes and dowel.
- » hook in the unit and mount the lower screws firmly.

### Please note

- To function properly, the steam humidifier must hang level and plumb.
- When choosing the installation location, consider the necessary distance between the unit and existing designated paths. This should be at least 60 cm.
- The mounting wall must be made of a temperature-resistant material, as the enclosure can heat up to 70°C.

### Device connections:

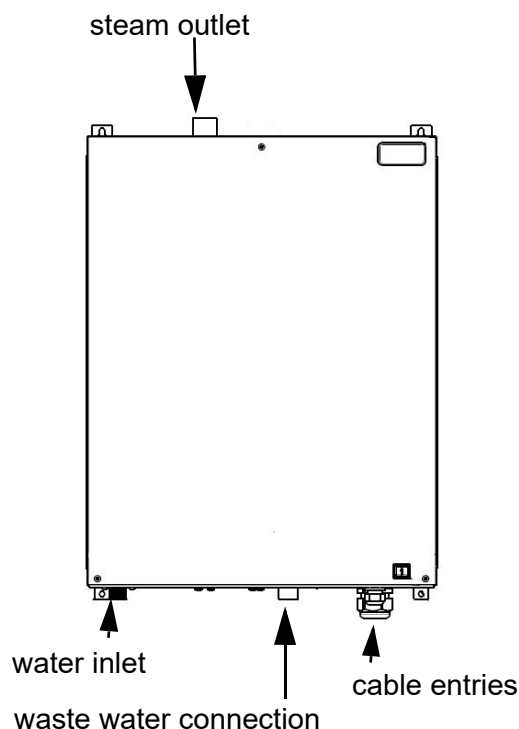

---

## 5.2 Unit Installation Check

Before start-up, pls. check proper unit installation following the list below:

- ☒ Unit perpendicularly aligned in both the vertical and horizontal axis ?
- ☒ All clearances obeyed?
- ☒ Steam hose installed with a 5 - 10 % minimum incline/decline (see chapter "Steam line") ?
- ☒ Condensate hose features a loop functioning as a steam barrier (see chapter „Condensate hose“) ?
- ☒ Steam manifold(s) properly positioned?
- ☒ All bolts and clamps properly tightened?
- ☒ Steam manifold(s) horizontally mounted and suspended on the free end, if required ?
- ☒ All seals (o-rings) in place?
- ☒ All ventilation slots on housing top unobscured?



## 5.3 Steam line and condensate hose layout


### Please note

Because of the high requirements on hose material under the operating conditions given, it is recommended to use genuine HygroMatik hoses only.

### 5.3.1 Guide lines for steam line design

- Steam hose nominal diameter must not be smaller than the steam outlet of the HygroMatik steam humidifier (do not restrict the cross-section, otherwise back pressure will increase). Select the steam hose that fits the unit.
- Steam hoses must be laid without sags and kinks and with a continuous slope of 5-10% (otherwise sags may result).
- Steam hoses must be supported every 500 mm (20 inches) by clamp brackets.
- Steam hoses should be kept as short as possible. Implement lengths beyond 5 m (16 ft.) as insulated fixed piping to keep energy loss and condensate generation to a minimum. Beyond 10 m (32 ft.) insulated installation is a must. Fixed piping is generally recommended for straight steam line segments.
- If the steam output is divided between two steam distributors (different from the standard design), install the Y-piece for the steam hose as close as possible to the steam distributors. This way, only one steam hose is used for the majority of the distance and condensate losses are reduced. Certain unit types in the HygroMatik steam humidifier portfolio (e.g. FLE40 and FLE80), on the other hand, require the Y-piece to be installed as close as possible to the steam outlet and the steam line to be routed via 2 ways.
- Allow easy access to the steam pipe/ steam hose installation

- Respect minimum bending radii:  
DN 25 Steam hose:  $R_{min} = 200 \text{ mm}/8''$   
DN 40 Steam hose:  $R_{min} = 400 \text{ mm}/16''$

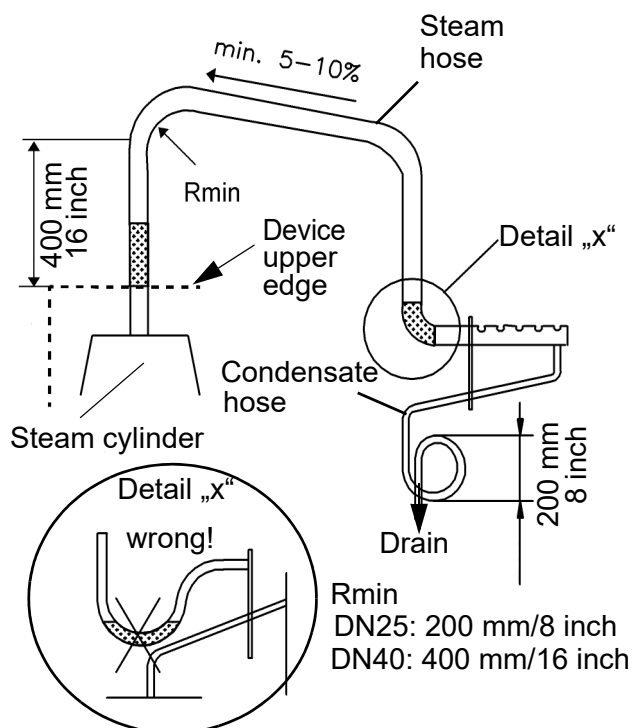

**schematic representation**

- » Run steam hose to a height of 400 mm/16 inch minimum above the steam humidifier and then to the steam manifold with a continuous decline of 5 to 10 %.
- » Feed condensate hose to a waste-water pipe/drain with a 200 mm/8 inch diameter loop as a steam barrier. Minimum distance from steam manifold to loop must be 500 mm/20 inch. Fill loop with water.


### 5.3.2 Condensate recirculation

The condensate hose may be run from the steam manifold back to the steam cylinder, as depicted in the schematic drawing below. Alternatively, the condensate hose may be fed directly in a wastewater pipe or a drain.

#### Please note

Should condensate return into the steam cylinder be intended, the connection stub on the cylinder upper part must be drilled out first with a ANSI drill size „O“ drill. To do so, the steam cylinder must be removed from the housing (s. maintenance chapter). In case of a console instead of a housing, the cylinder is to be lifted off the cylinder base for drilling the stub or may even remain in place.

Drill out condensate hose connection stub with an 8 mm (ANSI drill size „O“) drill, if required

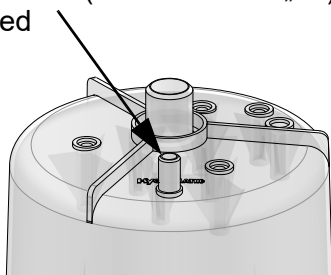


Steam cylinder top view

#### For heater element humidifiers:

Condensate return is only possible for the FLH 30-50 and all FLP unit sizes. Please contact the HygroMatik hotline.

### Condensate hose guide

- » Lay the condensate hose from the steam distributor with a gradient through the housing bore to the steam cylinder and fasten it there to the connection pipe.
- » Lay the condensate hose with a loop of 200mm/ 8 inch diameter as a steam barrier.

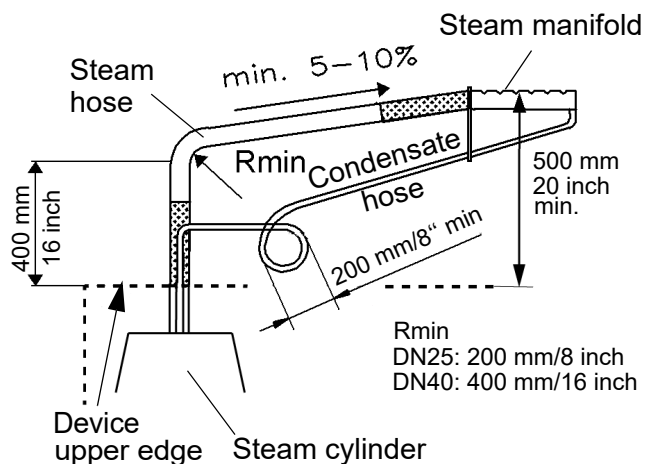

Installation type 1,  
schematic representation

#### Please note

If the steam distributor is positioned lower than 500 mm above the top edge of the unit, the condensate hose cannot be fed back into the steam humidifier..

## 5.4 Steam Manifold

### 5.4.1 General installation guidelines

When installing steam manifolds, pls. follow these guidelines:

#### Positioning within duct


- Install the steam manifold as close as possible to the steam humidifier in order to minimize steam loss through condensation.
- Steam manifold placement on the supply side of the air duct is preferable.
- Install steam manifold strictly horizontal in order to ensure proper condensate drain.
- A minimum distance of 0,3 m (11,81 inch) in the direction of the air flow in front of the steam manifold(s) must be maintained to other installations.

#### Allowable pressures

- Max. allowable pressure in air duct is 1500 Pa/.218 PSI (exemption: SLE02, SLH02, KIT E02 and KIT H02 only allow for 1200 Pa/.174 PSI)
- On suction side, max. -500 Pa (.07 PSI) is tolerable
- With high-pressure air conditioning systems, modifications of the unit's drain hose system may possibly be required depending on the overall pressure situation. These modifications must be **coordinated with your expert dealer.**

#### Water drain

- We point out that according to the German Association of engineers (VDI) guideline VDI 6022, a water drain must be provided within the absorption distance inside the air duct

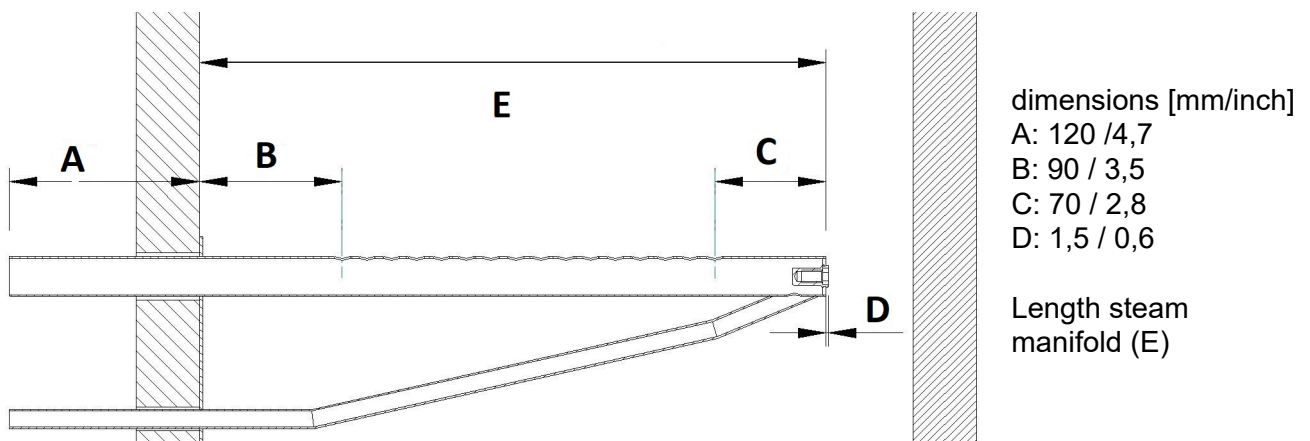

#### Please note

The length of the steam manifold connection piece is constant and always increases the total length of the steam manifold by exactly 120 mm.

Example: The total length of a 600 steam distributor is 720 mm.

**Number and size** of the steam manifolds available as well as the nominal diameter of the respective steam and condensate hoses may be taken from the tables shown in chapter „Technical Data“.

#### Available steam distributor lengths:

|      | until end of 2024 | from beginning of 2025 |
|------|-------------------|------------------------|
|      | length [mm]       | length [mm]            |
| DN40 | 220               | 220                    |
|      | 400               | 400                    |
|      |                   | 500                    |
|      | 600               | 800                    |
|      | 900               | 1100                   |
|      | 1200              | 1400                   |
|      | 1450              | 1700                   |
|      | 1800/2000         | 2000                   |
|      | 2350              | 2300                   |
|      | 2700              | 2600                   |
| DN25 | 220               | 220                    |
|      | 400               | 400                    |
|      |                   | 500                    |
|      | 600               | 800                    |
|      | 900               | 1100                   |
|      | 1200              | 1400                   |

## 5.4.2 Recommendations for dimensioning

The recommendations given below are based on homogenous air flow in the duct.

### **Please note**

Start by arranging the steam distributors in the lower third of the air-conditioning duct (as low as possible, observing the minimum distances).

Minimum distance for condensation avoidance:

**$L_{min} = 200 \text{ mm} / 7.9 \text{ inch}$** : „Steam manifold - Next steam manifold“ distance

**$L1_{min} = 150 \text{ mm} / 5.9 \text{ inch}$** : „Lowest steam manifold - Duct bottom plane“ distance

**$L2_{min} = 250 \text{ mm} / 9.8 \text{ inch}$** : „Highest steam manifold - Duct ceiling plane“ distance

**$L3_{min} = 80 \text{ mm} / 3.2 \text{ inch}$**  : Recommended distance: 100 mm / 3.9 inch

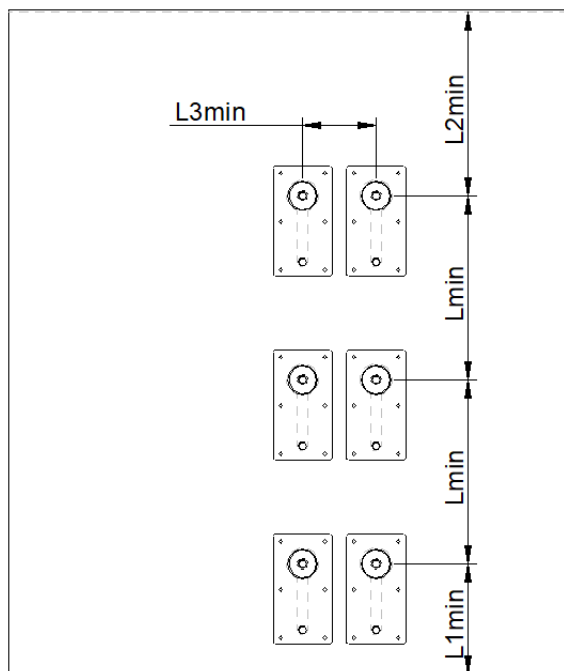


Fig: Distances of the steam distributors

## Standard steam manifold arrangement:

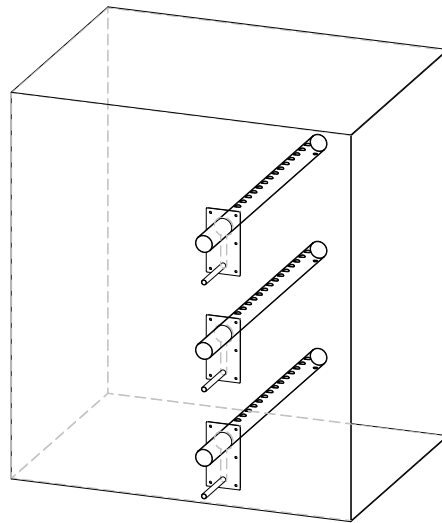


Fig: Standard configuration

## Steam manifold arrangement for special air duct shapings:

Height of the air-conditioning duct is too flat for the number of steam distributors:

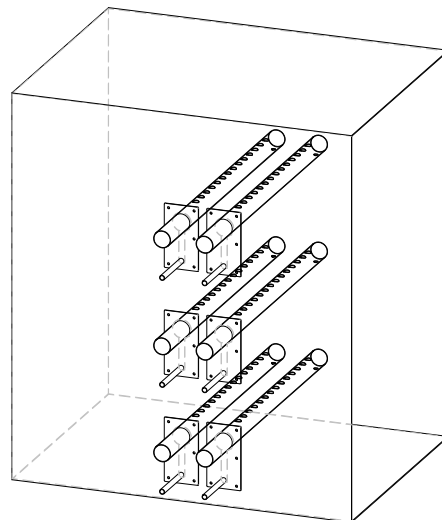


Fig: parallel arrangement of the steam distributors

---

Narrow, high air duct:

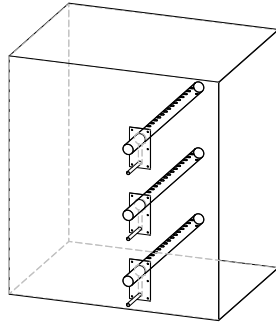


Fig: vertical arrangement of the steam distributors

### Connection of the steam distributors / steam accesses

The distance of the steam distributors to subsequent obstacles (if their placement behind the steam distributor is unavoidable) such as filters depends on the humidification distance and is described in more detail on the following pages.

Flat air duct

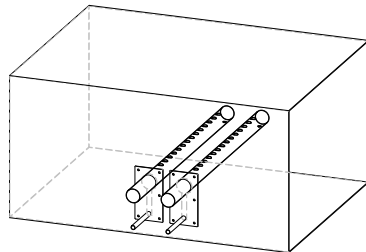


Fig: parallel arrangement of the steam distributors

### **NOTICE**

If several steam distributors are fed from one manifold, make sure that the flow velocity of max. 12 m/s is not exceeded.

Example: 4xDN 40 pipes (120 kg/hour) require at least 1x DN 76 manifold.

### **NOTICE**

When using several steam humidifiers on one manifold, ensure (constructively, e.g. by means of a shut-off valve) that no steam is forced into switched-off steam humidifiers during steam production.

## 5.5 Absorption Distance $B_N$

The "absorption distance" ( $B_N$ ) is defined as the distance from the steam feed to where the steam is completely absorbed in the treated air. Within the absorption distance, steam is visible as mist in the air stream.

Condensation may occur on anything installed within the absorption distance.

Although steam outside the absorption distance ( $B_N$ ) is completely absorbed, it is not yet evenly diffused in the duct. If you plan to install any parts or devices inside the absorption distance, such as sensors or elbows, we recommend increasing the absorption distance using the formulae below. The absorption distances required for certain installed fittings are distinguished by separate symbols and calculated as a multiplier of the absorption distance  $B_N$ .

| Absorption Distance          |   |
|------------------------------|---|
| $B_N$                        | for normal obstructions such as sensors, ventilators, outlets |
| $B_C = (1.5...2) \times B_N$ | for fine filters, heat registers                              |
| $B_S = (2.5...3) \times B_N$ | for particle filters  |
| $B_d = (3...5) \times B_N$   | for humidity sensors, duct humidistats                        |

The absorption distance has no fixed value, but depends on many factors. These are depicted in the absorption distance nomogram below.

### 5.5.1 Determining the Absorption Distance

To determine the absorption distance, the following parameters are required:

- Air humidity before humidification  $x_1$  in g/kg
- Air temperature after humidification  $t_2$  in °C (with steam humidifiers the change in air temperature due to humidification may be disregarded  $t_1$  or  $t_2$ )

- Specific increase in humidity  $\Delta x$  in g/kg (can be determined in the h,x diagram)
- quantity of steam introduced  $\overset{o}{m}_D$  in kg/h.
- air speed  $w_L$  in m/s in air duct
- Total length  $l_D$  of the steam manifold installed in the air duct

Length  $l_D$  of the usable steam manifold depends on the dimensions of the air duct. The length of the absorption distance can be reduced by using multiple steam manifolds (also see section on the steam manifold).

#### Method:

Graphically determine absorption distance  $B_N$  using the absorption distance nomogram (also see Section „Absorption Distance Nomogramm“). Enter the value of the parameters enumerated above into the respective quadrants. The resulting point of intersection indicates the value of the desired absorption distance  $B_N$ .

#### Notes:

Air humidity before humidification  $x_1$ :.....[g/kg]

Air temperature after humidification  $t_2$ :.....[°C]


Specific increase in humidity  $\Delta x$ :.....[g/kg]

Quantity of steam introduced  $\overset{o}{m}_D$  :.....[kg/h]

Air speed  $w_L$  :.....[m/s]

Total length of steam manifold  $l_D$ :.....[mm]

## 5.5.2 Absorption Distance Nomogram

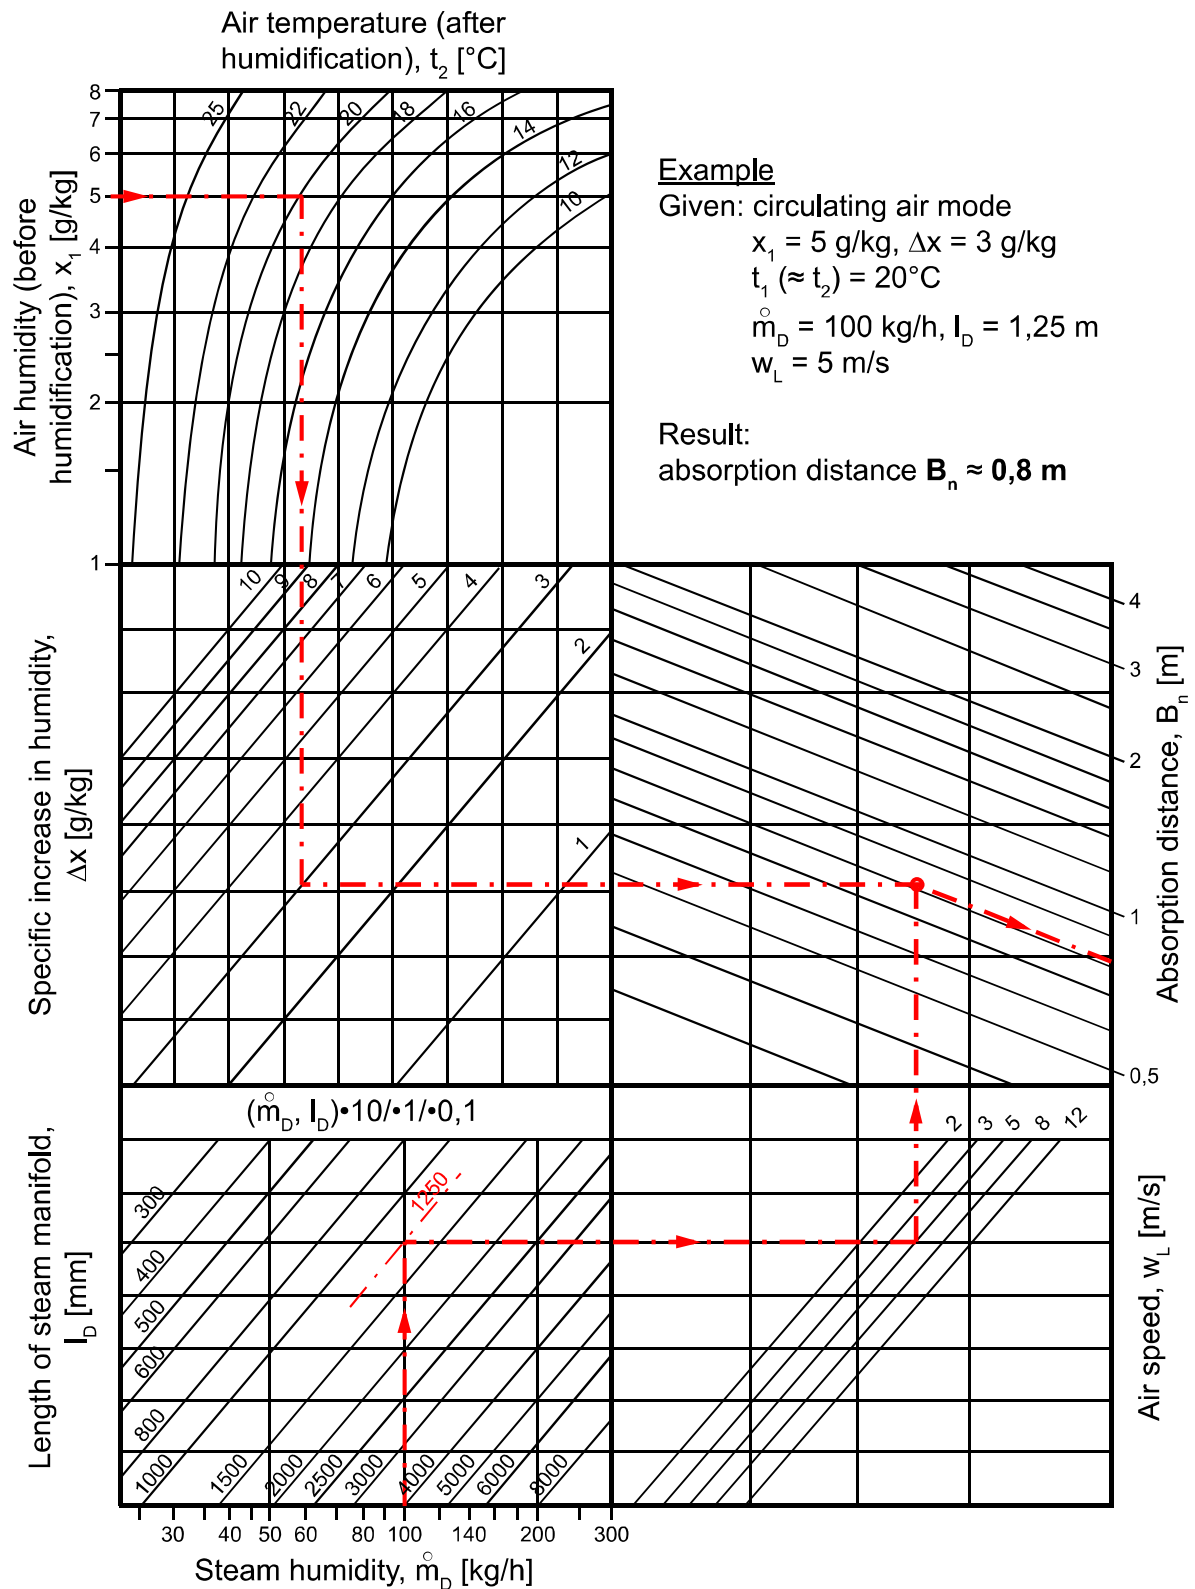

Source: Henne, Erich: Luftbefeuchtung (Air Humidification), 3<sup>rd</sup> Edition 1984 (Page 101), Oldenbourg Industrieverlag, Munich

---

## 6. Water connection

### **⚠ WARNING**

#### **Risk of scalding!**

Very hot water to be found in and around the steam humidifier during and after operation. Have all installation work done by expert staff in order to avoid scalding hazards due to improper water guidance.

---

### **⚠ WARNING**

#### **Risk of electrical shock!**

Hazardous electrical voltage!

Before starting installation work ensure that the unit is not yet connected to the power supply.

---

#### **General Rules**

- Obey local water utility regulations
- When using fully demineralised water, we recommend the use of stainless steel or plastic pipes.
- Verify that necessary safety measures have been taken – in compliance with either German Technical and Scientific Association for Gas and Water (DVGW) guidelines (DIN EN1717) or local regulations – that eliminate backflow of polluted water into drinking water treatment facilities. This may require the installation of a system separator of the CA type (minimum measure, allowable only when free discharge into the drainage system is given). Within the humidifier, a double check valve (58) is located in the water supply line. It prevents - in accordance with DIN EN 61770 - the backflow of water.
- Supply water must not exceed 40°C (104°F)
- Allowable range of water pressure: 1 to 10 bar /14.5 to 145 psi ( $100 \times 10^3$  to  $100 \times 10^4$  Pa)
- For connection to the water supply pipe, make use of a water hose

- Blow-down water must drain freely
- As installation or retrofit option, the DVGW-conform **HyFlow** system separator is available for the HygroMatik electrode steam humidifiers (except SLE 02).
- You can also use a standard BA/CA system separator for the corresponding fluid category.

### **6.1 Feed water quality**

HygroMatik electronic steam humidifiers are designed for operation

- with drinking water\* or
- treated drinking water (mixed deionised water) without chemical additives and with a conductivity between 200 and 800µS/cm.

Beyond conductivity levels of 800µS/cm up to a maximum of 1250µS/cm and below conductivity levels of 200µS/cm to a minimum of 125µS/cm, special adjustments are required. In this case please contact your specialist dealer.

\* according to the drinking water regulation

In exceptional cases, HygroMatik electrode steam humidifiers can be operated with (partially) softened water.

#### **The use of softened water requires special measures:**

- Operation with partially or fully softened water makes it necessary to adjust the blowdown parameters to a higher blowdown frequency.
- Even if the HygroMatik steam humidifier is supplied with partially softened water, the remaining hardness builders can cause fine crystalline deposits. These can be set down in the sieve area of the steam cylinder bottom part and cause blocking of the sieve.



Softened water may cause

- unacceptably high conductivity
- the formation of salt bridges between the electrodes and the electrode leads on the inner surface of the steam cylinder upper part
- foaming in the steam cylinder

Salt bridges may cause electrical arcs. These are indicated by the presence of black grooves in the top part of the cylinder. The cylinder must then be replaced to prevent further damage to the cylinder material, as well as short circuits which may trip main circuit breaker.

Foam may come into contact with the maximum level sensor electrode and trigger the max. level status message despite the cylinder not being full yet and the nominal current not yet established.

With softened water, at operating temperature conductivity level usually is higher than is the case with tap water.

If using a water softening system, we recommend diluting the softened water with normal tap water to produce an overall **hardness between 4-8°gH**.

## 6.2 Water supply

### **NOTICE**


**Foreign material in water supply pipe may cause premature wear of the solenoid valve.**

Flush the water supply pipe before making connection to the solenoid valve. This is of particular importance in case of a newly installed pipe.

- » Install a shut-off valve (SV) in the supply line.
- » Install a water filter (WF) if required due to bad water quality.

### **Please note**

- Shut-off valve (SV) and water filter (WF) are not included in the delivery
- For connection to the water supply line, the water hose (56) with cap nuts (1) on both ends supplied with the unit may be used.
- In case of no safety device for drinking water protection according to DIN EN 1717 present in the house installation system, a system separator at least of the CA type or use of the Hyflow retrofit option is mandatory.

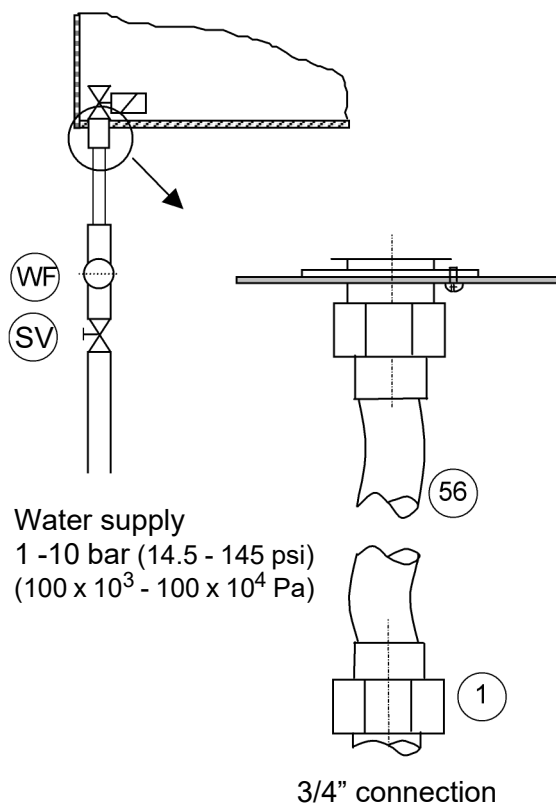

\*) the numbers refer to the exploded view in the chapter with the same name.

Make connection as follows:

- » Attach cap nut with inner seal ring to inlet screw joint on the humidifier housing and tighten.

### **NOTICE**

**Do not overtighten the cap nut!**  
Excessive tightening will destroy the fitting.

---

**Please note**

- » Screw the other hose end cap nut with its inner seal on a customer-provided water tap (cap nut internal thread is  $\frac{3}{4}$ " ).
- » Strainer must be placed inside the solenoid valve

### 6.3 Water discharge

**⚠ WARNING****Risk of scalding!**

During blow down, up to 0.3 l/sec (08 gal./sec) are being drained with a temperature of about 95 °C (203°F).

Ensure that the drain hose is reliably fastened and wastewater can drain freely and pressureless.

---

**Please note**

Humidifier installation location and wastewater discharge must be on the same pressure level. In case of a drain connection on positive pressure, pls. consult your expert dealer.

---

**Guidelines for water discharge composition**


- Use original HygroMatik water drain hose
- Do not buckle drain hose
- Use a drain pipe and outlet pipe made of suitable material (temperature resistant up to 95°C (203°F); with waste water cooling HyCool up to 60°C (140°F).
- In case of a free outlet according to DIN EN 1717, a system separator for liquid category 3 is required for the water connection.
- In all other cases, use a system separator for liquid category 5.

**How to proceed**

- » Run a 1 1/4 " drain hose of 250 to 1000 mm (10 to 40 inch) length into a pressure-free outlet according to DIN EN 1717. The hose must be guided sideways of the humidifier to prevent ascending vapor from condensing on the humidifier's housing.

Valid for all steam humidifiers (KITS are not included):

- » Fit drain hose to connection stub on humidifier housing bottom side.
- » Slide pump drain hose onto one of the grounding clips (s. fig. below).
- » Slide overflow hose of the HyFlow system separator (if present) onto the other grounding clip.

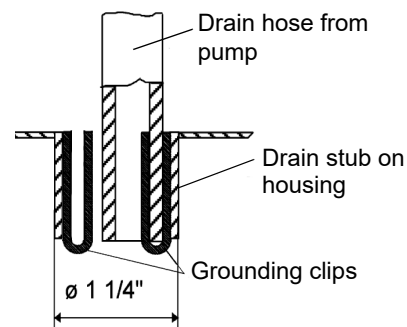**Grounding clip functioning**

The two grounding clips attached to the inner surface of the housing drain stub are in direct contact with water and shunt potential residual electric currents away from the housing during blow-down and in case of a cylinder water overflow.

Between the pump drain hose jacket and the inner surface of the cabinet drain connection, a gap exists due to the diverging diameters. If water collects on the base plate, it will flow through this gap into the drain hose and then into the drainage system.

---

**Please note**

With the optional wastewater cooling system **HyCool** (not available for FLP-XX-TPRO units), HygroMatik offers an option for limiting the steam humidifier wastewater temperature in order to protect thermosensitive wastewater pipe lines. By blending with tap water during blow-down, wastewater temperature is below 60°C (140°F) as long as inlet water temperature does not exceed 30°C (86° F).

---

## **6.4 Water connections final check**

Go down the following water installation checklist:

- ☒ All screws and clamps properly tightened?
- ☒ Water supply line flushed before making connections?
- ☒ Water connection properly installed?
- ☒ Water discharge properly installed?
- ☒ Does blow-down water drain freely?
- ☒ Water supply line and water discharge leakage-free?

---

## 7. Electrical connection

### **⚠ WARNING**

#### **Danger of electrical shock!**

Dangerous electrical voltage!

All work relating to the electrical installation may only be carried out by designated specialist personnel (electrician or qualified person with equivalent training).

Do not connect the steam humidifier to the live power supply before all installation work has been completed.

---

### **Please note**

The customer is responsible for monitoring the qualifications of the specialist personnel.

---

#### **General installation rules**

- All local rules concerning the implementation of electrical installations must be obeyed
- Electric connector cables to be laid professionally
- Install the electrical connections according to the wiring diagram
- With units of a nominal power output > 33 kW electrical connection to a permanent line is mandatory (according to VDE 0700 Part 98, IEC 60335-2-98)

### **NOTICE**

#### **Possible electronical components destruction through electrostatical discharge!**

Prior to commencing electrical installation work, steps must be taken to guard the sensitive electronical components of the unit control against damage from electrostatical discharge.

---

## 7.1 Electrical installation approach

- » Provide fuses with a contact gap of at least 3mm per pole.
- » Install a separate main connection for each steam cylinder including main circuit breaker, main switch etc. .
- » Make main connection according to the table below.

#### **Main connection**

For the StandardLine steam humidifiers in the standard version, main connection can be found in the Technical Data (in the chapter of the same name).

Other operating voltages on request.

#### **Fusing**

HygroMatik recommends the use of slow blowing up to middle time-lag main fuses.

### **Please note**

Steam humidifier installations should incorporate an individual resilient current circuit breaker (type A-RCD).

The maximum current consumption and the resulting required fuse protection of the individual standard unit types can be found in the technical data table (chapter Technical data at the end of this manual).

## 7.2 Cable connections

The table below shows the number and dimensioning of the cable connections provided by the various StandardLine housing types.

| Housing type                   | M16 | M25 | M25 with MSI*) | M32 | M40 |
|--------------------------------|-----|-----|----------------|-----|-----|
| SLE02                          | 1   | 0   | 1              | 0   | 0   |
| SLE05/10<br>SLH03/<br>SLH06/09 | 0   | 1   | 1              | 0   | 0   |
| SLE15/<br>20/30<br>SLH15/25    | 0   | 0   | 1              | 1   | 0   |
| SLE45/65<br>SLH40/50           | 0   | 0   | 1              | 0   | 1   |

\*) Multiple seal insert

### Characteristics of metric cable connections

| Thread             | Wrench size [mm] | Cable diameter supported [mm] |
|--------------------|------------------|-------------------------------|
| M16X1.5            | 20               | 4.5 - 10                      |
| M25x1.5            | 30               | 9 - 17                        |
| M25x1.5 with MSI*) | 30               | 6 (3x)                        |
| M32x1.5            | 36               | 13 - 21                       |
| M40x1.5            | 46               | 16 - 28                       |

## 7.3 Safety interlock


### **⚠ WARNING**

#### **Risk of electrical shock!**

Hazardous electrical voltage!

When standard wiring was made, terminal 1 shows 230 VAC after commissioning.

Across terminal 1 and 2 the so-called safety interlock is wired. This wiring allows for integration of safety devices. In case of an open safety interlock the steam humidifier does not operate.

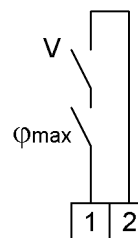

**Safety  
interlock terminals 1/2**

### **Please note**

Factory setting leaves the safety interlock open!

Install contact interlocks, e.g. a max. hygrostat, vane relays, pressure controllers, air interlock devices etc. in series across terminal 1 and 2.

### **NOTICE**

**Contacts across terminals 1 and 2 must be potential free and properly rated!**

Rating must comply with the control voltage in use.


Best practice implies the integration of a max. hygrostat in the safety interlock wiring to protect against over-humidification due to a r.h. sensor malfunction.

## 7.4 Control signal

As described in the „Unit Control“ chapter, section „Provider level submenu and its parameters“, the unit control type is determined by parameter „1-2“, „control signal“. In accordance with the control type selected, terminal wiring of the connection terminal (s. „Unit control“ chapter, section „Main PCB connections“ is to be made.

### 7.4.1 1-step operation


Steam humidifier operation is controlled by the contact across terminals 3 and 5 provided by the customer. This contact needs only to be low voltage proof.

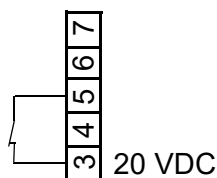

**Customer-provided contact for 1-step operation**

### 7.4.2 Operation with an active humidity sensor or external controller


When driving the steam humidifier by an active r.h. sensor or external controller (e.g. a PLC), control signals in the range of 0...10 V, 0...20 mA or 0...140 Ohm may be applied. Each one of the signal types is connected to a dedicated terminal (see „Unit control“ chapter, section „Main PCB connections“). Reference is always to terminal 4, GND.

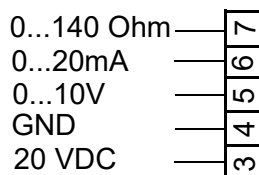

**Terminals for control signals**

#### **Please note**

Active r.h. sensors need an external supply voltage. For that purpose, terminal 3 has a +20 VDC offering.

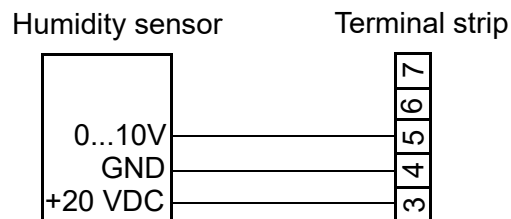

**Exemplary 0...10V humidity sensor connection**


Humidity sensor with higher current requirement:

The circuit board provides a maximum of 30mA. If this is not sufficient for the connected humidity sensor, use the option of a transformer to supply the sensor with power.

### 7.4.3 Wiring for control signal and safety (interlock) system for multiple units

In the case of multiple units, separate humidifiers work together. The control signal and the safety (interlock) system are connected to the master unit as described above. In addition, connecting cables are established between the guiding unit and the succeeding unit(s) (provided on-site). These provide the succeeding unit with a control signal from the guiding unit and the transmitted (potential free) safety (interlock) system.

The wiring for the control signal and the safety (interlock) system must be implemented as follows for multiple units:

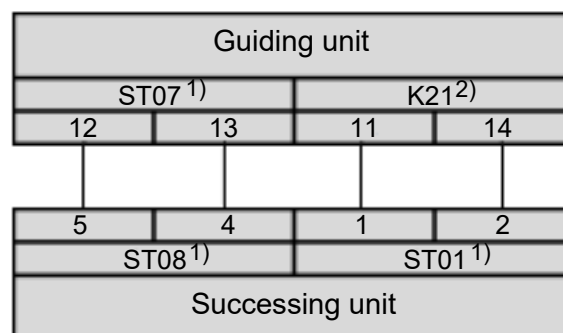

<sup>1)</sup> „ST0x“ designates connector plugs on the mainboard

<sup>2)</sup> „K21“ is the relay used for the connection of the succeeding unit

---

## 7.5 Wiring diagram

The device-specific wiring diagrams are included in the scope of delivery. Please use them for the installation and keep them in a safe place.

## 7.6 Electrical installation check list

Check electrical installation with respect to customer-site requirements and local power supply regulations.

- ☒ Safety interlock properly wired across terminals 1 and 2?
- ☒ Supply voltage in accordance with name plate voltage rating?
- ☒ All electrical connections made according to the wiring diagram?
- ☒ R.h. sensor properly connected with respect to signal type and supply voltage (only when r.h. sensor is in use)?
- ☒ All screw terminal connections properly tightened?
- ☒ Have all electrical cable and plug connections been properly tightened?
- ☒ Proper unit grounding made?

---

## 8. Commissioning

### **⚠ WARNING**

#### **Risk of operating error!**

Start-up of the unit is restricted to expert staff only (electricians or expert personnel with equivalent training).

---

#### **Step 1: Check of mechanical integrity and wiring**

- » Open housing cover.
- » Check cylinder seating.
- » Check steam, condensate and drainhose clamps.
- » Check that all electrical wire connections (including steam cylinder wiring) are tight and secure.

#### **Step 2: Switching on the steam humidifier**

- » Switch on main breaker.
- » Open water supply stopcock (operating pressure should be 1bar min., 10bar max.).
- » Switch on unit by setting control switch to "I".

#### **Step 3: The unit performs a self-test and, then, commences normal operation**

- During self-test, the display flashes for a couple of seconds
- On completion of the test, the software version is displayed for a short moment. Consequently, normal operation is commenced. However, steam is not produced.

#### **Step 4: Trigger steam demand**

- » Set control to 1-step operation, i.e. permanent steam demand, and close safety interlock.
- The water inlet solenoid valve opens and feeds water into the steam cylinder.

#### **Step 5: Monitor unit function and check for leakage**

- » Let unit operate for 15 to 30 minutes.
- » If leaks appear, switch off the unit.

### **⚠ WARNING**

#### **Risk of electrical shock!**

Hazardous electrical voltage!

Follow safety instructions for work on live components.

---

#### **Step 6: Repair leaks**

- » Find leaks and eliminate.
- » Check again for leaks.
- » When everything is o.k., reattach housing cover.



---


## 9. Maintenance

### 9.1 General

For the achievement of a long unit life span, regular maintenance is a must. Maintenance works to be performed refer to unit assemblies that underlie either mechanical or electrical wear and tear, or may be impeded by residues in their proper functioning.

The steam humidifier's performance and maintenance intervals primarily depend on the water quality encountered and the amount of steam produced. A particular water quality may shorten or lengthen maintenance intervals. The amount of residues found in the steam cylinder allows for a hint on future maintenance intervals.

Another scenario influencing the unrestricted unit availability refers to the main contactor that has a maximum number of switch cycles as indicated by its manufacturer. Unit control monitors the number of switch cycles and produces a maintenance message as soon as the max. number is reached.

Need for maintenance is indicated by illumination of the  service icon in the unit control panel display. Depending on the trigger, reading value „Status“ then shows a „271“ (Service Steam Amount) when a certain produced steam amount threshold preset was exceeded, or „272“ (Service Main Contactor).

In the latter case, the main contactor should be replaced and the counter be reset (s. parameter „3-2“).

In case of „Service Steam Amount“, maintenance work mainly encompasses checking and cleaning all of the unit parts including the steam cylinder inside, and a unit test run. Steam humidifier electrodes are prone to burn-off during steam production and must, consequently, be replaced in a regular time frame.

As part of the maintenance work, screw terminals and plug connections must be checked every time. If required, retightening the terminal screws is a must as well as ensuring tight fit of all of the plug connections.

Since steam and condensate hoses are subject to wear as well, hoses must also be checked regularly.

Seals are wear parts. As such, seal integrity checks and replacement, if required, is also a part of the regular maintenance work.

#### 9.1.1 Safety instructions for maintenance

---

##### **⚠ WARNING**

###### **Risk of electrical shock!**

Hazardous electrical voltage. Unit must be switched off and protected against restart by expert staff (electricians or expert personnel with equivalent training) before any maintenance work is commenced.

---

##### **⚠ WARNING**

###### **Risk of skin burning!**

Hot steam cylinder during operation and for some time afterwards.

Drain steam cylinder before any maintenance work is commenced. After that, wait approx. 10 mins before starting maintenance work.

Check steam cylinder temperature by cautious approximation with hand (do not touch!).

---

##### **⚠ WARNING**

###### **Risk of scalding!**

Water pumped or drained from the steam cylinder may have a temperature of up to 95 °C (203 °F).

Wear proper PPE (Personal Protection Equipment)!

---

##### **NOTICE**

###### **Take care of ESD protection!**

The electronic components of the humidifier control are very sensitive to electrostatic discharges. In order to protect these components during maintenance, steps must be taken to guard against damage from electrostatic discharge.

---

## 9.2 Maintenance frame work

Mineral deposits precipitate and crystallize very differently in different types of water, even when two types have the same conductivity and hardness levels (the various constituents in the water interact differently).

Instructions on maintenance and cleaning intervals, or on electrode service life, are based entirely on empirical data.

In most cases, the conductivity levels given in the "Directions for Use" section of this manual may be considered as typical values. Individual parameter settings as part of the control software may be necessary.

Very seldomly, water pretreatment may be necessary (softening by dilution to approx. 4 - 8 °gH; decarbonization/partial desalination to achieve target reductions in carbonate hardness).

For any questions with regard to water treatment systems pls. contact your expert dealer.

| Cycle time   | Maintenance work   |
|--|--|
| <b>4 weeks after commissioning</b><br>(also after installation of a new steam cylinder)<br>(with normal water quality)                             | <ul style="list-style-type: none"><li>• Visual inspection of electrical and mechanical connections</li><li>• Remove mineral deposits from steam cylinder, water drain hose and blow-down pump</li><li>• Check electrodes for burn-off</li><li>• Re-tighten electrode hand nuts and all screw terminals</li></ul>   |
| <b>semi annually*</b><br>(with Normal Tap water quality (please refer to chapter 1.4 „Intended use“) and „normal“ operation, i.e. 8 hours per day) | <ul style="list-style-type: none"><li>• Visual inspection of electrical and mechanical connections</li><li>• Remove mineral deposits from steam cylinder, water drain hose and blow-down pump.</li><li>• Check electrodes for burn-off and replace, if required.</li><li>• Re-tighten electrode hand nuts and all screw terminals</li><li>• Removal of used O-rings between the cylinder halves, in the base and in the steam hose adapter</li><li>• Cleaning the vent hole in the pipe bend</li><li>• Cleaning the fine filter of the solenoid valve</li><li>• Checking the hoses</li></ul> |

\* If the water quality differs, this could result in a more frequent need for maintenance.

---


## 9.3 Maintenance steps

### 9.3.1 Removal of the steam cylinder

- » Hold the control switch in position II to pump the rest of the water out of the cylinder.




- » Set the control switch to position 0 to switch off the unit.
  - » Disconnect unit from power supply and secure against reconnection.
  - » Remove unit housing cover.
  - » Check the unit again to ensure no voltage is present.
  - » Shut off the water supply.
- 
- » Wait 10 minutes so that the possibly hot cylinder can cool down.

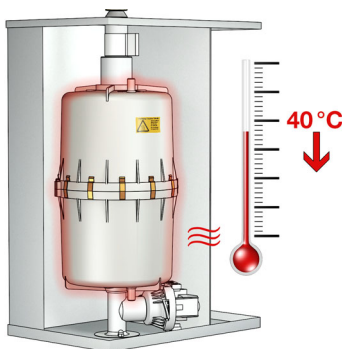

- » Check the temperature by carefully approaching it with your hand, do not touch the cylinder if the rest heat should be too strong.
- 
- » Remove Super Flush solenoid hose from cylinder bottom (if applicable).
  - » Remove the steam hose from the steam hose adapter.

If the steam hose is not to be disconnected, the steam hose adapter with the steam hose still attached may be detached from the steam cylinder as shown in the next figures.

- » Remove the clip from the steam hose adapter.

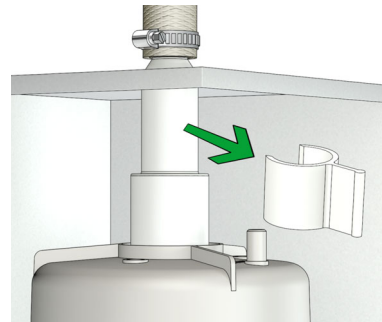


- » Pull the steam hose together with the steam hose adapter upwards. This will disconnect it from the steam cylinder.




- » Push the clip onto the adapter outside of the unit housing.


- » Disconnect the cabling.

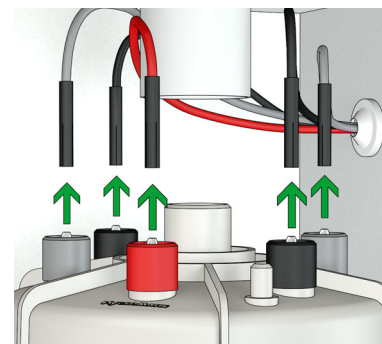



- » Lift steam the cylinder from the cylinder base.

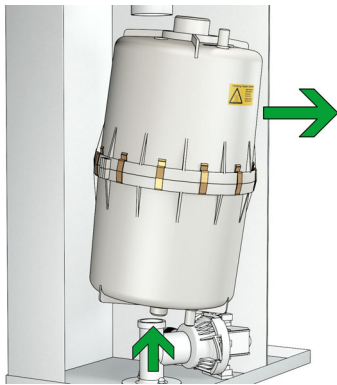

- » Separate cylinder halves.

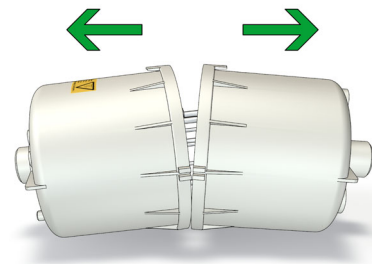

- » Remove the used O-rings between the cylinder halves, in the base and in the steam hose adapter.

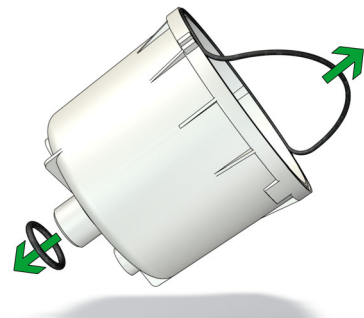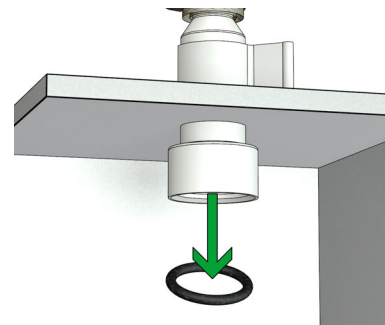

### 9.3.2 Cylinder cleaning / O-ring replacement

For cleaning, mechanical removal of the deposits is usually sufficient.

#### **CAUTION**


#### **Risk of eye injuries!**

The clips that fix the steam cylinder halves have sharp edges and can jump off during dismantling.

Eye injuries are possible.

Wear proper PPE (Personal Protection Equipment)!


- » Remove the cylinder flange clamps.

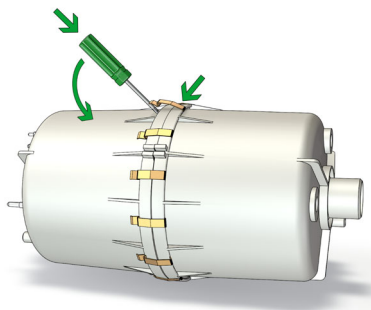


- » Clean the cylinder inside.



- » Clean the strainer.

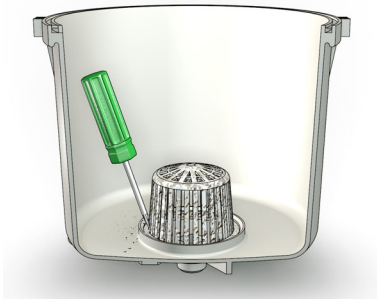

- » Unscrew the hand nuts (A).

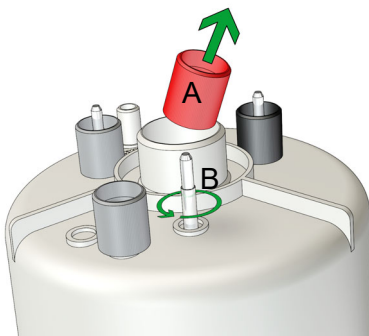

- » Remove electrodes (B).
- » Clean electrodes and check electrode wear (s. „Changing electrodes“ section).
- » Check sensor electrode for salt deposits and remove them if necessary (until metallically bright).
- » Check the inside of the top part of steam cylinder for crust build-up and possible salt bridges (black grooves between the electrode leads).



- » Remove the deposits by scraping / scrubbing them off.

- » Replace the O-rings of the electrodes.
- » Install new electrodes (48). Make sure that the electrodes are positioned correctly (see exploded view).



### HINWEIS

The deposits in the upper part of the cylinder can be conductive and lead to unwanted currents between the electrode connections and the sensor electrode and thus to the message "cylinder full".


If electrical bridges have penetrated deep into the material, the steam cylinder must be replaced.

- » Check the base and its connections for limescale deposits and clean if necessary.

- » Insert new O-rings between the cylinder halves, in the base and in the steam hose adapter.

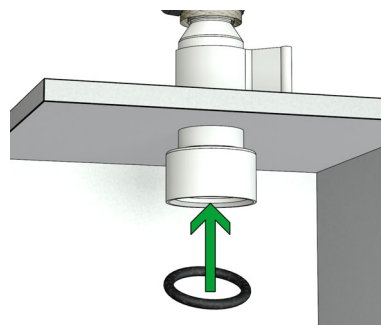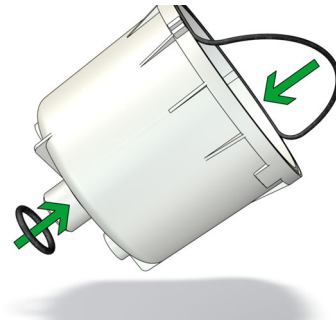

- » Put the cylinder halves together and reconnect them with the flange clamps.

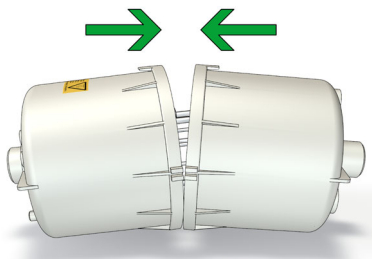

- » Put the cylinder halves together and reconnect them with the flange clamps.

### **NOTICE**

#### **Risk of functional disruption!**


We generally advise against using limescale removers or other cleaners. If these are nevertheless used to clean the cylinder and the electrodes, rinse the parts cleaned with them thoroughly before putting the unit back into operation. The cleaners may impair the conductivity of the cylinder water.

### **9.3.3 Cleaning the connecting hoses, base connections, fine filter and drain pump**

- » Check the connection hoses for condition and free passage.
- » Check all connections of the cylinder base for free passage.
- » Clean the hoses and connections if necessary.
- » Remove the fine filter on the water connection side from the solenoid valve and clean it under running water.
- » Clean the drain pump as described in the section of the same name..

### **9.3.4 Cleaning the vent hole on the pipe elbow**

The pipe elbow is only accessible when the steam cylinder is removed.

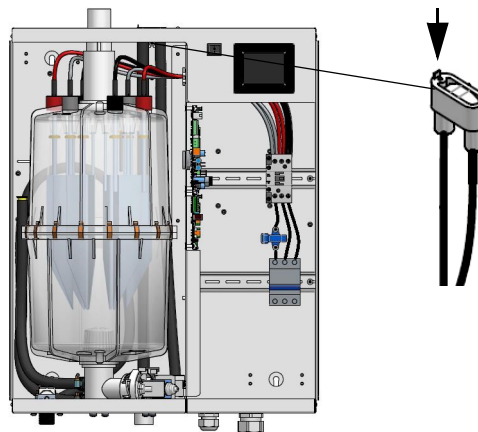

- » Remove the pipe elbow from the back wall of the housing by unscrewing the fixing screw of the pipe elbow.
- » Check the small opening on the top of the pipe elbow for dirt.
- » Remove any dirt, e.g. with a small screwdriver.
- » Reattach the pipe elbow to the back wall of the housing with the screw.


#### **Please note**

The vent hole should be checked for free circulation during every maintenance. A blocked vent hole has a negative effect on the drainage process (see also chapter "Trouble shooting" in the manual of the control).




### 9.3.5 Reinstallation of the steam cylinder

- » Place the cylinder vertically in cylinder base.

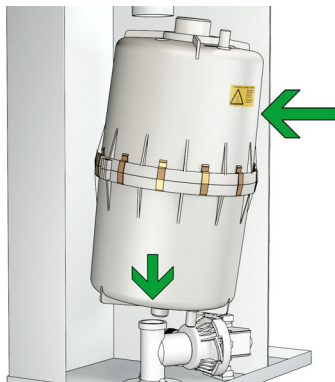

- » Reconnect the electrode cabling.

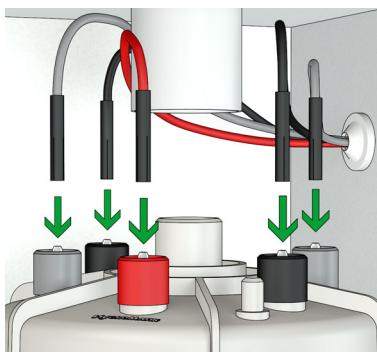

#### **Please note**

The colour of the respective connection cable must match the colour of the respective electrode hand nut.


- » Check all cabling screw terminals and plugs for tight seating. Plugs must sit on their respective contacts as far as they will go.
- » Check electrode plugs for corrosion. Replace, if stained.

#### **NOTICE**


**Risk of functional disruption!**  
**Risk of material damage!**

Loose cable connections may result in increased transition resistance and contact area overheating.

- » Reattach Super Flush solenoid hose (if applicable) to steam cylinder bottom stub.
- » Attach steam hose adapter to cylinder.

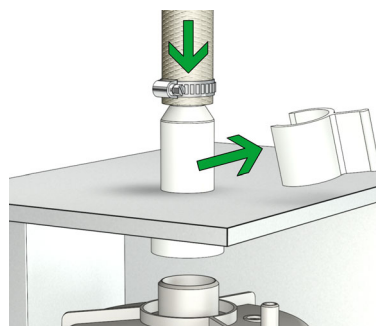

- » Affix the steam hose adapter with the clip.

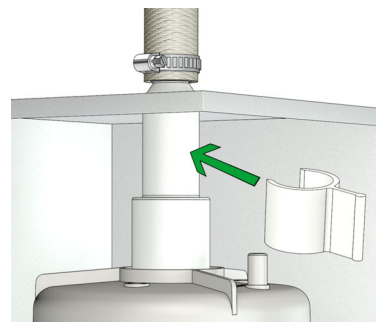

- » Follow the handling instructions in the section **Leakage test**.

---

## 9.4 Removal and installation of unit components


### 9.4.1 Blow-down pump (removal, cleaning, reinstallation)

#### Removal and cleaning

- » Remove steam cylinder as described in „Removal and reinstallation of steam cylinder“ section.
- » Detach adapter (30) from pump (32).
- » Detach electrical cable from pump.
- » Unscrew mounting screws from housing bottom plate. Safe vibration buffer (42), bolts and washers for reinstallation.
- » Pull out the pump of the cylinder base (37).
- » Remove residues from pump and drain hoses.
- » Remove the used o-Ring (33).

#### Reinstallation

- » Moisten the new O-ring (33) and insert into cylinder base (37) horizontal stub.
  - » Push pump back into cylinder base and bolt to bottom plate incorporating the vibration buffer (42) and washers saved during removal.
  - » Moisten O-ring (31) and insert into adapter.
  - » Slide adapter (30) onto pump stub.
  - » Refit electrical cable to pump connector (no polarisation).
  - » Reinstall the steam cylinder (see chapter Reinstallation of the steam cylinder).
  - » Follow the handling instructions in the section **Leakage test**.
- 

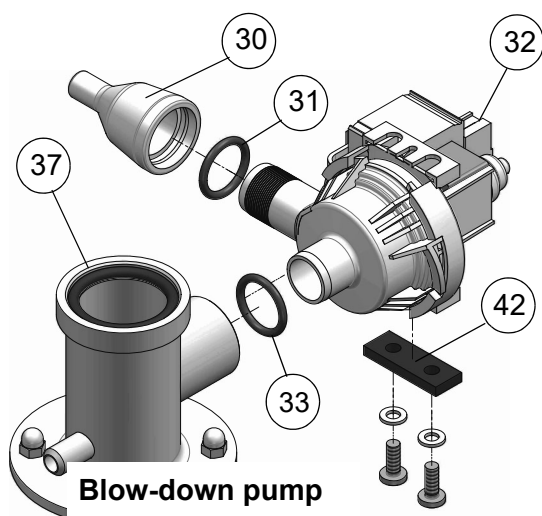




---

## 9.4.2 Solenoid valve (removal, reinstallation)

### Removal

- » Shut off water supply and disconnect tap water hose cap screw connection.
- » Remove connecting hose (20\*) from cylinder base.
- » Detach electrical cable connector from solenoid valve (25\*).
- » Unscrew solenoid valve mounting screws.
- » Remove solenoid valve from housing bore.

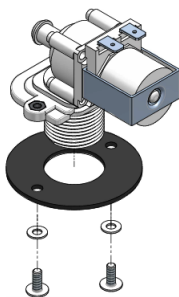

### Reinstallation

- » Reinsert fine filter into solenoid valve.
- » Reinsert solenoid valve with seal in unit housing bore.
- » Bolt-down solenoid valve.
- » Reestablish tap water connection.
- » Reconnect electrical cable to solenoid valve.
- » Reattach connecting hose (20) to cylinder base using clamp.
- » Follow the handling instructions in the section **Leakage test**.

\*) the numbers refer to the exploded view in the same named chapter

---

## 9.4.3 Electrode replacement


- » Remove the cylinder and open it (see also chapter Removal of the steam cylinder).

### Please note

When mounting the electrodes, make sure that the hand nut colours corresponding with the wiring colours remain in the same position as before in order to omit any unwanted shift of electrical potential. Hence, the hand nut positions must be recorded before they are removed. During reassembly, particular care must be taken to ensure that no grey wire is connected to the electrode plug next to the (grey) sensor electrode hand nut.

---

- » Unscrew hand nuts (A).

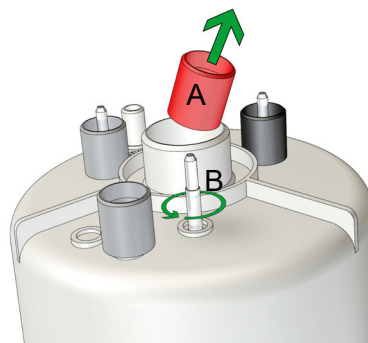


- » Remove electrodes (B).
- » Install new electrodes (48). Make sure that the electrodes are positioned correctly (see exploded view)
- » When installing the new electrodes, make sure that there is a new o-ring in the cup-like holder.

### Please note

The electrodes for use with the CY45/2 steam cylinder feature a two-fold sealing (s. following fig.) In order to allow for the problemfree electrode installation, moisten the upper o-ring with water or soap solution.

---

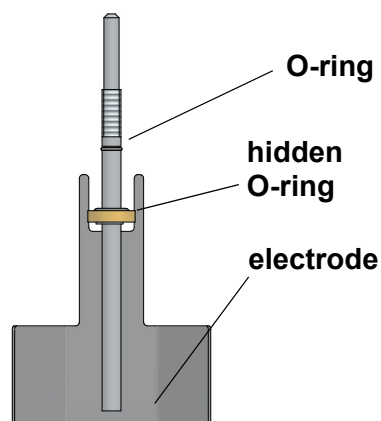

Two-fold sealing of the electrodes for the steam cylinder CY45/2 (SLE50/65)

- » Hand tighten the nuts.
- » Reassemble the cylinder and insert it into the unit (see chapter **Reinstallation of the steam cylinder**).
- » Follow the instructions in the section **Leak test**.

### Genuine electrode length

HygroMatik large area electrodes made from stainless steel have the following genuine lengths:


| Model   | Length [mm] |
|---|-------------|
| Kit E02 / SLE 02                              | 80          |
| Kit E06 400 V/3 Ph                            | 125         |
| Kit E06 220-240 V/1 Ph<br>Kit E10 / SLE 05/10 | 155         |
| Kit E15/30 / SLE15                            | 235         |
| Kit E20 / SLE20                               | 210         |
| Kit E45/65 / SLE45/65                         | 300         |
| Kit E02 / SLE 02                              | 80          |
| Kit E02 / SLE 02                              | 80          |

\*) The electrodes installed in the new CY45/2 steam cylinder feature a length of 300 mm

### Electrode wear

Electrode wear depends on:

- composition and conductivity of the supply water
- the amount of steam produced

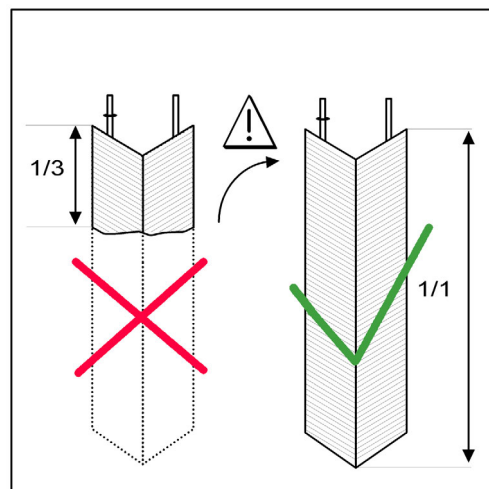

In case of the electrodes being burned-off to less than one third to half of their genuine length, electrode replacement should be made.

### Please note

When cylinder water maximum level is detected for a period of 60 mins, an error message is generated and unit operation is cut. At the latest, electrode replacement should then be made.

---

## 9.5 Leak test

### **WARNING**

#### **Risk of electrical shock!**

Hazardous electrical voltage!

Follow safety instruction for work on live components.

Leakages may invoke leak currents.

---

The leak test described below must be done after all maintenance work that affects the water circuit inside the unit. If work has been done at several points, the final leak test is enough, although this work step is listed for all parts of the work.

The leak test must be done with the unit open, paying particular attention to the warning above.

- » Open the water supply.
  - » Switch on the unit and check the inside for leaks (hose connections, O-rings, seals) after 15-30 minutes of operation.
  - » In case of leakage turn off power supply and secure against being switched on again.
  - » Find leakage and eliminate.
  - » Check again.
  - » Follow the instructions in the section **functional check**.
- 

## 9.6 Functional check


- » Run the system with maximum output for a couple of minutes
  - » Check hose connections and seals for leakage.
- 

## 9.7 Finishing maintenance

- » Reattach unit housing cover
- » Reset service interval

### **Reset service interval:**

After finishing substantial maintenance work, the service interval „Steam amount“ must be reset (s. sections 11.5.2 und 11.8).

To do so, follow the procedure below (use the „/V“ keys for changing the values displayed):

- » from standard display, select „P00“.
- » confirm with SET key.
- » input code „010“.
- » confirm with SET key.
- » change display from „1--“ to „3 --“ (select parameter group „Service“).
- » confirm with SET key.
- „3-1“ is displayed
- » confirm with SET key.
- » change display from „0“ to „1“ („Reset service interval“).
- » Confirm with SET key.
- » return to standard display by touching the ESC key twice.

The steam amount counter now again holds the value preset (s. „3-3“ parameter, „Service interval [t]“), that determines the next time for maintenance when met.

---

---

## 10. Dismantling

Once the steam humidifier will no longer be used, dismantle (demolish or scrap) it by following the installation procedures in reverse order.

### **⚠ WARNING**

Dismantling of the unit may only be performed by qualified personnel. Electrical dismantling may only be performed by trained electricians.

---

### **Disposal after dismantling**

The humidifier is made up of metal parts and plastic parts. In reference to European Union directive 2012/19/EU issued on 4 July 2012 and the related national legislation, please note that:

The components of the electrical and electronic devices must not be disposed of as municipal waste, and therefore the method of waste separation must be applied. The public or private waste collection systems defined by local legislation must be used.

### **NOTICE**

The operator is responsible for the disposal of unit components as required by law.

## 11. Unit Control

### 11.1 General description

The standard controller can be used for both electrode steam humidifiers and heater type steam humidifiers.

Operation of the HygroMatik steam humidifier is under microprocessor control.

For steam humidifiers with unit housing, a control switch is located on the front panel of the unit featuring two positions besides the „Zero“-position for a switched-off device.

„Pos. I“ : The unit is switched on

„Pos. „II“ : Cylinder water is manually drained



**Control switch**

For controlling the unit a control panel featuring a 3-digit display and a number of icons plus 4 touch keys is integrated in the unit front panel. Controlling the unit by software using the modbus RTU protocol is also possible. On request, modbus documentation is available from your expert dealer.



**Control panel**

For control signal processing inputs are available whose properties may be defined by parameter settings. Activating of the intake solenoid valve, the blow-down pump and the main contactor is achieved through relays on the main PCB. Another relay serves for signalling purposes (factory setting is „collective fault“).

As an ordering option, for provision of 2 additional switching functions, a pair of top-head rail relays is available for the pluggable connection to the mainboard.

With heater type steam humidifier, the power is controlled via a single-phase or two-phase solid state relay (for devices with higher power).

With electrode steam humidifier, the electrode current is switched directly via one or two main contactor(s) designed for the respective device power.

#### Mainboard

The entire control logic, including the relays for basic operation, is implemented on a compact printed circuit board which, in the case of steam humidifiers with device housings, is attached to the vertical partition wall between the housing chambers.

All connections on the PCB are distinctive in order to allow for easy exchange of the board in case of maintenance.

On the main PCB, two vertically mounted fuse holders with bayonet fitting incorporate 1.6 A fast-blow fine wire fuses (F1 and F2 for L and N, s. section „Basis PCB connections“ in this chapter).

#### Safety systems

Besides the common external safety interlock (implemented by means of a switching contact or a through a building control system), the following safety is incorporated in the unit:

An electric heater type steam humidifier is thermically controlled at two spots minimum. Besides the thermo switch located on top of the steam cylinder and meant for overheating avoidance of the electrical heater element, the solid state relay also is equipped with a thermo switch (higher output units feature 2 thermo switches in the cylinder cover). In

---

case of one of the thermo switches being triggered, the main contactor is deenergized. The thermo switches on the steam cylinders may be reset mechanically after cool-down. The thermo switch attached to the solid state relay heatsink, however, is a bi-metal device. As such, it is released automatically after cool-down.

An other safety measure is the steam cylinder minimum water level control. For heater element protection and thermal overload risk avoidance, no heater element drive enabling is issued in case of minimum water level underrun.

### **Intrinsic safety**

HygroMatik steam humidifiers comply with intrinsic safety requirements in that the electrical power supply may be cut by two devices.

In case of the electric heater type steam humidifier, these devices are the main contactor and the solid state relay.

In addition to the main contactor, an electrode steam humidifier is also equipped with a circuit breaker.

#### **Please note**

For electrical connection of the steam humidifier a residual current circuit breaker is recommended.

---

## **11.2 Safety interlock**

### **⚠ WARNING**


#### **Risk of electrical shock!**

Hazardous electrical voltage!

When standard wiring was made, terminal 1 shows 230 VAC after commissioning.

---

Across terminal 1 and 2 the so-called safety interlock is wired. This wiring allows for integration of safety devices. In case of an open safety interlock the steam humidifier does not operate.

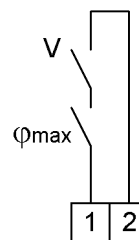

**Safety  
interlock terminals 1/2**

#### **Please note**

Factory setting leaves the safety interlock open!

---

Install contact interlocks, e.g. a max. hygrostat, vane relays, pressure controllers, air interlock devices etc. in series across terminal 1 and 2.

### **NOTICE**

**Contacts across terminals 1 and 2 must be potential free and properly rated!**

Rating must comply with the control voltage in use.

---


Best practice implies the integration of a max. hygrostat in the safety interlock wiring to protect against over-humidification due to a r.h. sensor malfunction.

## **11.3 Control signal**

As described in the „Unit Control“ chapter, section „Provider level submenu and its parameters“, the unit control type is determined by parameter „1-2“, „control signal“. In accordance with the control type selected, terminal wiring of the connection terminal (s. „Unit control“ chapter, section „Main PCB connections“ is to be made.

### **11.3.1 1-step operation**


Steam humidifier operation is controlled by the contact across terminals 3 and 5 provided by the customer. This contact needs only to be low voltage proof.

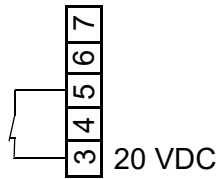

**Customer-provided contact  
for 1-step operation**

### 11.3.2 Operation with an active humidity sensor or external controller

When driving the steam humidifier by an active r.h. sensor or external controller (e.g. a PLC), control signals in the range of 0...10 V, 0...20 mA or 0...140 Ohm may be applied. Each one of the signal types is connected to a dedicated terminal (see „Unit control“ chapter, section „Main PCB connections“). Reference is always to terminal 4, GND.

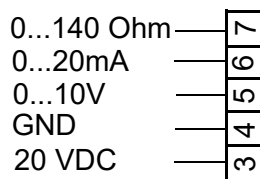

**Terminals for  
control signals**

#### **Please note**

Active r.h. sensors need an external supply voltage. For that purpose, terminal 3 has a +20 VDC offering.


### Humidity sensor with higher current requirement

The circuit board provides a maximum of 30mA. If this is not sufficient for the connected humidity sensor, use the option of a transformer to supply the sensor with power.

### 11.3.3 Wiring for control signal and safety (interlock) system for multiple units


In the case of multiple units, separate humidifiers work together. The control signal and the safety (interlock) system are connected to the master unit as described above. In addition, connecting cables are established between the guiding unit and the succeeding unit(s) (provided on-site). These provide the succeeding unit with a control signal from the guiding unit and the transmitted (potential free) safety (interlock) system.

The wiring for the control signal and the safety (interlock) system must be implemented as follows for multiple units:

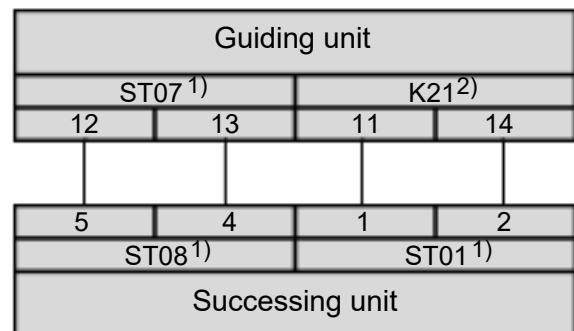


1) „ST0x“ designates connector plugs on the mainboard

2) „K21“ is the relay used for the connection of the succeeding unit

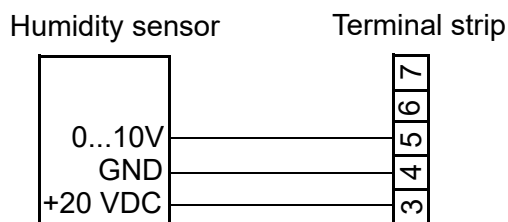



**Exemplary 0...10V humidity  
sensor connection**

## 11.4 Wiring Diagrams SLE

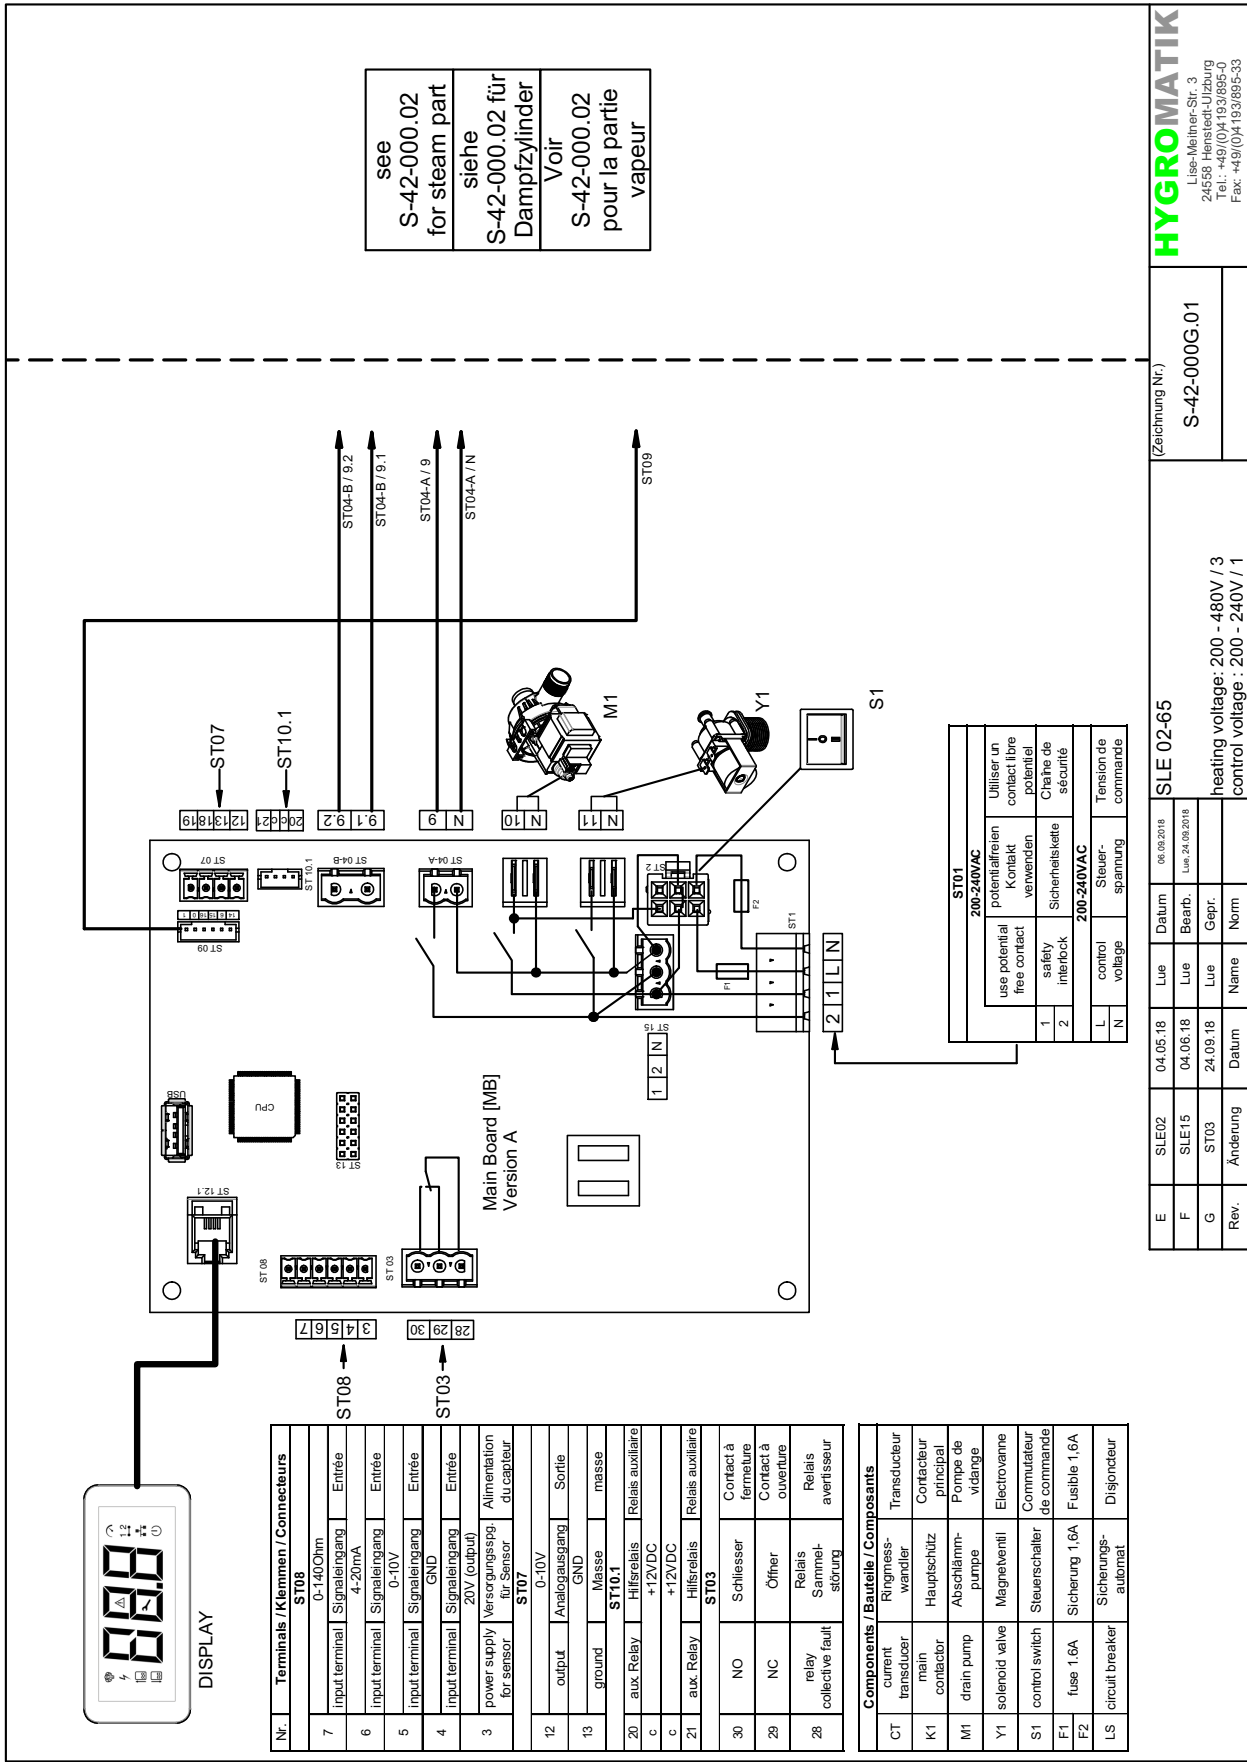



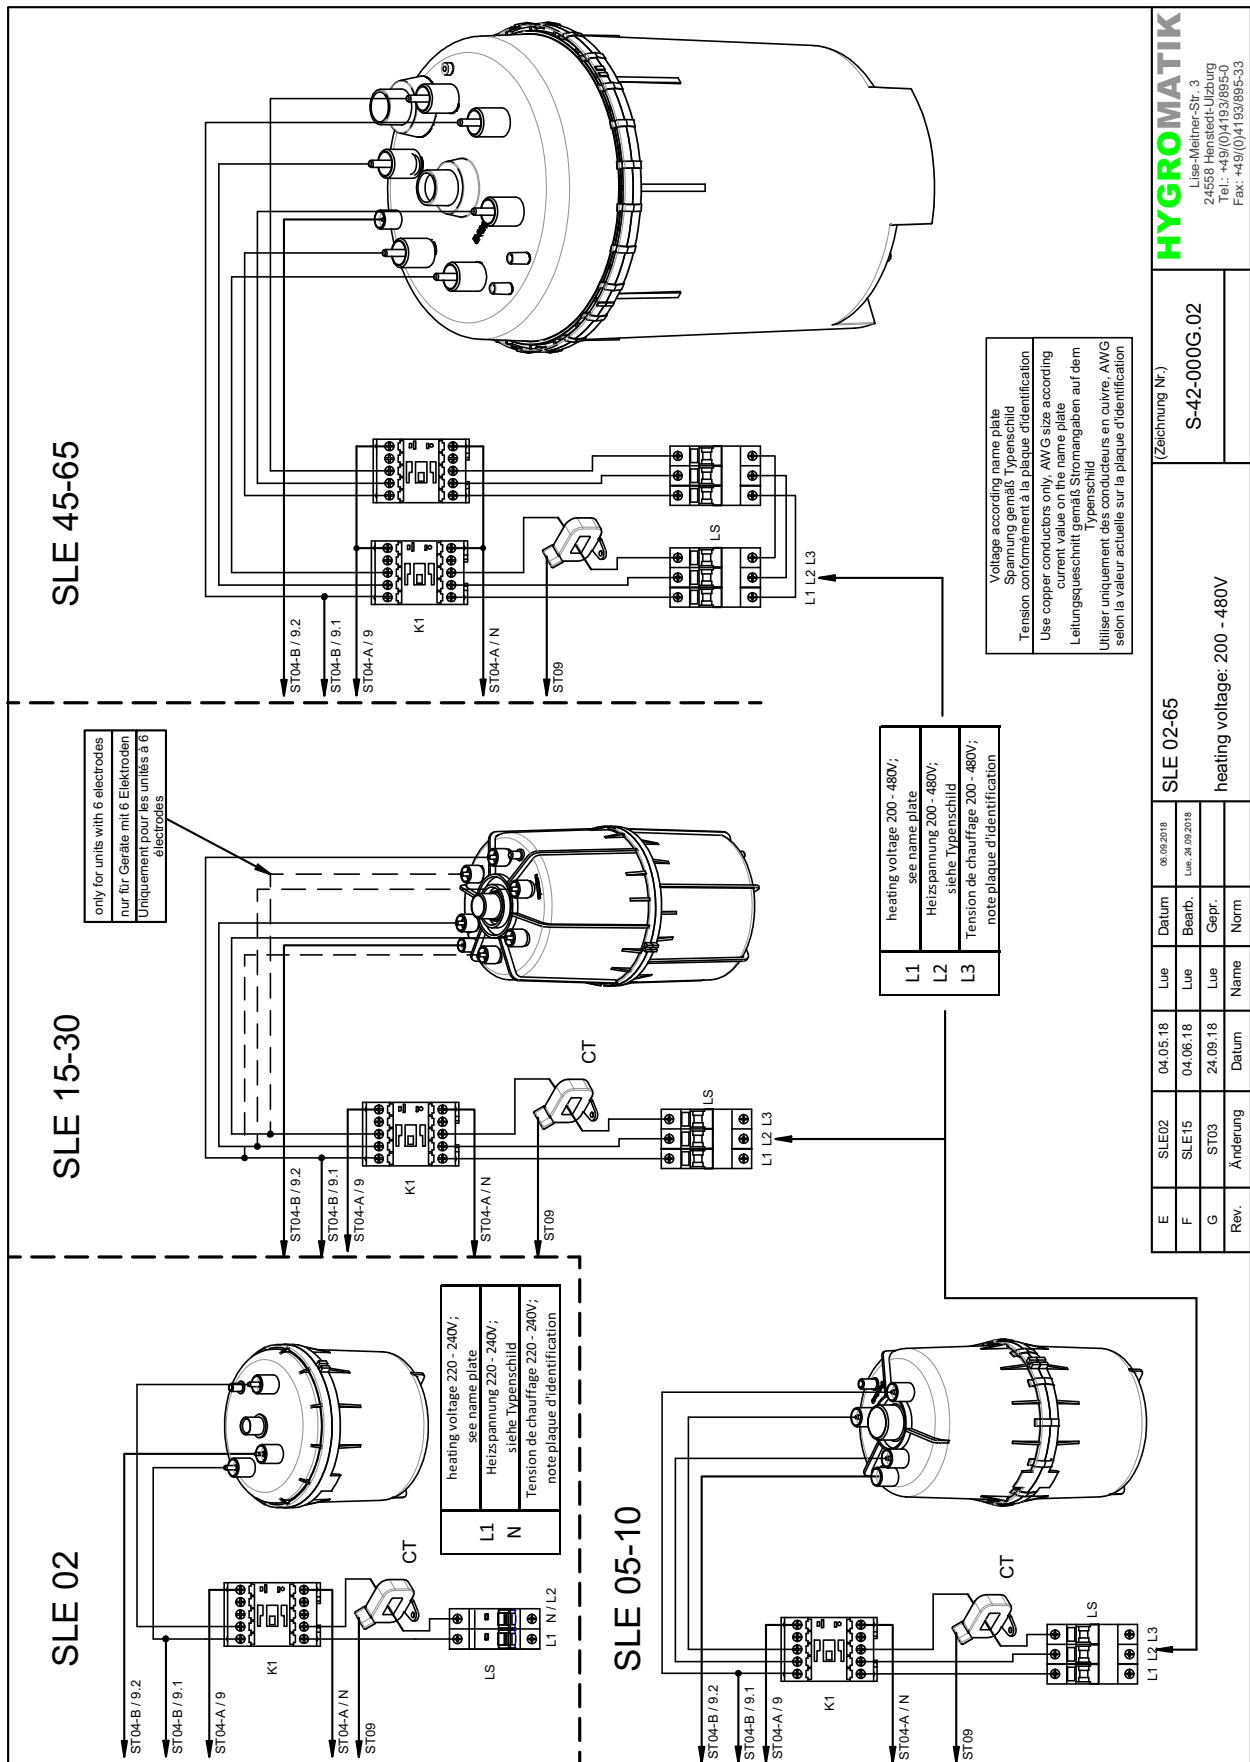

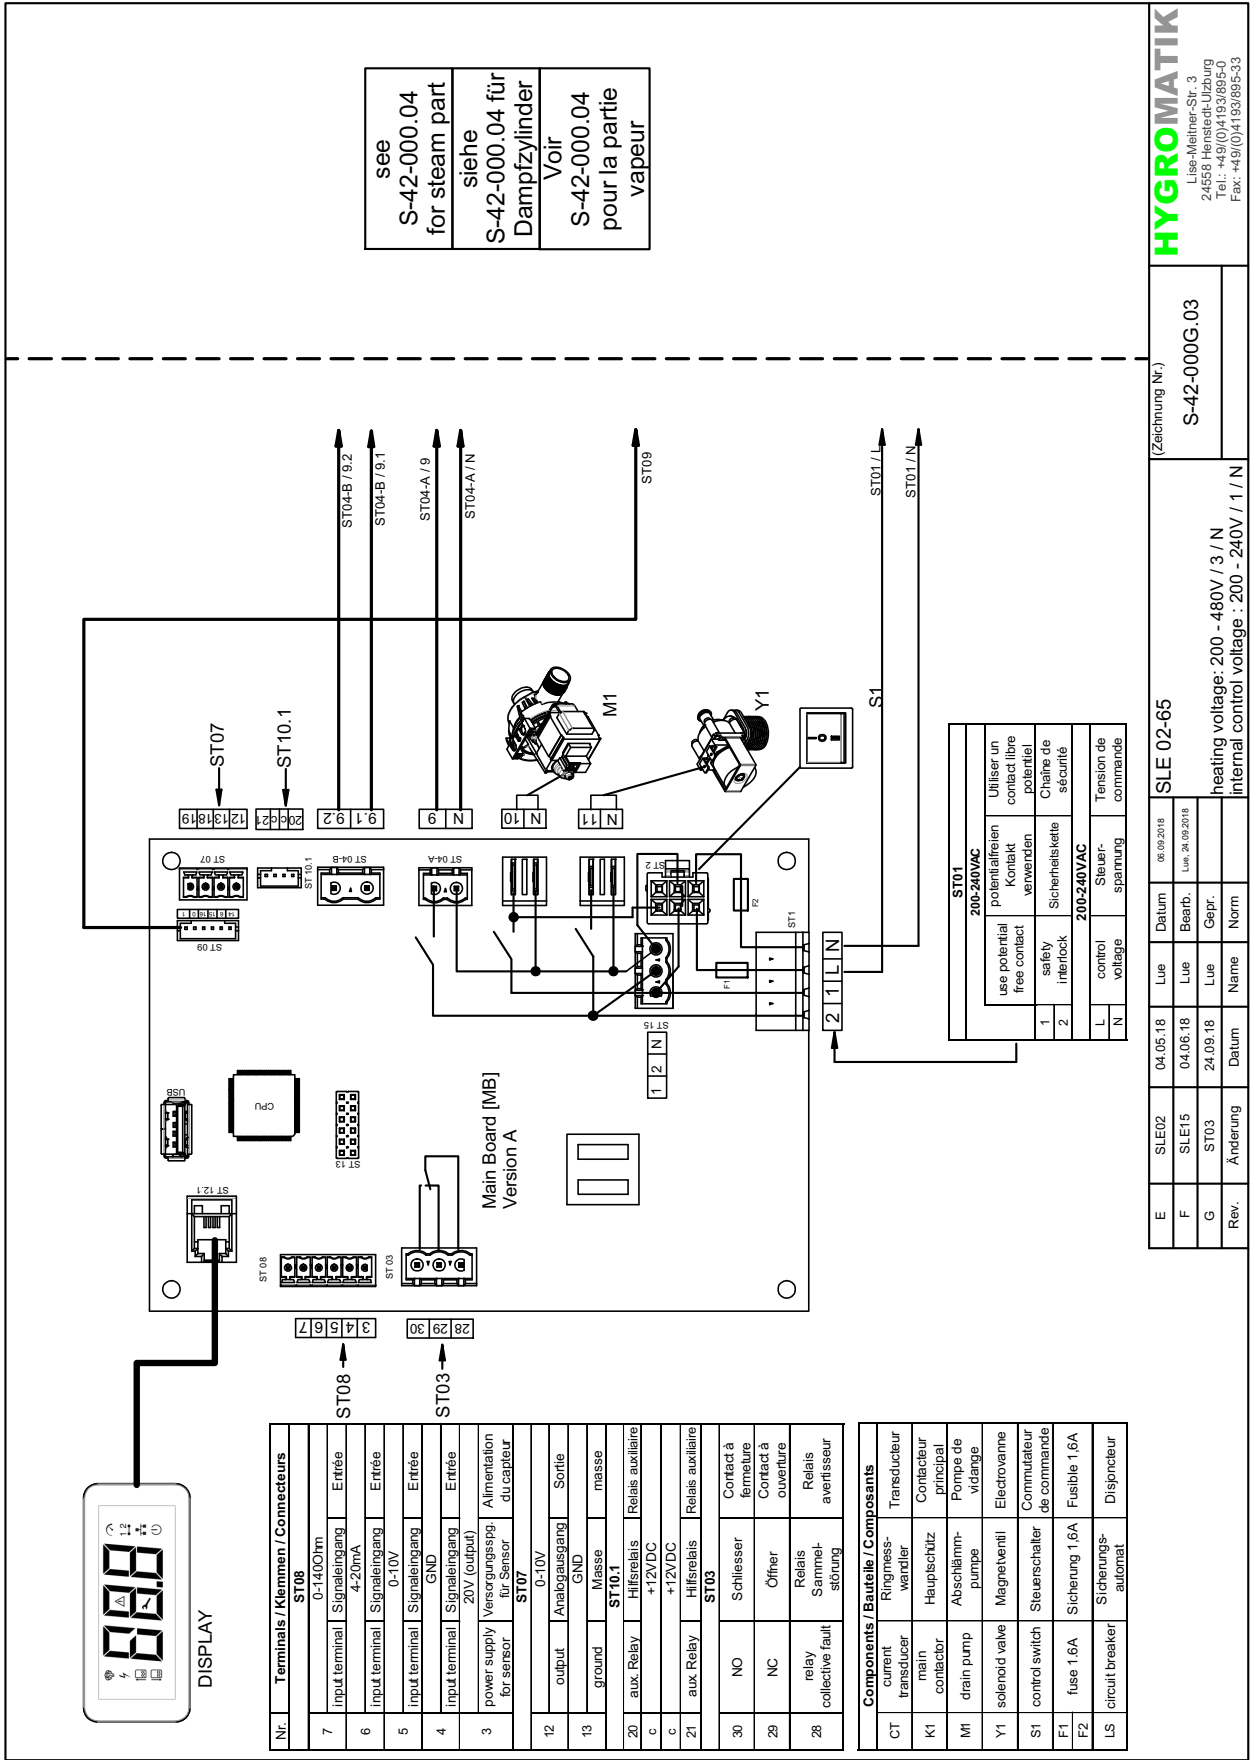


**HYGROMATIK**  
Lisa-Meines Str. 3  
24558 Hensched-Urburg  
Tel.: +49(0)4193/895-0  
Fax: +49(0)4193/895-33

(Zeichnung Nr.)  
**S-42-000G.03**

**SLE 02-65**  
heating voltage: 200 - 480V / 3 / N  
internal control voltage : 200 - 240V / 1 / N

|      |          |          |      |        |            |            |            |
|------|----------|----------|------|--------|------------|------------|------------|
| E    | SLE02    | 04.05.18 | Lue  | Datum  | 06.09.2018 | Datum      | 06.09.2018 |
| F    | SLE15    | 04.06.18 | Lue  | Bearb. | Lue        | 24.09.2018 |            |
| G    | ST03     | 24.09.18 | Lue  | Gepr.  |            |            |            |
| Rev. | Änderung | Datum    | Name | Norm   |            |            |            |

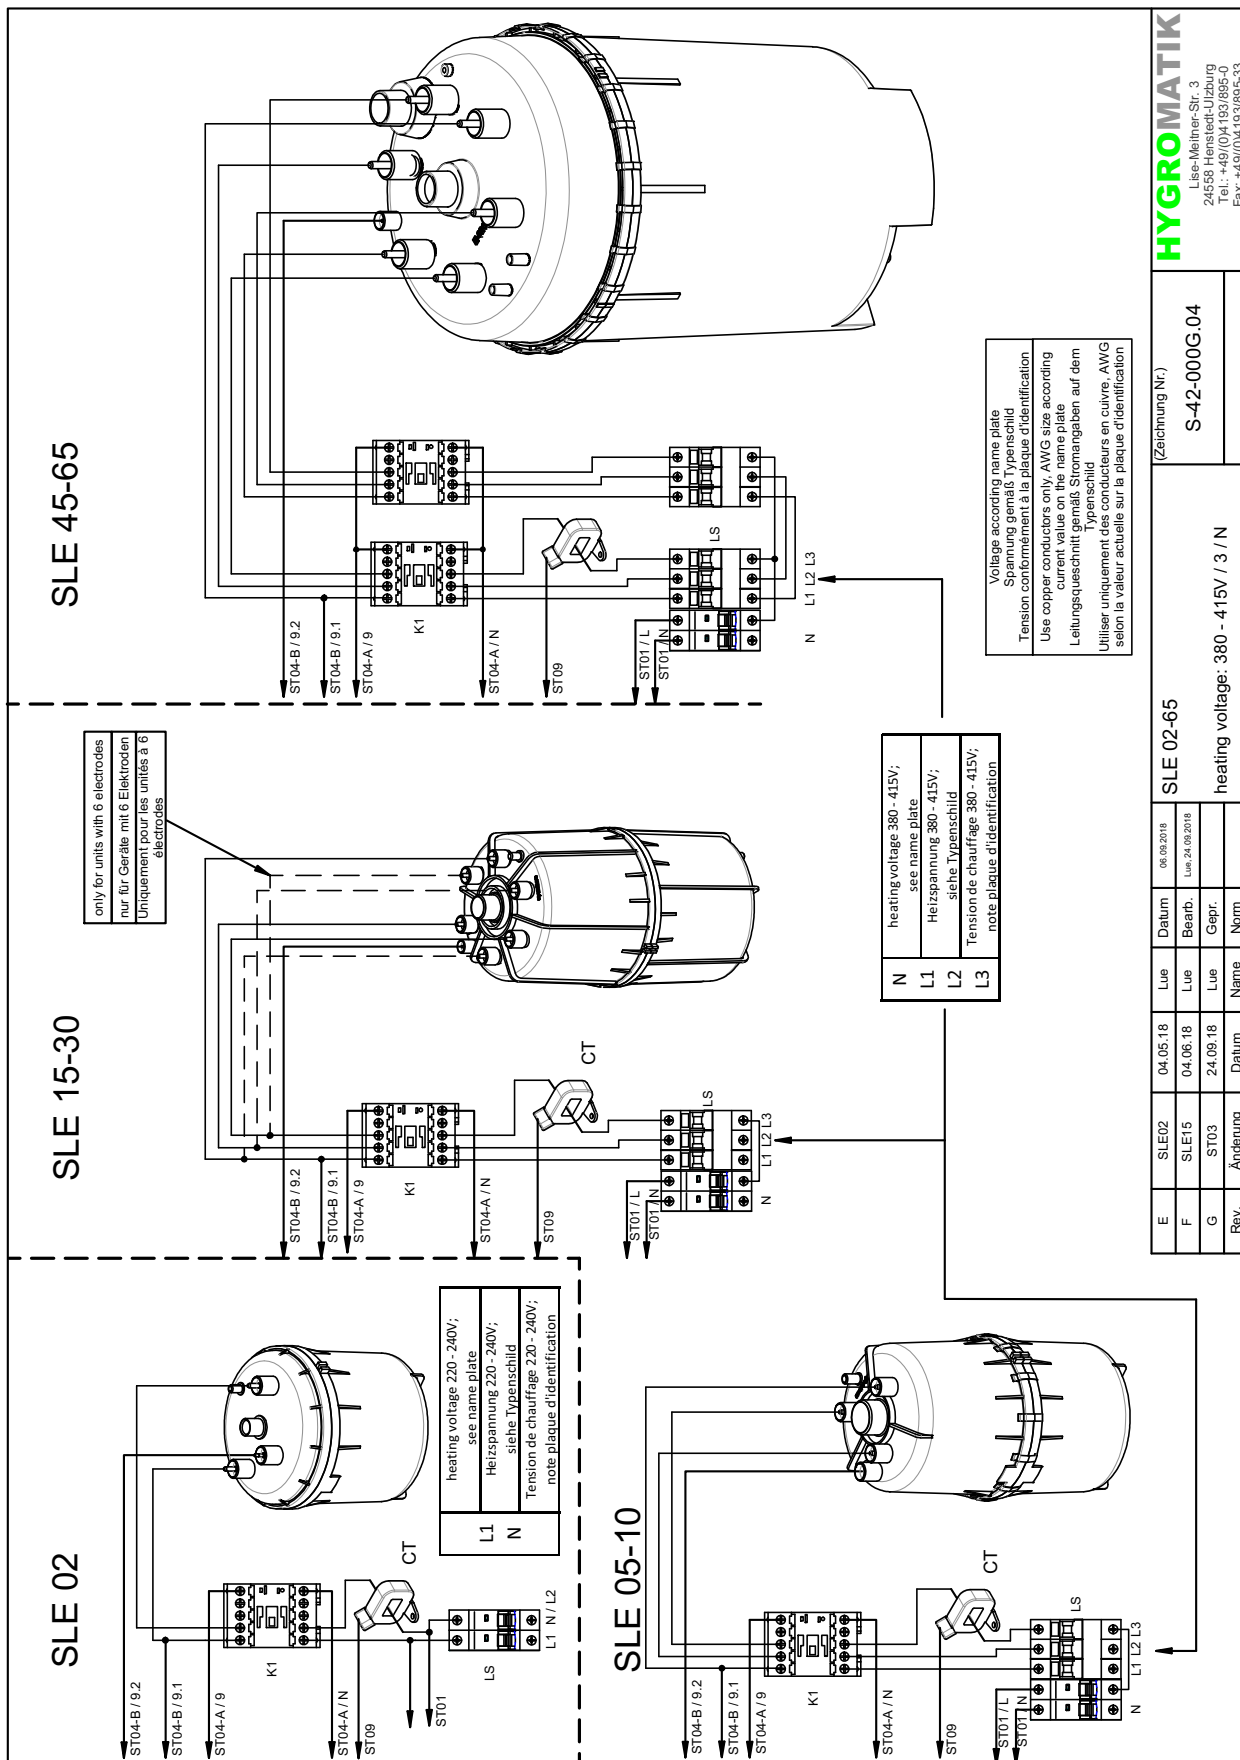

**HYGROMATIK**  
 Lise-Malner-Str. 3  
 24558 Henstedt-Utzburg  
 Tel.: +49/(0)4193/895-0  
 Fax: +49/(0)4193/895-33

## 11.4.1 Mainboard inputs and outputs

### Customer side interfaces

#### Inputs

##### ST08:

| Possible external controller signals |               |
|--------------------------------------|---------------|
| 0(2) - 5 V DC                        | min. 0,1 mA** |
| 0(2) - 10 V DC                       | min. 0,2 mA** |
| 0(4) - 20 V DC                       | min. 0,3 mA** |
| 0(4) - 20 mA DC                      | min. 3 V**    |
| 0 - 140 Ohm*                         |               |

\* only for operating mode external controller

\*\* minimum power of the control signal

#### Outputs

##### ST03:

- Potential-free programmable NC and NO contacts, (factory assignment is „collective fault“)

##### ST10.1:

- Connection option für 2 additional relays of the top head type (K20, K21) (ordering option).

##### ST07:

Control signal 0...10 VDC (max. 8 mA)

##### ST08:

- +20 VDC humidity sensor supply voltage (max. 20 mA)

##### ST15:

- Tap for 1,2 and N (unsecured) for customer use


##### USB:

Connection for USB stick for use as a data logger and for parameter updates

### Power supply and safety interlock

##### ST01:

- 4-pin plug connection with screw terminal adaptor for L and N power connection and safety interlock („Terminals 1/2“)

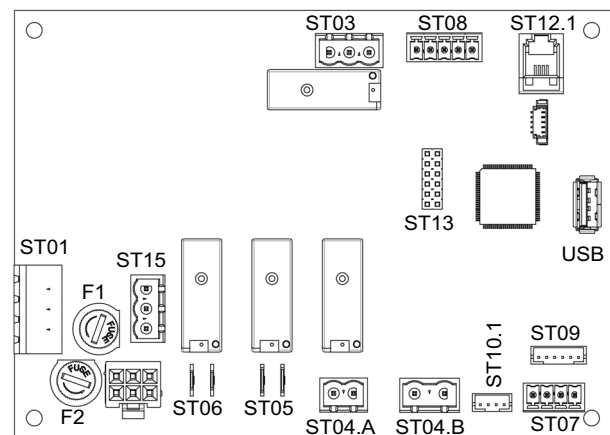

#### Inputs

##### ST09 (only for heater steam humidifiers):

- Filling level sensor

##### ST09 (only for electrode steam humidifiers):

- Current transducer connection

##### ST04-B (only for heater steam humidifiers):

- Galvanically isolated thermo switch input (via optical coupler)
- Dielectric strength 600 VAC

##### ST04-B (only for electrode steam humidifiers):

- Galvanically isolated sensor electrode input (via optical coupler)
- Dielectric strength 600 VAC

#### Outputs

##### ST04-A:

- Main contactor(s)

##### ST05:

- Blow-down pump

##### ST06:

- Inlet solenoid valve

##### ST07 (only for heater steam humidifiers):

- Solid state relay control signal (PWM), 20 mA max.

#### Bidirectional

##### ST12.1:

- Control panel serial interface

##### ST 13:

- RS485 interface adapter PCB socket

## 11.5 Control operation



### 11.5.1 Principal user guidance

On powering up the steam humidifier, the software version is shown in the display for a few seconds. In normal operation the display then shows actual steam output as a standard display. When a key is pressed the first reading in a list of reading and input values is output. The complete list may be visualized by scrolling using the „▲/▼“ keys. Control-wise, the unit is in „user level“ (see next section).

By means of inputting a 2-digit code, access to „Provider level“ is possible (for input code, see table in section „Provider level submenus and relating parameters“). The provider level parameters are functionally grouped in submenus (1) to (6). The code input is reset to its standard („000“), should no keystroke occur within 3 minutes.

### 11.5.2 Menu structure

#### Overview on menu structure

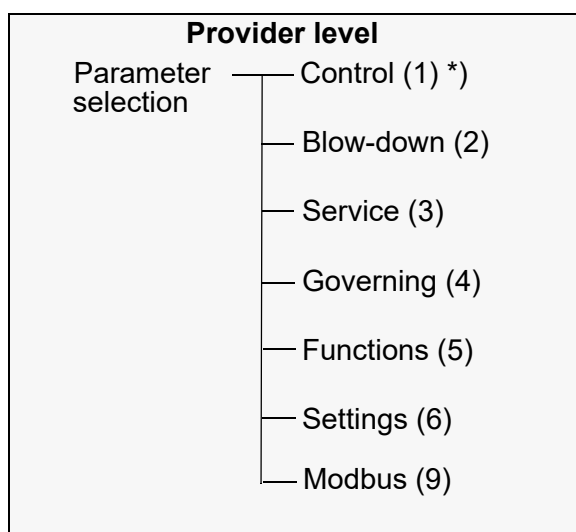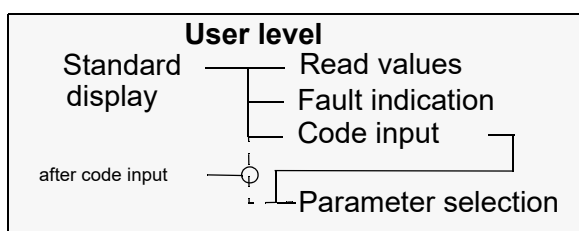

\*) numbers in parenthesis are group numbers

#### User level

From standard display (actual steam output), user level may be accessed by pressing any key on the control panel. On user level, among other information, reading values r01 to r15 are available. After a certain time span with no keystroke, control switches the display back to standard display. Factory setting for this timeout is „10 minutes“.

Besides showing the reading values, user level also features „P00“ for code input allowing provider level access (s. „Menu tree section“).

#### Provider level

On provider level, the control parameters of functional groups (1) to (6) (s. „Overview on menu structure“) may be individually changed. A tabular list of the provider level parameters and a more detailed description may be found in the sections „Provider level submenus and their parameters“ and „Detailed parameter descriptions“, respectively, further down in this chapter.

#### Menu tree

The detailed menu tree with all of the reading values and settable values as well as all of the parameters is depicted in the next section.

### 11.5.3 Menu tree

#### User level

|  |
|--|
| r01 Status                                 |
| r02 Error                                  |
| r03 Act. steam output [kg/h] <sup>1)</sup> |
| r04 Act. steam output [lb/h] <sup>2)</sup> |
| r05 Actual current [A] <sup>6)</sup>       |
| r06 Filling level [mm] <sup>7)</sup>       |
| r07 Internal demand [%]                    |
| r08 External demand [%]                    |
| r09 Power limitation [%]                   |
| r10 Set point r.h. [%] <sup>3)</sup>       |
| r11 R.h. actual value [%] <sup>3)</sup>    |
| r12 External signal [%]                    |
| r13 V-Signal                               |
| r14 mA-Signal                              |
| r15 Ω-Signal                               |



P00 Code level (2 digits)



PAr Parameter selection<sup>4)</sup>

5)


- <sup>1)</sup> only when SI system was selected  
<sup>2)</sup> only when imperial system was selected  
<sup>3)</sup> only when „PI controller“ was selected  
<sup>4)</sup> only shown after code „10“ input  
<sup>5)</sup> direct access when on provider level  
<sup>6)</sup> only for electrode steam humidifiers  
<sup>7)</sup> only for heater steam humidifiers  
<sup>8)</sup> from software 13200 no longer in menu 5 „functions“ but in menu 9 „modbus“

designates scrolling with control panel keys


|               |
|---------------|
| 9.1. Address  |
| 9.2. Baudrate |
| 9.3. Parity   |
| 9.4. Stopbits |

9- Modbus  
from SW-Version  
13200

#### Provider level<sup>4)</sup>

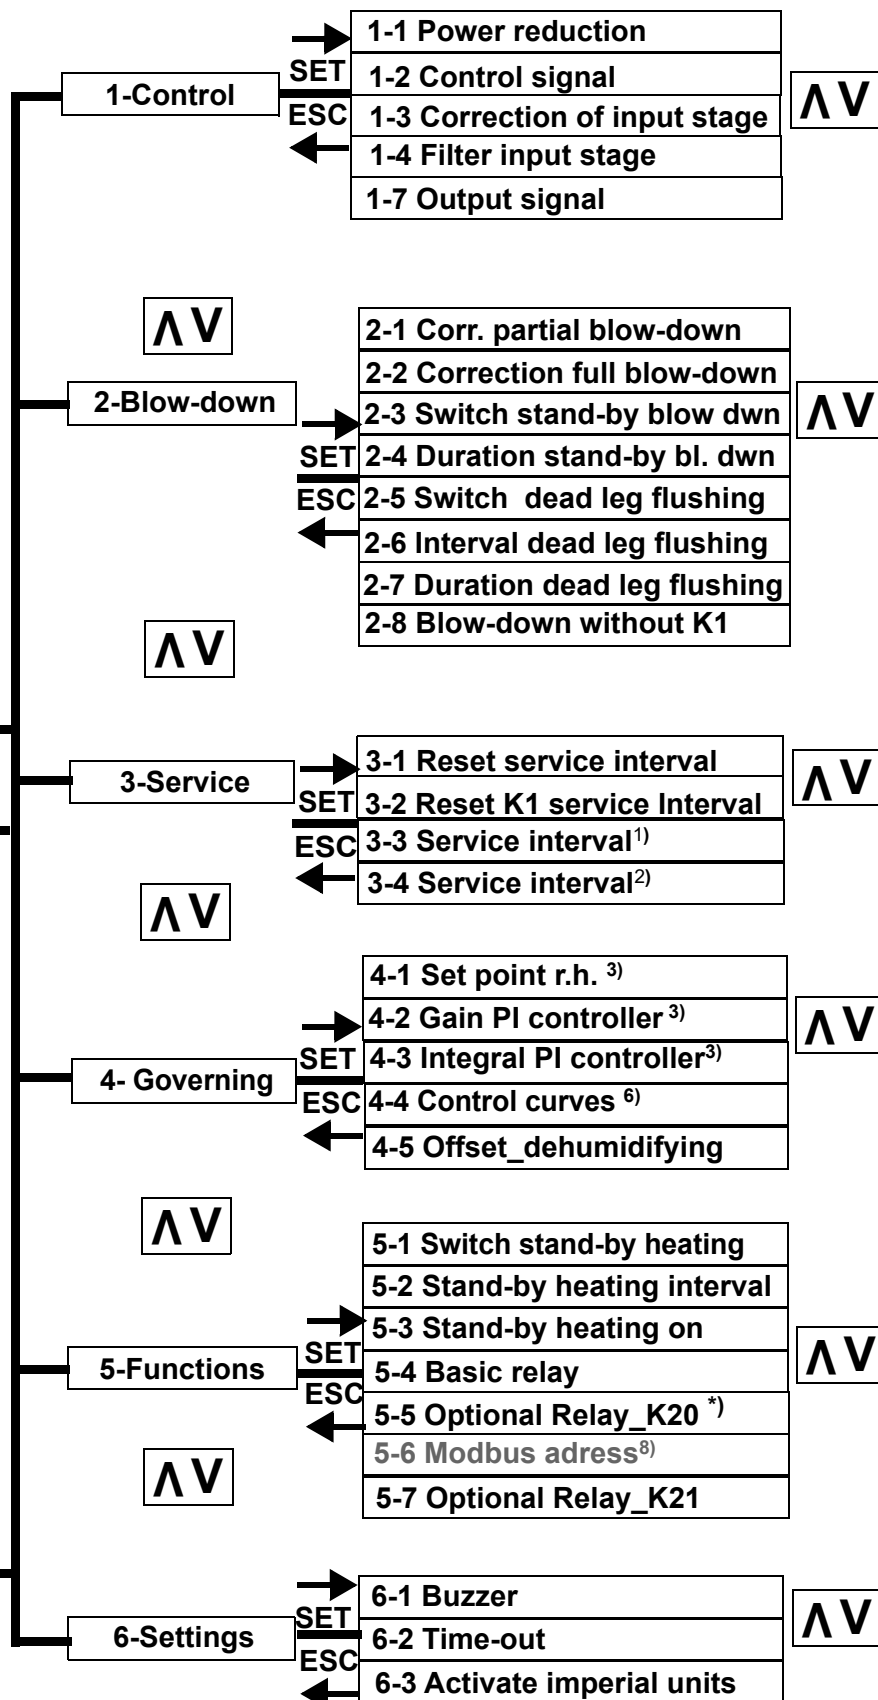

## 11.6 The control panel

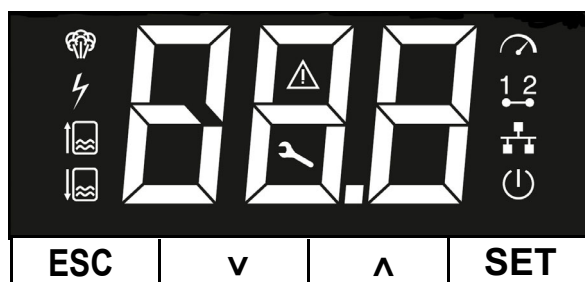

The control panel comprises 3 sections:

- the ESC, SET, **^**, **V** control keys
- the 3-digit 7-segment display
- dedicated icons for operating status indication

### Please note

A flashing icon always indicates a faulty situation!

**Exception:** When switching the unit on, the complete display flashes 4 times. Then, the power-on-LED blinks while the device self test is run.

The **control keys** enable navigation in the menus and submenus. Their function is as follows:

„ESC“: cancellation or return to previous level

„**^**/**V**“: move up/down within a menu, submenu or selection list.

„SET“: accept and store a selected setting.

The 3-digit **7-segment-display** serves for outputting of operational and input data as well as error code presentation. When control software expects an input the digits are blinked. Display semantics are determined by lightening-up of one or more icons related to a specific operational situation or device control environment.

Icons state table

|  | permanently lit                                      | flashing  |
|--|--|---|
|  | Steam production active                              | Cylinder full<br><u>In conjunction with error icon:</u><br>Fault steam production |
|  | Main contactor active                                | Fault main contactor  |
|  | Filling active                                       | Fault filling   |
|  | Blow-down active                                     | Fault blow-down   |
|  | (State not possible)                                 | Error s. error codes  |
|  | Maintenance required                                 | (State not possible)  |
|  | Demand   | Fault control signal  |
|  | Safety interlock closed                              | (State not possible)  |
|  | Virtual safety interlock closed by software enabling | (State not possible)  |
|  | Control active                                       | Control self test after unit start  |

---

## 11.7 Navigation within a menu

### User level entry

Standard display during normal operation is actual steam output in the selected dimension ([kg/h] or [lbs/h], respectively). By pressing any key, user level comprising a reading value index (pointer) selection level and the reading values as such is entered.

„r01“ is displayed indexing the first reading value.

### Reading value display

By scrolling using the „▲/▼“ keys, the reading value indexes „r01“ to „r15“, code entry „P00“ (s. below) and parameter selection „PAr“\*) may be addressed. The actual reading value content is output on pressing the SET key after selection of one of the reading value pointers r01 to r15.

Use the ESC key for return to the reading value index level that allows for addressing further reading values.

„P00“ allows for inputting a code for provider level entry that supports changing of the parameters (s. next section). This function is not meant for usage by the steam humidifier user.

\*) „PAr“ is only presented when a „10“ was input as the „P00“ setting value for access to provider level. When „PAr“ is confirmed with the SET key, parameter group selection is supported without the need for inputting the access code again.

### Provider level code entry and setting a parameter

- » Using the „▲/▼“ keys, scroll until „P00“ is displayed and confirm with the SET key. „00“ is displayed.
- » Increase the display to „10“ using the „▲/▼“ keys and confirm with the SET key („10“ is the access code for the provider level). „1-“ is now displayed for selection of one of the parameter groups (1) to (6).
- » Confirm parameter group (1) with the SET key or make an other selection with the „▲/▼“ keys and then confirm. The display will now show a „1“ in the right digit position for addressing the parameter index (e.g., „2-1“).
- » Confirm selection with the SET key or vary selection with the „▲/▼“ keys and then confirm.

Use the ESC key for return to the previous input level.



---

## 11.8 Tabular representation of reading value list and provider level submenus

For a detailed description, pls. refer to the respective sections within this chapter.

### 11.8.1 The reading value list

From normal operation, the user may access the reading value index „r01“ (Status) by pressing any key.

By scrolling using the „**▲/▼**“ keys the reading and setting values indicated in the table below may be addressed. To output the value content, the SET key must be pressed first.

| Reading value index | Description  |
|---------------------|--|
| r01                 | Status   |
| r02                 | Fault  |
| r03                 | Actual steam output [kg/h]   |
| r04                 | Actual steam outpt [lb/h] (only when imperial units were selected) |
| r05                 | Actual current [A]<br>(only for electrode steam humidifiers)       |
| r06                 | Filling level [mm]<br>(only for heater steam humidifiers)          |
| r07                 | Internal demand [%]  |
| r08                 | External demand [%]  |
| r09                 | Power limitation [%]   |
| r10                 | Set value r.h. [%] (only when PI controller was selected)          |
| r11                 | Actual value r.h. [%] (only when PI controller was selected)       |
| r12                 | External signal [%]  |
| r13                 | V-Signal   |
| r14                 | mA-Signal  |
| r15                 | Ω-Signal   |
| r16                 | Service_Status   |
| P00                 | Code level („0“, „10“)   |
| PAr                 | Parameter group selection  |

---

## 11.8.2 Provider level submenus and relating parameters

Detailed parameter descriptions may be found in the section „Detailed parameter description“ further down in this chapter. The „Setting options“ column indicates the presettings available or the range of values to be chosen from. „Fs“ stands for „Factory setting“.

### Submenu „Control“ (Group1)

| Par. | Denomination                | Setting options   | Code |
|------|-----------------------------|---|------|
| 1-1  | Steam output max. [%]       | 25 ... 100<br><b>Fs*) = 100</b>   | 10   |
| 1-2  | Control signal              | 0= not valid<br>1= ext. controller, 0 ... 10 V<br>2= ext. controller, 0 ... 20 mA<br>3= ext. controller, 0..140 Ω<br>4= PI controller, 0 ... 10 V<br>5= PI controller, 4 ... 20 mA<br>6= PI controller, 0 ...140 Ω<br>7= 1-step 8= Modbus <b>Fs = 1</b> | 10   |
| 1-3  | Correction input stages [%] | -5.0 ... +5.0<br><b>Fs = 0</b>  | 10   |
| 1-4  | Filter input stage          | 0=light, 1=strong<br><b>Fs = 0</b>  |      |
| 1-7  | Output signal               | 0= Off<br>1= Actuator signal_extern<br>2= Actuator signal_intern<br>3= Humidity actual value  |      |

\*) Fs = Factory setting

---

### Submenu „Blow-down“ (Group 2)

| Par. | Denomination   | Setting options                | Code |
|------|--|--------------------------------|------|
| 2-1  | Correction partial blow-down                                   | -5...+5<br><b>Fs = 0</b>       | 10   |
| 2-2  | Correction full blow-down                                      | -5...+5<br><b>Fs = 0</b>       | 10   |
| 2-3  | Switch stand-by blow-down                                      | 0=off, 1=on<br><b>Fs = 1</b>   | 10   |
| 2-4  | Waiting time stand-by blow-down [h]                            | 0.1...48.0<br><b>Fs = 24.0</b> | 10   |
| 2-5  | Switch dead leg flushing                                       | 0=off, 1=on<br><b>Fs = 0</b>   | 10   |
| 2-6  | Interval dead leg flushing [h]                                 | 0.1...96.0<br><b>Fs = 24.0</b> | 10   |
| 2-7  | Duration deadleg flushing [s]                                  | 1...600<br><b>Fs = 90</b>      | 10   |
| 2-8  | Blow-down without K1<br>(only for electrode steam humidifiers) | 0=no, 1=yes<br><b>Fs = 0</b>   | 10   |

### Submenu „Service“ (Group 3)

| Par. | Denomination                        | Setting options                           | Code |
|------|-------------------------------------|---|------|
| 3-1  | Reset service interval steam amount | 0=no, 1=yes<br><b>Fs = 0</b>              | 10   |
| 3-2  | Reset K1 service interval           | 0=no, 1=yes<br><b>Fs = 0</b>              | 10   |
| 3-3  | Service interval [t]                | 0...90.0<br><b>Fs = device dependant</b>  | 10   |
| 3-4  | Service interval [tn. sh.]          | 0 ...90.0<br><b>Fs = device dependant</b> | 10   |

### Submenu „Governing“ (Group 4)

| Par. | Denomination  | Setting options   | Code |
|------|---|---|------|
| 4-1  | Set point r.h. [%] (PI controller only)                 | 5...99.9<br><b>Fs = 50.0</b>                                      | 10   |
| 4-2  | Gain [%] (PI controller only)                           | 0.1...99.9<br><b>Fs = 5.0</b>                                     | 10   |
| 4-3  | Integral [%] (PI controller only)                       | 0...100.0<br><b>Fs = 10</b>                                       | 10   |
| 4-4  | Control curve<br>(only for electrode steam humidifiers) | 0 = energy optimisation<br>1 = load optimisation<br><b>Fs = 1</b> | 10   |
| 4-5  | Offset_dehumidifying                                    | Hysteresis for dehumidifying [%]<br><b>Fs=10</b>                  | 10   |

### Submenu „Functions“ (Group 5)

| Par. | Denomination                    | Setting options  | Code |
|------|---------------------------------|--|------|
| 5-1  | Switch stand-by heating         | 0=off, 1=on<br><b>Fs = 0</b>   | 10   |
| 5-2  | Interval stand-by heating [min] | 1...999<br><b>Fs = device dependant</b>  | 10   |
| 5-3  | Stand-by heating [s]            | 1...999<br><b>Fs = device dependant</b>  | 10   |
| 5-4  | Basic relay                     | 0 = collective fault<br>1 = stand-by<br>2 = no demand<br>3 = humidifying<br>5 = remote off<br>30 = filling off<br>31 = filling on<br>37 = HyCool<br>60 = Blow-down off<br>61 = Blow-down on<br>62 = Partial blow-down<br>63 = Full blow-down<br>66 = max. level<br>67 = Stand-by blow-down<br>68 = Dead leg flushing<br>69 = Start-up blow-down<br>270 = Collectice Service<br><b>Fs = 0</b> |      |
| 5-5  | Relay_K20                       | same as for basic relay<br><b>Fs = 270</b>   | 10   |
| 5-6  | Modbus address                  | 0..255<br><b>Fs = 1</b>  | 10   |
| 5-7  | Relay_K21                       | same as for basic relay<br><b>Fs = 270</b>   |      |

### Submenu „Settings“ (Group 6)

| Par. | Denomination                                | Setting options                                     | Code |
|------|---|---|------|
| 6-1  | Buzzer                                      | 0=off, 1=on<br><b>Fs = 0</b>                        | 10   |
| 6-2  | Time-Out (return to standard display) [min] | 0 ... 60<br><b>Fs = 2</b>                           | 10   |
| 6-3  | Activate imperial units                     | 0 = SI units<br>1 = imperial units<br><b>Fs = 0</b> | 10   |

---

## 11.9 Exemplary variation of a parameter setting

Example: Control signal is to be changed from „Ext. controller, 0 ...10V“ („1-2“ = „1“) to „PI controller, 0 ...10V“ („1-2“ = „4“).

### **Please note**

The steps below make an essential change to a control parameter. If this is not intended, be sure to reestablish the original setting after changing it for exercising purposes.

- » In normal operation, press any key to access the reading value list. „r01“ is displayed.
- » Scroll from „r01“ to „P00“ (Code input).
- » Press SET key. Display now shows a flashing „Zero“ for code level „0“ (user level) and input readiness.
- » Using the „▲/▼“ keys, change the display to „10“.
- » Press the SET key. Provider level is now entered. „1-“ is displayed as the first parameter group to be changed.
- » Since the parameter to be changed is in this group already, group confirmation can be made immediately with the SET key.
- » Scroll with the „▲/▼“ keys to the „1-2“ position and confirm with the SET key. The parameter setting „1“ (external controller, 0...10 V) is displayed and may be changed.
- » Change the setting to „4“ (PI controller, 0...10 V) with the „▲/▼“ keys and confirm with the SET key.
- » Pressing the ESC key twice brings the display back to standard display (i.e. actual steam output).

These steps are exemplary. In the same way, selection and variation of all of the other parameters may be accomplished.

## 11.10 Detailed description of the user level reading values and settings

| Reading value           |      | Explanation               |   |
|-------------------------|------|---------------------------|---|
| r01 Status              | Code | Denomination              | Description   |
| Main functions category | 00   | Start                     | Humidifier is in startup phase after a cold start. The Power-ON-LED flashes.  |
|                         | 01   | Stand-by                  | Safety interlock is open (safety interlock icon in display is not lit). No steam is produced. In case of the safety interlock being opened by software, status „05“ (Remote off) is displayed instead of „01“.  |
|                         | 02   | No demand                 | Demand from external controller or active humidity sensor is below switch-on threshold of the steam humidifier. No steam is produced (while the safety interlock is closed). The demand icon in the display is not lit.   |
|                         | 03   | Humidify                  | Steam is produced when demand is generated by a Hygrostat or an external controller. With a PI controller setting, an input signal from the active humidity sensor is required. (Safety interlock must be closed).  |
|                         | 05   | Remote off                | Safety interlock was opened via Modbus (e.g. by a building control system instruction).   |
|                         | 06   | No Modbus                 | When 1-2 = „Modbus“ is selected, demand messages are required on a regular base. In case of no demand within a 20 s time frame, „No Modbus“ is shown as the device status and steam production is stopped (for details, see dedicated Modbus documentation available from HygroMatik GmbH). |
|                         | 07   | Stand-by heating interval | When in stand-by heating mode, status code 07 is displayed during steam production.   |
|                         | 08   | Stand-by heating pause    | When in stand-by heating mode, status code 08 is displayed when no steam is produced.   |
| Filling category        | 30   | Filling                   | Filling is active via solenoid valve. The filling icon in the display is lit.   |

| Reading value               |    | Explanation   |   |
|-----------------------------|----|---|---|
| Blow-down category          | 60 | Initial blow-down   | After switching the device on, a blow-down sequence is run with the parameter set for partial blow-down.  |
|                             | 61 | Partial blow-down   | A partial blow-down is run in order to achieve cylinder water concentration reduction. In order to dilute the concentration of the cylinder water, the control performs regular partial blow-downs. The blow-down icon in the display is lit.   |
| Blow-down category (contd.) | 62 | Full blow-down  | Full blow-down is run (steam cylinder is completely drained). The blow-down icon in the display is lit.   |
|                             | 63 | Dilution<br>(only for electrode steam humidifiers)              | A partial blow-down is run (with the parameter set for partial blow-down) due to a water conductivity too high. The blow-down icon in the display is lit.   |
|                             | 64 | Overcurrent blow-down<br>(only for electrode steam humidifiers) | An overcurrent blow-down is run since an electrode current too high was detected by the device. Reducing water level also reduces electrode current. The blow-down icon in the display is lit.  |
|                             | 65 | Max. level<br>(only for heater steam humidifiers)               | Max. allowable water level in steam cylinder was overrun.   |
|                             | 66 | Stand-by blow-down  | In case of a safety interlock open for a longer period of time, a full blow-down is run automatically after a time preset in order to avoid stagnant water in the steam cylinder. The blow-down icon in the display is lit.   |
|                             | 67 | Dead leg flushing   | Special blow-down mode for flushing dead leg tubing. Solenoid valve and blow-down pump are activated simultaneously in case of a no demand situation for a certain period of time. The blow-down icon in the display is lit.  |
|                             | 80 | Partial blow-down waiting                                       | Device will start partial blow-down with next filling step.   |
|                             | 81 | Full blow-down waiting  | Device will start full blow-down with next filling step.  |
| Monitoring category         | 90 | Cylinder full<br>(only for electrode steam humidifiers)         | On detection of a an electrical potential at the sensor electrode, cylinder full is reported. In this situation cylinder water level is so high that an electrical bridge between one of the power electrodes and the sensor electrode has built up. The steam icon in the display flashes. |

| Reading value  |     | Explanation   |   |
|--|-----|---|---|
| Service category   | 271 | Service steam amount  | The service threshold for the steam amount produced as preset in 3-3 (SI units) or 3-4 (imperial units) was exceeded. The service icon in the display is permanently lit for the time the message is active. The status message may be reset by setting parameter 3-1 to „1“.               |
|  | 272 | Service main contactor K1 switching cycles  | The number of main contactor switching cycles predefined by the manufacturer was met. A main contactor replacement is advisable. The service icon in the display is permanently lit for the time the message is active. For resetting the status message, parameter 3-2 must be set to „1“. |
| Fault category   | 999 | Fault   | A fault was detected. Operation has ceased. An error code may be read out. Some certain faults also make an icon in the display blink.  |
| <b>r02 Error</b><br>(only shown when a fault has occurred)           |     | The error code related to the fault is displayed (steam production is stopped whenever a fault occurs). Error codes are described in the „Trouble shooting“ chapter of this manual. |   |
| <b>r03 Actual steam output</b> (SI units)                            |     | Amount of current steam production value [kg/h]   |   |
| <b>r04 Actual steam output</b> (imperial units)                      |     | Amount of current steam production value [lb/h]   |   |
| <b>r05 Actual current</b><br>(only for electrode steam humidifiers)  |     | Current electrode amperage value [A]  |   |
| <b>r06 Filling level</b><br>(only for heater steam humidifiers)      |     | Filling level [mm] measured by the water level sensor   |   |
| <b>r07 Internal control signal</b>                                   |     | The internal signal for controlling the steam humidifier electrical power delivery is displayed. [%]. This reading is influenced by the control curve and a power limitation preset |   |
| <b>r08 External demand</b><br>(only with ext. controller)            |     | External controller control signal is displayed [%]   |   |
| <b>r09 Power limitation</b>  |     | Power limitation as a percentage of max. output as preset in parameter „1-1“ is displayed [%]   |   |
| <b>r10 Set point r.h.</b> (only when PI controller was preset)       |     | R.h. nominal value as preset in parameter 4-1 is displayed [%]  |   |
| <b>r11 Actual value r.h.</b><br>(only when PI controller was preset) |     | Actual value of r.h. is displayed [%].  |   |
| <b>r12 External signal</b>   |     | External signal [%]   |   |
| <b>r13 V-Signal</b>  |     | Input signal measured at terminal ST805 [V]   |   |



| Reading value                  |             | Explanation                                  |  |
|--------------------------------|-------------|--|--|
| <b>r14 mA-Signal</b>           |             | Input signal measured at terminal ST806 [mA] |  |
| <b>r15 Ω-Signal</b>            |             | Input signal measured at terminal ST807 [Ω]  |  |
| <b>r16 Service_<br/>Status</b> | <b>Code</b> | <b>Bezeichnung</b>                           | <b>Bedeutung</b>   |
|                                | 0           | No message                                   | There is no service message.   |
|                                | 1           | Steam_ amount counter                        | The maintenance interval has expired.  |
|                                | 2           | Cycles_main_ contactor K1                    | The maximum number of operating cycles for the main contactor K1 has been reached (the device can contain several main contactors. „x“ represents the designation number of the main contactor concerned). |
|                                | 3           | Cycles_main_ contactor K2                    | The maximum number of operating cycles for the main contactor K2 has been reached (the device can contain several main contactors. „x“ represents the designation number of the main contactor concerned). |
|                                | 12          | Warning_ - cyl._full (only ELDB)             | The sensor electrode continuously reports a full cylinder level for 60 minutes (possibly electrode wear is very advanced).   |
|                                | 13          | Warning_ pump                                | A performance capability decrease is detected in the area of the blow-down pump and its hosing.  |
|                                | 14          | Warning_ valve                               | A performance capability decrease is detected in the area of the solenoid valve, cylinder base and its hosing.   |
|                                | 30          | Warning_ cylinder_ full_ level               | The sensor electrode continuously signals a full cylinder for 60 minutes (electrode burnout may be far advanced).  |

| Set value                      | Explanation  |
|--------------------------------|--|
| <b>P00 Code level</b>          | Allows provider level access by code input (Code „10“) or limitation to user level (Code „0“). Provider level is exited automatically after 10 mins without a keystroke. |
| <b>PAr Parameter selection</b> | Allows selection of parameter group and of a specific parameter within a group.  |

## 11.11 Detailed parameter descriptions

| Group          | Par. | Denomination               | Description   |
|----------------|------|----------------------------|---|
| <b>Control</b> | 1-1  | Steam output limitation    | Steam output limitation allows scaling down the max. (steam) output within a range of 25 to 100 %, which may be necessary for a better control performance. The actual steam output is determined by the control signal. The steam output can be set to a value between 25% and 100% of nominal output using the steam generation output limitation. The actual steam output released depends on the control signal. Limitation of the steam output may be needed for better control. |
|                | 1-2  | Control signal             | This parameter tells the unit control software what kind of control signal is wired. Also, the control characteristic is defined. These are the setting options:<br><br>1 = external controller, 0...10 V<br>2 = external controller, 0...20 mA<br>3 = external controller, 0...140 Ω<br>4 = PI controller, 0...10 V<br>5 = PI controller, 4...20 mA<br>6 = PI controller, 0...140 Ω<br>7 = 1-step<br>8 = Modbus  |
|                | 1-3  | Correction of input stages | This parameter allows for an active humidity sensor calibration in the range from -5% r.h. to +5% r.h. Using this parameter, you can calibrate the active humidity sensor at terminals 3-5 in a range from -15% RH to +15% RH.  |
|                | 1-4  | Filter input stage         | This parameter allows for switching the damping of the input low pass filter from „light“ to „strong“. With a capacitive humidity sensor, increasing the input damping is meaningful for improving the signal-to-noise ration and for reducing the oscillating tendency.  |
|                | 1-7  | Output_Signal              | This parameter sets the output value for the 0-10V analogue output.<br>0= Off<br>1= Actuator signal_extern<br>2= Actuator signal_intern<br>3= Humidity actual value   |

| Group            | Par. | Denomination  | Description   |
|------------------|------|---|---|
| <b>Blow-down</b> | 2-1  | Correction partial blow-down  | <p>In case of high electrical conductivity of water or excessive maintenance effort, increasing the blow-down frequency may be meaningful. When conductivity is low, however, a lower blow-down frequency may be adequate. To cope with different water qualities, blow-down rates may be adapted within a range of 10 stages (factory presetting is „0“).</p> <p>Increase blow-down rate: settings up to +5.<br/>Decrease blow-down rate: settings up to - 5.</p> <p>A blow-down rate too low will lead to significant wear and tear and will also increase the maintenance effort required.</p> <p><b>Pls. note:</b> a „-5“ setting will shut off blow-down completely!</p> |
|                  | 2-2  | Correction full blowdown  | see correction partial blow-down  |
|                  | 2-3  | Switch stand-by blow-down   | Should steam humidifier operation be prospectively halted for a longer period of time, blowing-down the cylinder water is advisable in order to comply with the VDI 6022 hygiene regulations prescribing the prevention of microbial contamination of residual water. Parameter 2-3 is the switch to activate and de-activate the stand-by blow-down function. When activated, a full blow-down is run after a waiting time that was determined by setting parameter 2-4 to the value in question. For stand-by blow-down to become effective, the unit control switch must remain in the „On“- position („I“).   |
|                  | 2-4  | Waiting time stand-by blow-down   | Determines the waiting time until the cylinder water is fully drained to counteract contamination when no steam is produced for a lengthy period of time (factory setting is 24 hours).   |
|                  | 2-5  | Switch dead leg flushing  | When parameter 2-5 = „1“, for flushing of the supply line, solenoid valve and blow-down pump are simultaneously activated after the time preset in parameter 2-6 and for the duration of time preset in 2-7. In order for this to work, the safety interlock must be closed.  |
|                  | 2-6  | Interval dead leg flushing  | Waiting time [h] when there is no steam production until dead leg flushing is activated; only valid if switch 2-5 = „1“.  |
|                  | 2-7  | Duration dead leg flushing  | Duration of dead leg flushing [s].  |
|                  | 2-8  | Blow-down without main contactor K1<br>(only for electrode steam humidifiers) | This setting could be useful if the power supply line is routed through a sensitive residual-current circuit breaker. During blow-down, leakage currents may flow towards ground through cylinder water. In order to avoid the activation of the leakage sensor circuitbreaker, the main contactor K1 may be switched off during pumping (2-8 = „1“ is designated to „main contactor is switched off during pumping“).  |


| Group  | Par. | Denomination  | Description   |
|--|------|---|---|
| <b>Service</b>   | 3-1  | Reset steam-service interval                          | On finishing maintenance work, the service interval is to be reset (the service icon is blanked if it was illuminated before).After maintenance, reset the service interval as shown below (green LED is still blinking):   |
|  | 3-2  | Reset K1 service interval                             | Main contactor switching cycles are monitored and compared to the life expectancy figure supplied by the part's manufacturer. On a match, reading value r01 is set to „270“ (and the service icon LED flashes). After changing the main contactor, parameter 3-2 must be set to „1“ for a reset of the status message.  |
|  | 3-3  | Steam service interval                                | Unit control monitors the actual steam amount produced and compares it with the service steam amount that was determined by the parameter 3-3 setting. When the two data match, the service icon is lit. Steam humidifier operation is not disrupted.<br><br>Service rate highly depends on water quality (conductivity, hardness) and on the amount of steam produced since the last service. By varying parameter 3-3, the service interval may be adjusted to water quality. |
| <b>Governing</b><br><br>These parameters are only effective when parameter 1-2 (control signal) holds a setting incorporating the PI controller. | 4-1  | Set point r.h.  | Parameter 4-1 determines the r.h. set point for control.  |
|  | 4-2  | Gain PI controller                                    | Sets the PI controller gain (Xp) [%].Boosting PI-controller ( $Xp = 100/E1$ ) [%]   |
|  | 4-3  | Integral PI controller                                | Sets the PI controller resetting time (Xn).Boosting PI-controller ( $Xp = 100/E1$ ) [%]   |
|  | 4-4  | Control curves (only for electrode steam humidifiers) | By setting this parameter, electrode driving may be varied between energy-optimised (4-4 = „0“) and load-optimised (4-4 = „1“). In the first case, when a cold start is run, current is increased to 1.28 times the nominal current. When „load-optimised“ was selected, the increasing factor is only 1.1 in order to not overload the power supply.   |
|  | 4-5  | Offset dehumidifying                                  | The switchover point between humidification and dehumidification is determined by parameter 4-1 Relative humidity setpoint and 4-5 Offset for dehumidifier. The hysteresis of 1% for dehumidification cannot be changed.  |

| Group            | Par. | Denomination              | Description  |
|------------------|------|---------------------------|--|
| <b>Functions</b> | 5-1  | Switch stand-by heating   | Stand-by heating is enabled or not (0= off, 1=on).   |
|                  | 5-2  | Interval stand-by heating | Parameter 5-2 determines the interval time between heating phases when stand-by heating was enabled.   |
|                  | 5-3  | On-time Stand-by heating  | Parameter 5-3 sets the heating on-time when stand-by heating was enabled.  |
|                  | 5-4  | Basic relay allocation    | <p>The basic relay features potential-free NC and NO contacts across terminals 28,29 and 29,30, respectively (contact capacity is 250 VAC/8A). The base relay provides a potentialfree two-way contact at terminals 28, 29 and 30 (rated load: 250V/8A).</p> <p>The relay is activated when a certain operating status is achieved. Parameter 5-4 allows for allocating a logical function, i.e. the relay is energized when a certain operating status occurs. Factory setting is „0“ defined as „collective fault“It is activated if certain operational conditions apply. The operational condition “collective fault” is preset.</p> <p>The following allocations are supported:</p> <p>(0) Collective fault: Relay is energized in case of any fault.</p> <p>(1) Stand-by: Relay is energized when the safety interlock was opened .It is possible to associate another operational condition with the base relay circuit, also see Section: “Summary Table of Parameters” on Page 56, “Parameter E5.”</p> <p>(2) No demand: Relay is energized when input signal creates no demand.</p> <p>(3) Humidifying: Relay is energized when humidifying is active.</p> <p>(5) Remote off: Relay is energized when safety interlock was opened under software by means of the building control system.</p> <p>(30) Filling off: Relay is energized when filling is not active.</p> <p>(31) Filling on: Relay is energized when filling.</p> |

| Group     | Par. | Denomination                       | Description   |
|-----------|------|------------------------------------|---|
| Functions | 5-4  | Basic relay allocation<br>(contd.) | (60) Blow-down off: Relay is energized when not pumping.<br>(61) Blow-down on: Relay is energized when pumping takes place.<br>(62) Partial blow-down: Relay is energized when a partial blow-down is run.<br>(63) Full blow-down: Relay is energized when a full blow-down is run.<br>(66) Max. level: Relay is energized when the max. allowable water level is overrun.<br>(67) Stand-by blow down: Relay is energized when a stand-by blow-down is run.<br>(68) Dead leg blow-down: Relay is energized when a dead leg blow-down is run.<br>(69) Start-up blow-down: relay is energized when a start-up blow-down is run.<br>(270) Collective Service: Relay is energized when a service message status („Service steam amount“, „Service main contactor K1 switching cycles“) is active. |
|           |      |                                    | Defines logical function of the optional relay K20 (in the same way as 5-4 does for the basic relay). Factory preset is „270“ (Collective service). Connection is to the ST10.1 plug on the mainboard.<br><b>Exception:</b> For the units SLH40 and SLH50 the relay_K20 is used as standard to switch the level 2 (i.e. the single-level control of 3 heaters).. The relay assignment is set to "120" at the factory and cannot be changed.   |
|           |      |                                    | The control electronic may optionally be equipped with a RS485 serial interface for running data communication with the Modbus RTU protocol. 5-6 then holds the Modbus RTU address.   |
|           |      |                                    | Defines logical function of the optional relay K21 (in the same way as 5-4 does for the basic relay). Factory preset is „270“ (Collective service). Connection is to the ST10.2 plug on the mainboard.  |
|           |      |                                    |   |
| Settings  | 6-1  | Buzzer                             | The control panel features a buzzer for prompting key strokes. Parameter 6-1 allows for muting the prompt.  |
|           | 6-2  | Time-Out                           | Unit control switches the display back to actual steam output presentation after the time set in 6-2. Factory setting is „2 minutes“.   |
|           | 6-3  | Imperial units                     | This parameter enables a switch between SI units and imperial units. Actual steam output e.g. will then be in „lb/h“ instead of „kg/h“.   |


















## 12. Trouble shooting



### 12.1 Error handling

On occurrence of a fault, steam production is stopped. The control panel display is switched to error code output. In the same instance, the general fault icon  starts flashing.










On „Steam production“, „Main contactor“, „Filling“ and „Blow-down“ faults, the respective icon is additionally blinked.











#### 12.1.1 Table of possible faults and related error codes




| Icons  | Code             | Error message  | Possible cause   | Counter measure   |
|--|------------------|--|--|---|
|  | 000              | No error   |  |   |
|     | 001              | Sensor plug (ST09)   | <ul style="list-style-type: none"> <li>• Plug not attached or loose</li> </ul>   | <ul style="list-style-type: none"> <li>• Check plug</li> </ul>  |
|    | 022<br>*)        | Input_current_min<br>The min. value of the input signal is no plausible  | <ul style="list-style-type: none"> <li>• Sensor, wiring or signal source defective</li> <li>• Input stage defective</li> </ul>         | <ul style="list-style-type: none"> <li>• Check sensor, wiring and signal source, if relevant</li> <li>• Replace mainboard</li> </ul>        |
|    | 024<br>025<br>*) | Input_resistance_OC<br>Input_resistance_SC<br>The resistance measured is not correct („infinite“ or „zero“, resp.) | <ul style="list-style-type: none"> <li>• Sensor, input wiring or signal source not correct</li> <li>• Input stage defective</li> </ul> | <ul style="list-style-type: none"> <li>• Check sensor, signal cable and signal source, if applicable</li> <li>• Replace main PCB</li> </ul> |
| *) When a PI controller is in use, errors 022-025 relate to the sensor output signals. With an external controller the controller output signal is concerned.  |                  |  |  |   |
|   <br>  <br>  <br> | 029              | System failure   | <ul style="list-style-type: none"> <li>• Main PCB is defective</li> </ul>  | <ul style="list-style-type: none"> <li>• Replace main PCB</li> </ul>  |





| Icons   | Code | Error message   | Possible cause  | Counter measure   |
|---|------|---|---|---|
|   | 030  | <b>Filling</b><br><br>Filling was not successful, i.e. the expected filling level was not achieved after a device-specific time (15 - 45 min) | <ul style="list-style-type: none"> <li>• Solenoid valve or water supply line contaminated or defective</li> <li>• Solenoid valve defective</li> <li>• Water supply not opened</li> <li>• Solenoid valve electrically not driven               <ul style="list-style-type: none"> <li>- electrical cabling not o.k.</li> <li>- Main PCB relay not energized</li> </ul> </li> <li>• Steam hose not laid with sufficient incline/decline resulting in a water bag obstructing steam flow. Steam builds up pressure in steam cylinder and pushes water towards drain</li> <li>• Blockage in steam pipe impedes the steam flow.</li> </ul> | <ul style="list-style-type: none"> <li>• Clean water supply line and/or solenoid valve; replace solenoid valve, if defective</li> <li>• Make measurement on solenoid; replace solenoid valve, if defective</li> <li>• Open water supply</li> <li>-Check electrical cable and replace, if required</li> <li>- Measure voltage on main PCB terminal 11 against N; replace PCB, if required</li> <li>• Check steam hose layout. Eliminate water bag.</li> <li>• Remove blockage in steam pipe</li> </ul> |
|   |      |   | <ul style="list-style-type: none"> <li>• L3 phase break-down</li> </ul>   | <ul style="list-style-type: none"> <li>• Reestablish L3 phase feeding</li> </ul>  |
|   |      |   | <ul style="list-style-type: none"> <li>• Main contactor does not switch L3 phase</li> </ul>   | <ul style="list-style-type: none"> <li>• Replace main contactor</li> </ul>  |



| Icons   | Code   | Error message   | Possible cause   | Counter measure   |
|---|--|---|--|---|
|     | <b>061</b><br><b>062</b><br><b>063</b><br><br><b>064</b><br><br><b>065</b><br><br><b>066</b><br><b>067</b> | <b>Blow-down fault</b> , relates to:<br><br><b>Partial blow-down</b><br><b>Full blow-down</b><br><b>Dilution</b><br>(only for electrode steam humidifiers)<br><b>Overcurrent blow-down</b><br>(only for electrode steam humidifiers)<br><b>Max level blow-down</b><br>(only for heater steam humidifiers)<br><b>Stand-by blow-down</b><br><b>Start_blow-down</b><br>(only for heater steam humidifiers)<br><br>Indicated blow-down was not successful | <ul style="list-style-type: none"> <li>• Blow-down pump not driven</li> <li>• electrical wiring not o.k.</li> <li>• Main PCB relay not energized</li> </ul><br><ul style="list-style-type: none"> <li>• Blow-down pump defective</li> <li>• Blow-down pump working but water is not drained (i.e. cylinder drain is blocked)</li> </ul><br><ul style="list-style-type: none"> <li>• Blow-down pump blocked by hardeners</li> </ul><br><ul style="list-style-type: none"> <li>• Water sensor defective (only for heater steam humidifiers)</li> </ul> | <ul style="list-style-type: none"> <li>- Check wiring and replace, if required</li> <li>- Measure voltage on main PCB terminal 10 against N; replace PCB, if required</li> </ul><br><ul style="list-style-type: none"> <li>• Replace blow-down pump</li> <li>• Clean cylinder and cylinder base carefully to ensure that no blocking will occur in the near future</li> <li>• Check blow-down pump, drainage system and steam cylinder for hardeners and clean</li> <li>• Replace water sensor</li> </ul> |
|     | <b>090</b>   | <b>Cylinder full</b><br>Sensor electrode continuously signals full cylinder for 60 mins<br>(only for electrode steam humidifiers)   | <ul style="list-style-type: none"> <li>• low or strongly fluctuating water conductivity</li> <li>• Electrodes used up</li> <li>• No electrode cable run through current transducer</li> <li>• Salt bridges in steamcylinder upper part</li> <li>• Foaming (when softened water is used)</li> </ul>   | <ul style="list-style-type: none"> <li>• Check feed water quality</li> <li>• Replace electrodes</li> <li>• Run one phase through current transducer</li> <li>• Clean</li> <li>• Increase blending rate</li> </ul>   |
|    | <b>091</b>   | <b>Current measurement</b><br>Current transducer supplies faulty measurement<br>(only for electrode steam humidifiers)  | <ul style="list-style-type: none"> <li>• Plug is not seated properly on main PCB</li> <li>• Current transducer defective</li> </ul>  | <ul style="list-style-type: none"> <li>• Check plug seating</li> <li>• Replace current transducer</li> </ul>  |
|     | <b>092</b>   | <b>Main contactor current</b><br>Current measured though the main contactor is not driven<br>(only for electrode steam humidifiers)   | <ul style="list-style-type: none"> <li>• Main contactor contact sticks</li> </ul>  | <ul style="list-style-type: none"> <li>• Check main contactor, replace it if required</li> <li>• Measure voltage across terminal 9 and N. Replace PCB, if required</li> </ul>   |

| Icons   | Code | Error message  | Possible cause   | Counter measure  |
|---|------|--|--|--|
|     | 093  | <b>Main contactor cylinder full</b><br>„Cylinder full“ is detected though main contactor is not driven<br>(only for electrode steam humidifiers) | <ul style="list-style-type: none"> <li>• Main contactor contact sticks</li> </ul>  | <ul style="list-style-type: none"> <li>• Replace main contactor</li> <li>• Measure voltage across terminal 9 and N. Replace PCB, if required</li> </ul>  |
|     | 120  | <b>Thermo switch</b><br><br>One of the thermo switches has triggered<br>(only for heater steam humidifiers)                                      | <ul style="list-style-type: none"> <li>• Thermo switch on steam cylinder cover has triggered due to lime coating on heating element</li> <li>• Capillary tube defective</li> <li>• Thermo switch on solid state relay has triggered due to blocked ventilation</li> <li>• Blockage in a connection hose (see no. 21/22 in the exploded view) leads to incorrect water level detection, which can cause the thermal switch to trip.</li> </ul>  | <ul style="list-style-type: none"> <li>• Switch off power supply. Remove lime coating. Allow cool-down of steam cylinder. Push-back unblocking pin on thermo switch with needle-nose pliers or a screwdriver</li> <li>• Replace thermo switch</li> <li>• Switch off unit. Allow cool-down of heat sink. Restart humidifier operation.</li> <li>• Replace the blocked connection hose. Switch the device on again.</li> </ul> |
|    | 121  | <b>Water sensor</b><br>Water sensor output signal not plausible  | <ul style="list-style-type: none"> <li>• Water sensor is defective</li> <li>• Connecting hoses blocked</li> </ul>  | <ul style="list-style-type: none"> <li>• Replace water sensor</li> <li>• Clean hoses</li> </ul>  |
|    | 122  | <b>Max. level</b><br>Maximum water level was achieved 5 times (only for heater steam humidifiers)  | <ul style="list-style-type: none"> <li>• Excessive air pressure in duct has impact on water in steam cylinder via steam hose. Water is pressed into drainage</li> <li>• Solenoid valve closing action imperfect. Cylinder water level rises though solenoid valve is not energized</li> <li>• Solenoid valve is permanently energized (water intake stops when unit is switched off)</li> <li>• Large amounts of residues influence or restrict cyclic blow-down. The additional water introduction caused by the optional SuperFlush rinse device may cause the max. level fault</li> </ul> | <ul style="list-style-type: none"> <li>• Reduce air pressure</li> <li>• Check steam pipe for blockage</li> <li>• Check solenoid valve</li> <li>• Relay on main PCB stuck. Measure voltage across terminal 11 and N. Replace PCB, if required</li> <li>• Clean steam cylinder, cylinder base, water sensor tubing and drainage system</li> </ul>  |

| Icons   | Code | Error message   | Possible cause  | Counter measure  |
|---|------|---|---|--|
|    | 123  | <b>Steam down time</b><br>Heater element (s) is/are driven but water level remains constant (only for heater steam humidifiers) | <ul style="list-style-type: none"> <li>• Heater element is defective</li> <li>• Phase loss (external circuit breaker has tripped or is defective)</li> <li>• No voltage supplied to heater element(s)</li> <li>• No proper main contactor switching action</li> <li>• Main contactor is not energized by PCB</li> </ul> | <ul style="list-style-type: none"> <li>• Measure heater element resistance, replace heater element, if required. Typical resistance values are:<br/> <b>SLH03</b> - 2,25kW/230V - 21,3-26,1Ω<br/> <b>SLH06</b> - 4,5kW/400V - 32,3-39,5Ω<br/> <b>SLH09</b> - 6,75kW/400V - 21,5-26,3Ω<br/> <b>SLH15</b> - 3,8kW/400V - 38,2-46,8Ω (3x)<br/> <b>SLH25</b> - 6,3kW/400V - 23,1-28,2Ω (3x)<br/> <b>SLH40</b> - 6,3kW/400V - 23,1-28,2Ω (3x) + 3,8kW/400V - 38,2-46,8Ω (3x)<br/> <b>SLH50</b> - 6,3kW/400V - 23,1-28,2Ω (6x)<br/><br/> <b>KIT H02</b> - 1.5 kW/230V/ 32-39.2 Ω<br/> <b>KIT H03</b> - 2.25 kW/230V - 21.3-26.1 Ω<br/> <b>KIT H06</b> - 4.5 kW/400V - 32.3-39.5 Ω<br/> <b>KIT H09</b> - 6.75 kW/400V - 21.5-26.3 Ω<br/> <b>KIT H15</b> - 3.8 kW/400V - 38.2-46.8 Ω (3x) </li> <li>• Check circuit breaker, find reason for tripping</li> <li>• Check wiring, measure voltage</li> <li>• Check and replace main contactor, if required</li> <li>• Verify voltage across PCB terminal 9 and N. Replace PCB, if required</li> </ul> |

| Icons   | Code | Error message   | Possible cause   | Counter measure  |
|---|------|---|--|--|
|   | 124  | <b>Main contactor coil</b><br>Voltage detected across coil though main contactor is not driven by control logic (only for heater steam humidifiers) | <ul style="list-style-type: none"> <li>• Relay K4 on main PCB is stuck</li> </ul>                      | <ul style="list-style-type: none"> <li>• Check main contactor, replace it if required</li> <li>• Measure voltage across terminal 9.1 and 9.2. Measure voltage across terminal 9 and N. Replace PCB, if required</li> </ul> |
|   | 210  | <b>R.h. sensor</b><br>Humidity sensor signal implausibility   | <ul style="list-style-type: none"> <li>• Sensor cable defective</li> <li>• Sensor defective</li> </ul> | <ul style="list-style-type: none"> <li>• Check sensor cable</li> <li>• Replace sensor</li> </ul>   |
|   | ErL  | <b>Error Link</b><br>no communication between mainboard and display   | <ul style="list-style-type: none"> <li>• Mainboard or display unit defective</li> </ul>                | <ul style="list-style-type: none"> <li>• Replace mainboard or display unit</li> </ul>  |

## 12.2 Table of functional disruptions

| Problem                        | Possible cause for faulty situation   | Counter measure  |
|--------------------------------|---|--|
| Set humidity level not reached | <ul style="list-style-type: none"> <li>• Output limitation parameter setting impedes full power output</li> <li>• Nominal unit output insufficient</li> <li>• Phase failure or defective heater element(s)</li> <li>• Thermo switch has triggered</li> <li>• Lengthy steam hose layout crossing cold and drafty rooms may lead to increased condensate formation</li> <li>• Improper steam manifold installation may cause condensate formation within air duct</li> <li>• Control signal not properly selected or software setting mismatch</li> <li>• Excessive pressure in duct system caused by e.g. water bags or partly blocked steam pipes (max. overpressure is 1200 Pa)</li> </ul> | <ul style="list-style-type: none"> <li>• Check 1-1 parameter setting</li> <li>• Check unit technical data, air-flow and secondary airflow</li> <li>• Check circuit breakers and heater element(s)</li> <li>• Switch off power supply. Push-back unblocking pin on thermo switch with needle-nose pliers or a screwdriver</li> <li>• Change unit installation location allowing for shorter steam hose. Insulate steam hose</li> <li>• Check steam manifold position within total system and installation correctness</li> <li>• Check control signal and „1-2“ parameter setting</li> <li>• Eliminate particular cause(s)</li> </ul> |
| Excessive humidity             | <ul style="list-style-type: none"> <li>• Water quality requires salt concentration of the water for full steam output (only for electrode steam humidifiers)</li> <li>• A steam output limitation setting that is too high may result in poor control performance and even condensate formation in ducts</li> <li>• Control signal not properly selected or software setting mismatch</li> </ul>  | <ul style="list-style-type: none"> <li>• Wait</li> <li>• Check „1-1“ parameter setting</li> <li>• Check control signal and „1-2“ parameter setting</li> </ul>  |
| Water collects on bottom plate | <ul style="list-style-type: none"> <li>• Cylinder improperly reassembled following maintenance: <ul style="list-style-type: none"> <li>- O-ring not replaced, defective or not in place</li> <li>- Flange (tongue and groove) damaged</li> <li>- Flange improperly composed</li> <li>- Mineral deposits in flange area</li> </ul> </li> <li>• Cylinder improperly inserted in cylinder base</li> <li>• Water cannot drain freely when pumped from cylinder</li> </ul>   | <ul style="list-style-type: none"> <li>• Clean cylinder and assemble / install properly</li> <li>• Using moistened new O-ring, insert steam cylinder properly into cylinder base</li> <li>• Make sure drain is unobstructed</li> </ul>   |

| <b>Problem</b>   | <b>Possible cause for faulty situation</b>   | <b>Counter measure</b>  |
|--|--|---|
| Water leaks from steam cylinder upper part   | <ul style="list-style-type: none"> <li>• Hose clamps on steam and/or condensate hose not tightened</li> <li>• Steam hose adapter not properly fit or O-ring not replaced</li> </ul>  | <ul style="list-style-type: none"> <li>• Tighten clamps</li> <li>• Replace O-ring (if required) and ensure proper adapter installation</li> </ul>   |
| No steam production despite the steam humidifier being switched on. Display not illuminated.             | <ul style="list-style-type: none"> <li>• Defective F1 and/or F2 fuses (1.6 A each)</li> <li>• L3 phase failure (ext. circuit breaker has tripped or is defective)</li> <li>• device load circuit breaker has tripped</li> </ul>    | <ul style="list-style-type: none"> <li>• Check micro fuses and replace, if required</li> <li>• Replace breaker and investigate possible causes</li> <li>• Switch on breaker. If problem persists, check for reason</li> </ul> |
| No steam production despite the steam generator being switched on and an illuminated display             | <ul style="list-style-type: none"> <li>• The interlock (safety) system is open</li> <li>• The humidity set value has been reached. The control receives no demand for steam production.</li> <li>• A fault has occurred</li> </ul> | <ul style="list-style-type: none"> <li>• Close interlock (safety) system</li> <li>• Check humidity set value and plausibility of actual humidity value</li> <li>• Check unit status</li> </ul>                                |
| No steam production. Voltage across electrodes exist, but no water is fed into the cylinder (only EL-DB) | <ul style="list-style-type: none"> <li>• Water supply not opened or solenoid valve electrically not driven</li> </ul>  | <ul style="list-style-type: none"> <li>• Open water supply (s. also <b>Filling</b> fault messages 030)</li> </ul>   |
| Blow-down pump works but not water is drained  | <ul style="list-style-type: none"> <li>• Steam cylinder and/or drainage system blocked</li> </ul>  | <ul style="list-style-type: none"> <li>• Clean cylinder base and/or drainage system, respectively</li> </ul>  |
| Cylinder is fully drained after partial blow-down despite switched-off pump                              | <ul style="list-style-type: none"> <li>• Vent pipe is blocked</li> </ul>   | <ul style="list-style-type: none"> <li>• Clean venting bore or replace vent pipe adapter</li> </ul>   |

| Problem   | Possible cause for faulty situation  | Counter measure  |
|---|--|--|
| <p>No steam exit from steam manifold</p> <p>Water exits periodically from drain hose without pump switched on</p> | <ul style="list-style-type: none"> <li>• Steam pipe improperly laid (water bag).</li> <li>• Excess pressure in duct system (max. over-pressure is 1200 Pa/.17 psi)</li> </ul>  | <ul style="list-style-type: none"> <li>• Rerun steam hose according to guide lines</li> <li>• Consult your expert dealer if problem persists</li> </ul>  |
| Uneven electrode wear   | <p>(only for electrode steam humidifiers)</p> <ul style="list-style-type: none"> <li>• One or more electrodes not supplied with power</li> <li>• Circuit breaker tripped</li> <li>• Main contactor contact not functional</li> <li>• Phase loading not symmetric</li> <li>• Electrode immersion depth differs. Unit not mounted plumb</li> </ul> | <ul style="list-style-type: none"> <li>• Check power supply and wiring</li> <li>• Check circuit breaker. Replace, if required</li> <li>• Check main contactor. Replace, if required</li> <li>• Ensure power supply phase balance by measurement</li> <li>• Check installation and correct positioning, if required</li> </ul>  |
| Flashover/sparks in cylinder  | <p>(only for electrode steam humidifiers)</p> <ul style="list-style-type: none"> <li>• Very high water conductivity resulting in massive electrode burn-off as indicated by brown-black deposits</li> <li>• Blow-down pump not working properly or defective</li> </ul>  | <ul style="list-style-type: none"> <li>• <b>Deactivate unit immediately to prevent material damage</b></li> </ul> <p>Perform maintenance:</p> <ul style="list-style-type: none"> <li>- replace electrodes</li> <li>- clean steam cylinder</li> <li>- check water quality and conductivity (also s. „Intended use“ section)</li> </ul> <p>If problem persists, increase blow-down frequency and/or blow-down volume</p> <p>Consult your expert dealer, if required</p> <p>Check blow-down pump functioning and replace pump, if required. See also „<b>Blow down fault</b>“ error message</p> |

## 13. Declaration of Conformity

### EU Konformitätserklärung EU Declaration of Conformity

**Hersteller / Manufacturer:** HygroMatik GmbH

**Anschrift / Address:** Lise-Meitner-Straße 3, D-24558 Henstedt-Ulzburg, Germany

**Produktbezeichnung:  
/ Product description** **StandardLine Elektrode (SLE):**  
SLE02, SLE05, SLE10, SLE15, SLE20, SLE30, SLE45, SLE65  
**MiniSteam Elektrode (MSE):**  
MSE05, MSE10

**Die bezeichneten Produkte stimmen in der von uns in Verkehr gebrachten Ausführung mit den Vorschriften folgender Europäischer Richtlinien überein:**

*The products described above in the form as delivered are in conformity with the provisions of the following European Directives:*

- 2014/30/EU** Richtlinie des Rates zur Angleichung der Rechtsvorschriften der Mitgliedstaaten über die elektromagnetische Verträglichkeit.  
*Council Directive on the approximation of the laws of the Member States relating to electromagnetic compatibility.*
- 2014/35/EU** Richtlinie des Rates zur Angleichung der Rechtsvorschriften der Mitgliedstaaten betreffend elektrische Betriebsmittel zur Verwendung innerhalb bestimmter Spannungsgrenzen.  
*Council Directive on the approximation of the laws of the Member States related to electrical equipment designed for use within certain voltage limits.*

Die Konformität mit den Richtlinien wird nachgewiesen durch die Einhaltung folgender Normen:  
*Conformity to the Directives is assured through the application of the following standards:*


| <b>Referenznummer:</b>   | <b>Ausgabedatum:</b> | <b>Referenznummer:</b>   | <b>Ausgabedatum:</b> |
|--------------------------|----------------------|--------------------------|----------------------|
| <i>Reference Number:</i> | <i>Edition:</i>      | <i>Reference Number:</i> | <i>Edition:</i>      |
| DIN EN IEC 61000-6-2     | 2019-11              | DIN EN 60335-1           | 2020-08              |
| DIN EN IEC 61000-6-3     | 2022-06              | DIN EN 60335-1 A15       | 2012/A15:2021        |
| DIN EN 62233             | 2008-11              | DIN EN 60335-2-98        | 2020-05              |
| DIN EN 62233 Ber.1       | 2009-04              |                          |                      |

Das Produkt entspricht den Anforderungen des deutschen Produktsicherheitsgesetzes ProdSG hinsichtlich der Gewährleistung von Sicherheit und Gesundheit. Produktänderungen nach Auslieferung können zum Verlust der Konformität führen.

*The requirements of the German Product Safety Law ProdSG regarding the ensurance of safety and health are met. Product modifications after delivery may result in a loss of conformity.*

Henstedt-Ulzburg, den / the 27.02.2023

HygroMatik GmbH

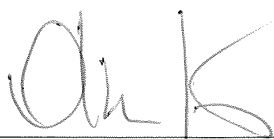

Rolf F. Oberhaus  
Geschäftsführer / General Manager



i.V. Frank Michaelsen  
Leitung Technik / Head of Engineering

Diese Erklärung bescheinigt die Übereinstimmung mit den genannten Richtlinien, ist jedoch keine Zusicherung von Eigenschaften. Die Sicherheitshinweise der mitgelieferten Produktdokumentation sind zu beachten.

*This declaration certifies the conformity to the specified directives but contains no assurance of properties. The safety documentation accompanying the product shall be considered in detail.*



## 14. Spare Parts

| *                       | SLE02 | SLE05<br>SLE10 | SLE15 | SLE20 | SLE30 | SLE45 | SLE65 | Article No. | Description  |
|-------------------------|-------|----------------|-------|-------|-------|-------|-------|-------------|--|
| <b>Steam generation</b> |       |                |       |       |       |       |       |             |  |
|                         | 1     |                |       |       |       |       |       | SP-01-00000 | Steam cylinder CY2 complete  |
| 16                      |       | 1              |       |       |       |       |       | SP-03-00000 | Steam cylinder CY08 complete   |
| 16                      |       |                | 1     |       |       |       |       | SP-04-00002 | Steam cylinder CY17 complete with 3 electrodes                               |
| 16                      |       |                |       | 1     |       |       |       | SP-04-00000 | Steam cylinder CY17 complete with 3 electrodes                               |
| 16                      |       |                |       |       | 1     |       |       | SP-04-00100 | Steam cylinder CY17 complete with 6 electrodes                               |
| 16                      |       |                |       |       |       | 1     | 1     | SP-06-00000 | Steam cylinder CY45/2 complete with 6 electrodes                             |
|                         | 1     |                |       |       |       |       |       | B-3204043   | Electrodes without hand nuts, set=2pcs                                       |
| 48                      |       | 1              |       |       |       |       |       | B-3204021   | Electrodes without hand nuts, set=3pcs                                       |
| 48                      |       |                | 1     |       |       |       |       | B-2204087   | Electrodes without hand nuts, set=3pcs                                       |
| 48                      |       |                |       | 1     |       |       |       | B-2206221   | Electrodes without hand nuts, set=3pcs                                       |
| 48                      |       |                |       |       | 1     |       |       | B-2204089   | Electrodes without hand nuts, set=6pcs                                       |
| 48                      |       |                |       |       |       | 1     | 1     | B-2204091   | Electrodes without hand nuts, set=6pcs for CY45 (until 10/2018)              |
| 48                      |       |                |       |       |       | 1     | 1     | SP-06-00010 | Electrodes without hand nuts, set=6pcs for CY45/2 (from 11/2018)             |
|                         | 1     |                |       |       |       |       |       | B-3204047   | Sensor electrode without hand nut  |
| 10                      |       | 1              |       |       |       |       |       | B-3204029   | Sensor electrode without hand nut  |
| 10                      |       |                | 1     | 1     | 1     | 1     | 1     | B-2204073   | Sensor electrode without hand nut  |
|                         | 1     |                |       |       |       |       |       | B-2207099   | Hand nuts M6 for cylinder CY2, set=2pcs                                      |
| 49                      |       | 1              |       |       |       |       |       | B-2207101   | Hand nuts M6 for cylinder CY08, set=3pcs                                     |
| 49                      |       |                | 1     | 1     |       |       |       | B-2207103   | Hand nuts M8 for cylinder CY17, set=3pcs                                     |
| 49                      |       |                |       |       | 1     |       |       | B-2207105   | Hand nuts M8 for cylinder CY17, set=6pcs                                     |
| 49                      |       |                |       |       |       | 1     | 1     | B-2207107   | Hand nuts M10 for cylinder CY45 and CY45/2, set=6pcs                         |
| 8                       | 1     | 1              | 1     | 1     | 1     | 1     | 1     | E-2204202   | Hand nut M6, grey, for sensor electrode                                      |
| 18                      | 1     | 1              |       | 1     | 1     | 1     | 1     | B-3216021   | Cylinder flange clamps, set=24pcs  |
| 37                      | 1     | 1              |       |       |       |       |       | E-3220002   | Cylinder base  |
| 37                      |       |                | 1     | 1     | 1     | 1     | 1     | E-2206090   | Cylinder base  |
|                         | 1     | 1              |       |       |       |       |       | B-2214023   | Mounting set for cylinder base   |
|                         |       |                | 1     | 1     | 1     | 1     | 1     | B-3216023   | Mounting set for cylinder base   |
|                         | 1     |                |       |       |       |       |       | E-3221000   | Adapter for Steam hose for steam cylinder CY02                               |
| 1                       |       | 1              | 1     |       |       |       |       | E-2209018   | Adapter for Steam hose for steam cylinder CY08                               |
| 1                       |       |                |       | 1     | 1     | 1     | 2     | E-2209008   | Adapter for Steam hose for steam cylinders CY45 and CY45/2                   |
|                         | 1     |                |       |       |       |       |       | E-3221004   | Clip for adapter   |
| 2                       |       | 1              | 1     | 1     | 1     | 1     | 2     | E-2209002   | Clip for adapter   |
|                         | 1     |                |       |       |       |       |       | AC-01-00000 | O-ringset (Pos. 3, 17, 31, 33, 35, 36, 38)                                   |
|                         |       | 1              |       |       |       |       |       | AC-03-00000 | O-ringset (Pos. 3, 17, 31, 33, 35, 36, 38)                                   |
|                         |       |                | 1     | 1     |       |       |       | AC-04-00000 | O-ringset (Pos. 3, 17, 31, 33, 35, 36, 38)                                   |
|                         |       |                |       |       | 1     |       |       | AC-04-00100 | O-ringset (Pos. 3, 17, 31, 33, 35, 36, 38)                                   |
|                         |       |                |       |       |       | 1     | 1     | AC-06-00000 | O-ring set (Pos. 3, 17, 31, 33, 35, 36, 38) for cylinders until 10/2018      |
| 23                      |       |                |       |       |       | 1     | 1     | AC-06-00002 | O-ring set (Pos. 3, 17, 31, 33, 35, 36, 38) for cylinder CY45/2 from 11/2018 |
| <b>Water feed</b>       |       |                |       |       |       |       |       |             |  |
| 25                      | 1     | 1              |       |       |       |       |       | WF-03-00010 | Solenoid valve, SL 1,1l/min, 220-240V, 0,2 - 10bar, with mounting            |
| 25                      |       |                | 1     | 1     | 1     |       |       | WF-04-00010 | Solenoid valve, SL 2,3l/min, 220-240V, 0,2 - 10bar, with mounting            |
| 25                      |       |                |       |       |       | 1     | 1     | WF-06-00010 | Solenoid valve, SL 3,4l/min, 220-240V, 0,2 - 10bar, with mounting            |
|                         | 1     | 1              | 1     | 1     | 1     | 1     | 1     | WF-07-00030 | Mounting kit solenoid valve incl. seals and screws                           |
|                         | 1     |                |       |       |       |       |       | WF-01-00001 | main group waterfeed   |
|                         |       | 1              |       |       |       |       |       | WF-03-00001 | main group waterfeed   |
|                         |       |                | 1     | 1     | 1     |       |       | WF-04-00001 | main group waterfeed   |
|                         |       |                |       |       |       | 1     | 1     | WF-06-00001 | main group waterfeed   |
| 20                      | 0,9   | 0,9            | 1,6   | 1,6   | 1,6   | 1,6   | 1,6   | E-2604002   | Connecting hose solenoid valve - cylinder base [m]                           |
| 23                      | 1     | 1              | 1     | 1     | 1     | 1     | 1     | E-2304080   | Bush for earthing  |
| 58                      | 1     | 1              | 1     | 1     | 1     | 1     | 1     | WF-07-00002 | Double check valve   |
| 22                      | 6     | 6              | 6     | 6     | 6     | 6     | 6     | E-8501064   | Hose clamp 12-22mm   |
| 56                      | 1     | 1              | 1     | 1     | 1     | 1     | 1     | B-2304031   | Hose for water connection, 0,6m, 3/4" cap nuts on both sides                 |

## Spare parts (2)

| *  | SLE02 | SLE05<br>SLE10 | SLE15 | SLE20 | SLE30 | SLE45 | SLE65 | Article No. | Description  |
|----|-------|----------------|-------|-------|-------|-------|-------|-------------|--|
|    |       |                |       |       |       |       |       |             | <b>Electronic standard voltage (SLExx-AA10, SLE02-MA10)</b>      |
|    | 1     |                |       |       |       |       |       | CN-07-00060 | Main contactor 20A   |
|    |       | 1              | 1     |       |       |       |       | CN-07-00061 | Main contactor 25A   |
|    |       |                |       | 1     | 1     | 2     |       | CN-07-00062 | Main contactor 32A   |
|    |       |                |       |       |       |       | 2     | CN-07-00063 | Main contactor 50A   |
|    | 1     | 1              | 1     | 1     | 1     | 1     | 1     | CN-07-00000 | Mainboard incl. plug   |
|    | 1     | 1              | 1     | 1     | 1     | 1     | 1     | CN-07-00001 | Display  |
|    | 2     | 2              | 2     | 2     | 2     | 2     | 2     | E-0510012   | Clip for display   |
|    | 1     | 1              | 1     | 1     | 1     | 1     | 1     | E-2502412   | Control switch, double pole, middle position = "0"               |
| 4  | 1     | 1              |       |       |       |       |       | WR-03-00001 | Connecting cables for electrodes and sensor electrode with plugs |
| 4  |       |                | 1     | 1     |       |       |       | WR-04-00001 | Connecting cables for electrodes and sensor electrode with plugs |
| 4  |       |                |       |       | 1     |       |       | WR-04-00101 | Connecting cables for electrodes and sensor electrode with plugs |
| 4  |       |                |       |       |       | 1     |       | WR-06-00001 | Connecting cables for electrodes and sensor electrode with plugs |
|    |       |                |       |       |       |       | 1     | WR-06-00101 | Connecting cables for electrodes and sensor electrode with plugs |
|    |       |                |       |       |       |       |       |             | <b>Accessories</b>   |
| 70 | x     | x              | x     |       |       |       |       | SP-07-26000 | Steam hose DN25, per m   |
| 70 |       |                |       | x     | x     | x     | x     | SP-07-26001 | Steam hose DN40, per m   |
| 57 | x     | x              | x     | x     | x     | x     | x     | E-2420423   | Drain hose 1 1/4", per m   |
|    |       | x              | x     | x     | x     | x     | x     | E-2604002   | Condensate hose DN12, per m                                      |
|    | x     | x              | x     |       |       |       |       | E-2404004   | Steam hose clamp DN25  |
|    |       |                |       | x     | x     | x     | x     | E-2604016   | Steam hose clamp DN40  |
|    | x     | x              | x     | x     | x     | x     | x     | E-2404010   | Clamp for drain hose 1 1/4"                                      |
|    |       | x              | x     | x     | x     | x     | x     | E-8501064   | Condensate hose clamp  |
|    | x     | x              | x     |       |       |       |       | E-2604042   | Connectors for steam distribution T-piece DN25, stainless steel  |
|    |       |                |       | x     | x     | x     | x     | E-2604023   | Connectors for steam distribution T-piece DN40, stainless steel  |
|    |       | x              | x     | x     | x     | x     | x     | E-2604021   | Connectors for condensate T-piece DN12                           |

\* relates to pos. no. in exploded view

For ordering spare parts, a template can be found on the [www.hygromatik.com](http://www.hygromatik.com) website under the „Contact“ tab. Your spare parts order may as well be directed per e-mail to the HygroMatik main office using the address [hy@hygromatik.de](mailto:hy@hygromatik.de).

Please make sure to specify your unit model and serial number.

---

This page intentionally left blank

## 15. Technical specifications

|   | Technical specifications StandardLine electrodes                                    |  |                           |                           |                           |                           |                           |                           |
|---|---|--|---------------------------|---------------------------|---------------------------|---------------------------|---------------------------|---------------------------|
| Unit type                               | SLE02   | SLE05                                    | SLE10                     | SLE15                     | SLE20                     | SLE30                     | SLE45                     | SLE65                     |
| Steam output [kg/h]                     | 1,9 - <b>2,0</b> - 2,1  | 4,7 - <b>5,0</b> - 5,2                   | 9,5 - <b>10,0</b> - 10,4  | 14,2 - <b>15,0</b> - 15,5 | 19,0 - <b>20,0</b> - 20,8 | 28,5 - <b>30,0</b> - 31,1 | 42,7 - <b>45,0</b> - 46,7 | 61,8 - <b>65,0</b> - 67,5 |
| Electrical connection <sup>(1)</sup>    | 220 - <b>230</b> - 240V<br>/1Ph /N /50-60Hz   | 380 - <b>400</b> - 415V /3Ph /N /50-60Hz |                           |                           |                           |                           |                           |                           |
| Rated power [kW]                        | 1,4 - <b>1,5</b> - 1,6  | 3,6 - <b>3,7</b> - 3,9                   | 7,1 - <b>7,5</b> - 7,8    | 10,7 - <b>11,2</b> - 11,6 | 14,3 - <b>15</b> - 15,6   | 21,4 - <b>22,5</b> - 23,4 | 32,1 - <b>33,7</b> - 35   | 46,3 - <b>48,8</b> - 50,6 |
| Nominal current [A]                     | 6,5 - <b>6,5</b> - 6,5  | 5,4 - <b>5,4</b> - 5,4                   | 10,8 - <b>10,8</b> - 10,8 | 16,2 - <b>16,2</b> - 16,2 | 21,7 - <b>21,7</b> - 21,7 | 32,5 - <b>32,5</b> - 32,5 | 48,7 - <b>48,7</b> - 48,7 | 70,4 - <b>70,4</b> - 70,4 |
| Fuse [A] <sup>(2)</sup>                 | 1 x 10  | 3 x 10                                   | 3 x 16                    | 3 x 20                    | 3 x 32                    | 3 x 40                    | 3 x 63                    | 3 x 80                    |
| Terminals max. [mm²]                    | 6   | 4  |                           | 6                         |                           | 10                        | 25                        |                           |
| Number of steam cylinder                | 1   |  |                           |                           |                           |                           |                           |                           |
| Control                                 | StandardLine mainboard with capacitive touch display                                |  |                           |                           |                           |                           |                           |                           |
| Separate control voltage <sup>(3)</sup> | 220 - 240V 1,6A   |  |                           |                           |                           |                           |                           |                           |
| Steam hose connection [mm]              | 1 x 25  | 1 x 25                                   |                           |                           | 1 x 40                    |                           | 2 x 40                    |                           |
| Water consumption <sup>(7)</sup> [l/h]  | 2,52  | 6,24                                     | 12,48                     | 18,6                      | 24,96                     | 37,32                     | 56,04                     | 81                        |
| Water flow rate <sup>(8)</sup> [l/min]  | 1,3 / 4,1   | 1,3 / 10,9                               |                           | 2,8 / 12,4                |                           | 4,1 / 13,7                |                           |                           |
| Max. filling capacity [l]               | 3,0   | 4,8                                      |                           | 13,2                      |                           | 35,7                      |                           |                           |
| Empty weight [kg]                       | 9,0   | 12                                       |                           | 20,0                      |                           | 39,0                      |                           | 41,0                      |
| Operation weight [kg]                   | 12,5  | 17,3                                     |                           | 33,7                      |                           | 75,2                      |                           | 77,2                      |
| Width <sup>(9)</sup> [mm]               | 350   |  |                           | 425                       |                           | 590                       |                           |                           |
| Height <sup>(9)</sup> [mm]              | 375   | 535                                      |                           | 695                       |                           | 790                       |                           |                           |
| Depth <sup>(9)</sup> [mm]               | 245   |  |                           | 320                       |                           | 415                       |                           |                           |
| Water connection                        | tap water of varying qualities<br>1 to 10bar, 1 to 10 bar, for 3/4" external thread |  |                           |                           |                           |                           |                           |                           |
| Drain water connection                  | Connection Ø 1 1/4"   |  |                           |                           |                           |                           |                           |                           |

<sup>(1)</sup> Other voltages upon request.

<sup>(2)</sup> 13/28% above nominal power consumption after full blowdown. Observe actuation characteristics of automatic circuit-breakers.  
If necessary, select the next highest circuit-breaker level.

<sup>(3)</sup> Internal control voltage upon request.


<sup>(6)</sup> Incl. Y-piece DN40.

<sup>(7)</sup> Maximum water consumption at 100% demand plus blowdown losses. The water consumption depends on the water quality and installed options.

<sup>(8)</sup> Flow rate of the feed water during refilling or pumping out. Unit without options / maximum rate with options.

<sup>(9)</sup> Outer dimensions of width and depth. Hight incl.drain connection.


## 16. Exploded view

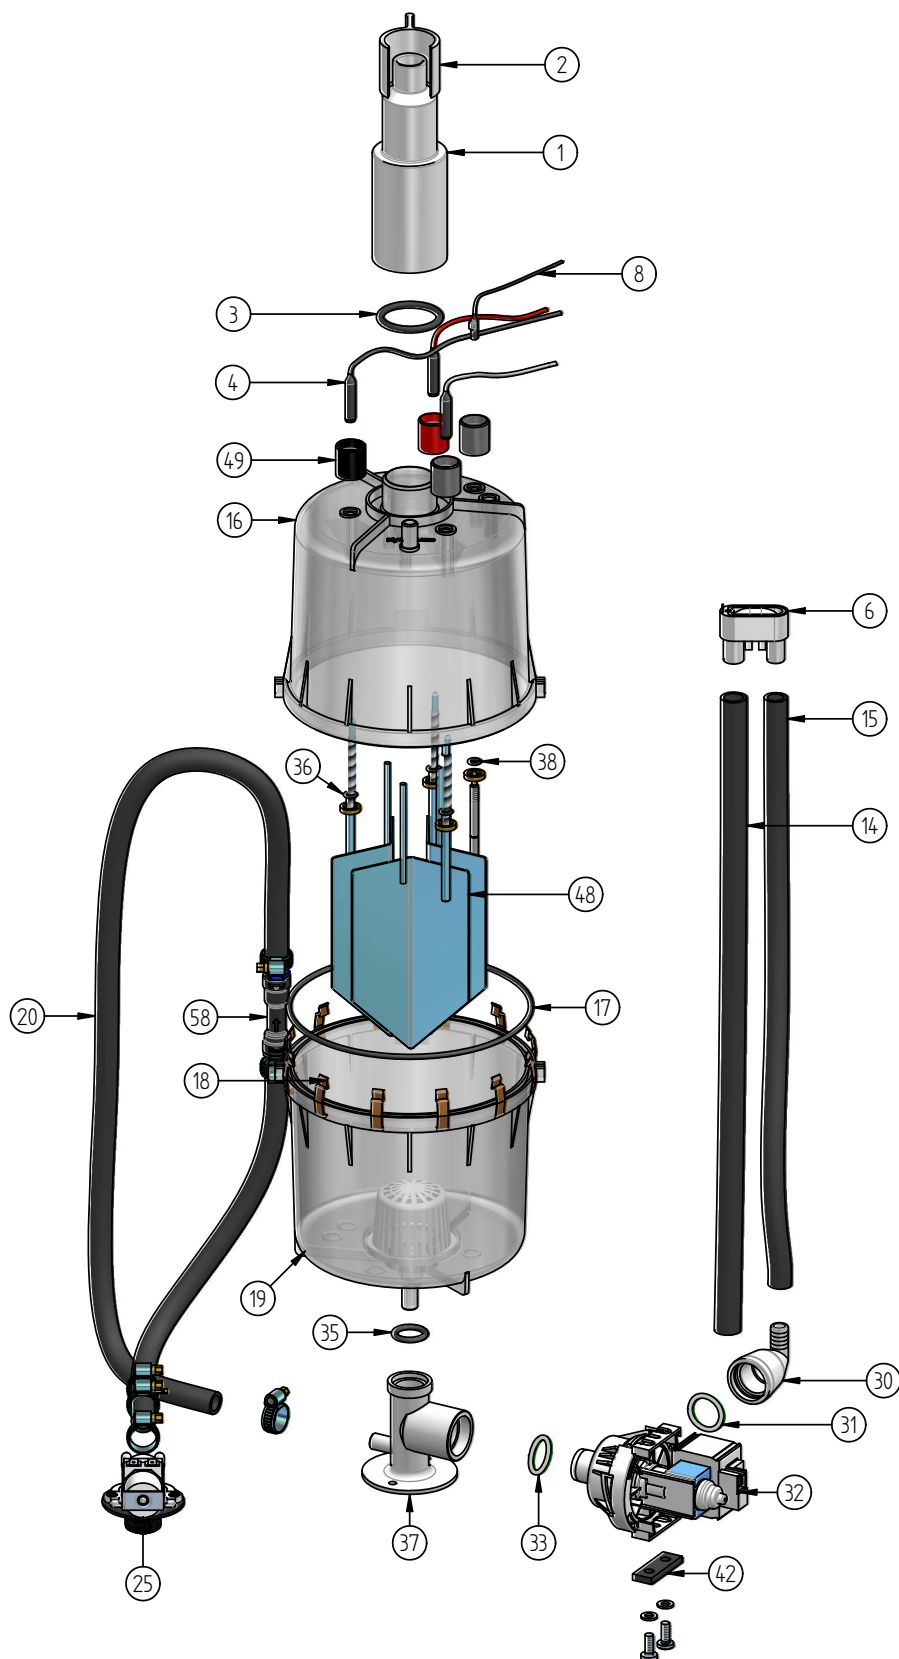

The number of steam outlets and the size of their connections can be found in the technical data.

---

## 17. View of housing

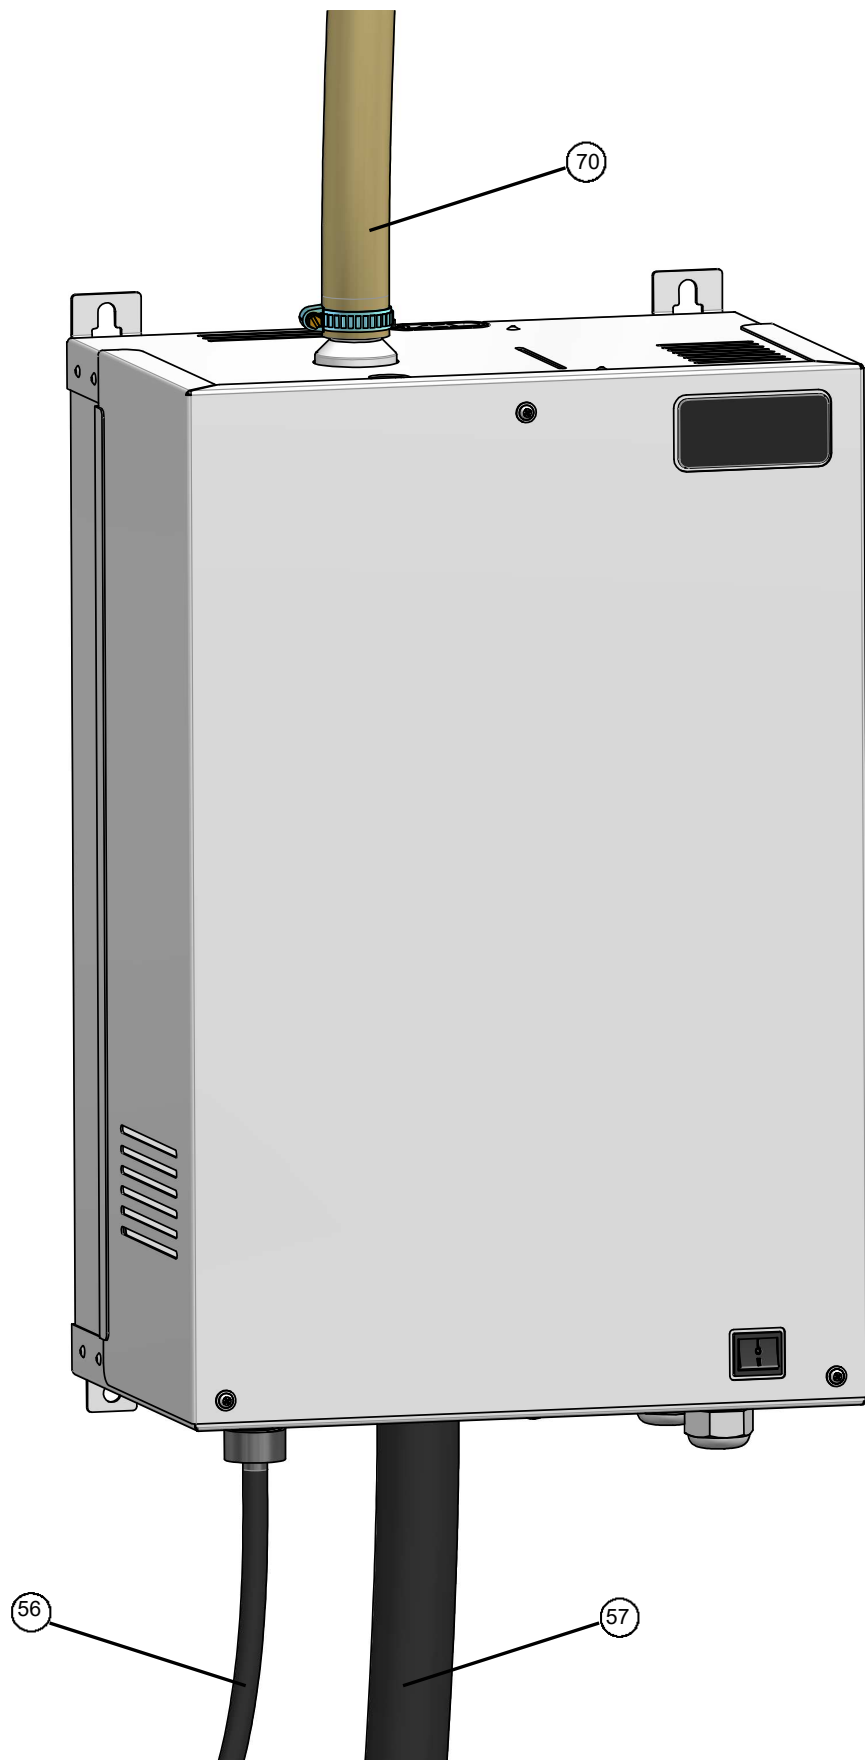

This figure shows an example of one of the smaller unit sizes of the StandardLine series.



Lise-Meitner-Str.3 • D-24558 Henstedt-Ulzburg  
Phone +49(0)4193/ 895-0 • Fax -33  
eMail [hy@hygromatik.de](mailto:hy@hygromatik.de) • [www.hygromatik.com](http://www.hygromatik.com)  
member of **CAREL Group**

